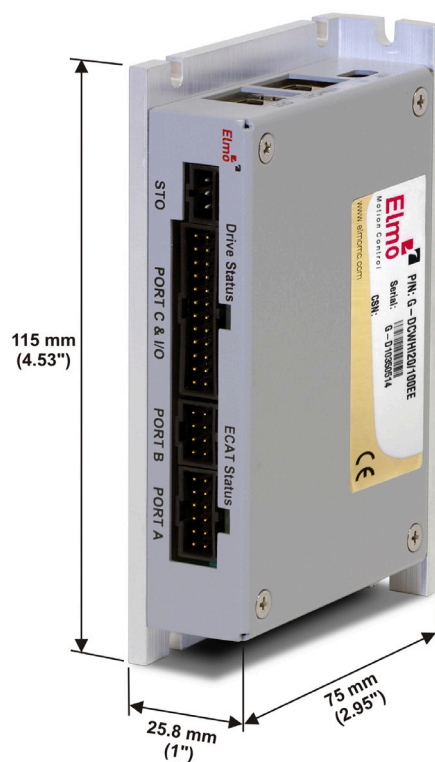


Gold DC Whistle Digital Servo Drive Installation Guide EtherCAT and CAN



Notice

This guide is delivered subject to the following conditions and restrictions:

- This guide contains proprietary information belonging to Elmo Motion Control Ltd. Such information is supplied solely for the purpose of assisting users of the Gold DC Whistle servo drive in its installation.
- The text and graphics included in this manual are for the purpose of illustration and reference only. The specifications on which they are based are subject to change without notice.
- Information in this document is subject to change without notice.

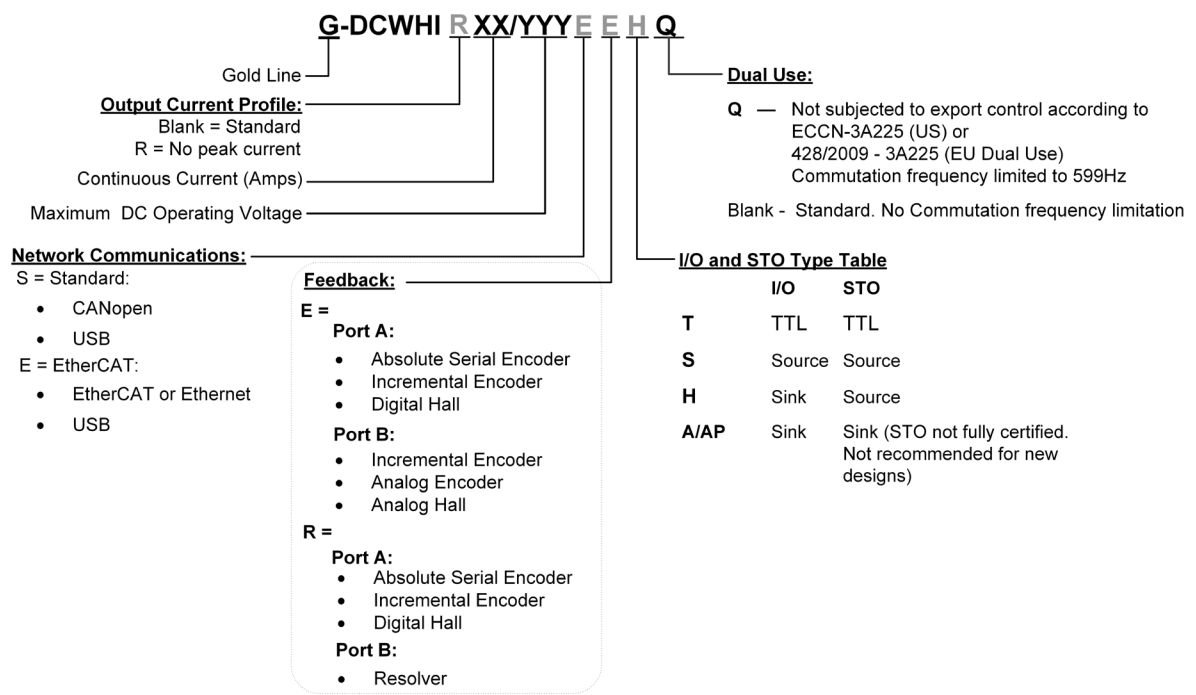
Document no. MAN-G-DCWHIIG-EC (Ver. 1.710)

Copyright © 2023

Elmo Motion Control Ltd.

All rights reserved.

Catalog Number



Cable Kit

Catalog number: CBL-GDCWHIKIT02 (can be ordered separately).

For further details, see the documentation for this cable kit ([MAN-G-DCWHI-CBLKIT.pdf](#)).

Revision History

Version	Date
Ver. 1.700	Jun 2014
Ver. 1.701	Jan 2015
Ver. 1.702	Jul 2015
Ver. 1.703	Oct 2015
Ver. 1.704	May 2016
Ver.1.705	Aug 2017
Ver. 1.706	Nov 2020
Ver. 1.707	Sept 2021
Ver. 1.708	Jan 2022
Ver. 1.709	Mar 2022
Ver. 1.710	Jan 2023



Chapter 1:	This Installation Guide	6
Chapter 2:	Safety Information	6
2.1.	Warnings	7
2.2.	Cautions.....	7
2.3.	CE Marking Conformance.....	7
2.4.	Warranty Information	7
Chapter 3:	Product Description.....	8
3.1.1.	Accessories	8
Chapter 4:	Technical Information.....	9
4.1.	Physical Specifications.....	9
4.2.	Technical Data	9
4.3.	Control Supply	10
	Product Features	11
4.4.	Environmental Conditions	12
Chapter 5:	Standards and Certifications	13
5.1.	Functional Safety	13
5.2.	Electrical Safety	13
5.3.	Electromagnetic Compatibility.....	13
5.4.	Environmental	14
5.5.	Other Compliant Standards.....	14
5.6.	CE Declaration	14
5.7.	Dual Use	14
Chapter 6:	Installation.....	15
6.1.	Unpacking the Drive Components	15
6.2.	Connector Types.....	16
6.3.	Mounting the Gold DC Whistle	19
6.4.	The Gold DC Whistle Connection Diagram.....	20
Chapter 7:	Wiring.....	22
7.1.	Basic Recommendations	23
7.1.1.	General	23
7.1.2.	Feedback Cable Port A and Port B Connector	24
7.1.3.	Feedback Cable Port C Connector	25
7.1.4.	IO Cable Connector.....	25
7.1.5.	STO (Port C) Cable Connector.....	25
7.2.	Motor Power Connector Pinouts (J14).....	26
7.3.	Main and Control Power	27

7.3.1.	Description	27
7.3.2.	Main Power (J13).....	28
7.3.3.	Control Power Supply (J12)	29
7.3.4.	Connectivity.....	30
7.3.4.1.	Power Rating 200 V	30
7.3.4.2.	Power Rating 100 V	31
7.4.	Drive Status Indicator	33
7.5.	STO (Safe Torque Off) (J11)	34
7.5.1.	Source Mode – PLC Voltage Level	35
7.5.2.	TTL Mode – TTL Voltage Level	35
7.5.3.	Sink Mode – PLC Voltage Level.....	35
7.6.	Port A (J1)	36
7.6.1.	Incremental Encoder	37
7.6.2.	Halls Sensor	37
7.6.3.	Absolute Serial Encoder.....	38
7.6.3.1.	Hiperface	39
7.7.	Port B (J3)	40
7.7.1.	Incremental Encoder	41
7.7.2.	Interpolated Analog Encoder	42
7.7.3.	Resolver	42
7.8.	Port C, Digital I/Os, and Analog Inputs (J2)	43
7.8.1.	Port C – Emulated Encoder Output	45
7.8.2.	Analog Input	45
7.8.3.	Digital Input and Output TTL Mode.....	46
7.8.4.	Digital Input and Output PLC Source Mode	48
7.8.5.	Digital Input and Output Sink Mode.....	50
7.9.	USB 2.0 (J9).....	52
7.10.	EtherCAT Communication Version	53
7.10.1.	EtherCAT IN/Ethernet Pin Assignments (J7).....	53
7.10.2.	EtherCAT OUT Pin Assignments (J8)	54
7.10.3.	EtherCAT Wiring	54
7.10.4.	EtherCAT Status Indicator	55
7.11.	CAN Communication Version	56
7.11.1.	CAN Wiring	57
7.12.	Powering Up	58
7.13.	Initializing the System	58
Chapter 8:	Dimensions	59



Chapter 1: This Installation Guide

This installation Guide details the technical data, pinouts, wiring and power connectivity of the Gold DC Whistle. For a comprehensive detailed description of the functions refer to the MAN-G-Panel Mounted Drives Hardware manual which describes Panel Mounted products.

Chapter 2: Safety Information

In order to achieve the optimum, safe operation of the Gold DC Whistle, it is imperative that you implement the safety procedures included in this installation guide. This information is provided to protect you and to keep your work area safe when operating the Gold DC Whistle and accompanying equipment.

Please read this chapter carefully before you begin the installation process.

Before you start, ensure that all system components are connected to earth ground. Electrical safety is provided through a low-resistance earth connection.

Only qualified personnel may install, adjust, maintain and repair the servo drive. A qualified person has the knowledge and authorization to perform tasks such as transporting, assembling, installing, commissioning and operating motors.

The Gold DC Whistle contains electrostatic-sensitive components that can be damaged if handled incorrectly. To prevent any electrostatic damage, avoid contact with highly insulating materials, such as plastic film and synthetic fabrics. Place the product on a conductive surface and ground yourself in order to discharge any possible static electricity build-up.

To avoid any potential hazards that may cause severe personal injury or damage to the product during operation, keep all covers and cabinet doors shut.

The following safety symbols are used in this and all Elmo Motion Control manuals:



Warning:

This information is needed to avoid a safety hazard, which might cause bodily injury or death as a result of incorrect operation.



Caution:

This information is necessary to prevent bodily injury, damage to the product or to other equipment.



Important:

Identifies information that is critical for successful application and understanding of the product.



2.1. Warnings

- To avoid electric arcing and hazards to personnel and electrical contacts, never connect/disconnect the servo drive while the power source is on.
- Power cables can carry a high voltage, even when the motor is not in motion. Disconnect the Gold DC Whistle from all voltage sources before servicing.
- The high voltage products within the Gold Line range contain grounding conduits for electric current protection. Any disruption to these conduits may cause the instrument to become hot (live) and dangerous.
- After shutting off the power and removing the power source from your equipment, wait at least 1 minute before touching or disconnecting parts of the equipment that are normally loaded with electrical charges (such as capacitors or contacts). Measuring the electrical contact points with a meter, before touching the equipment, is recommended.



2.2. Cautions

- The maximum DC power supply connected to the instrument must comply with the parameters outlined in this guide.
- When connecting the Gold DC Whistle to an approved isolated control power supply, connect it through a line that is separated from hazardous live voltages using reinforced or double insulation in accordance with approved safety standards.
- Before switching on the Gold DC Whistle, verify that all safety precautions have been observed and that the installation procedures in this manual have been followed.
- Make sure that the Safe Torque Off is operational

2.3. CE Marking Conformance

The Gold DC Whistle is intended for incorporation in a machine or end product. The actual end product must comply with all safety aspects of the relevant requirements of the European Safety of Machinery Directive 2006/42/EC as amended, and with those of the most recent versions of standards EN 60204-1 and EN ISO 12100 at the least, and in accordance with 2006/95/EC.

Concerning electrical equipment designed for use within certain voltage limits, the Gold DC Whistle meets the provisions outlined in 2006/95/EC. The party responsible for ensuring that the equipment meets the limits required by EMC regulations is the manufacturer of the end product.

2.4. Warranty Information

The products covered in this manual are warranted to be free of defects in material and workmanship and conform to the specifications stated either within this document or in the product catalog description. All Elmo drives are warranted for a period of 12 months from the date of shipment. No other warranties, expressed or implied — and including a warranty of merchantability and fitness for a particular purpose — extend beyond this warranty.



Chapter 3: Product Description

The Gold DC Whistle is an advanced high power density servo drive which delivers up to **1.6 kW of continuous power** or **3.2 kW of peak power** in a 222.5 cc (13.58 in³) package (115 x 75 x 25.8 mm or 4.5" x 3.0" x 1").

This advanced, high power density servo drive provides top performance, advanced networking and built-in safety, as well as a fully featured motion controller and local intelligence. The Gold DC Whistle is powered by a single 12 V – 195 V isolated DC power source (not included) and a “smart” control-supply algorithm enables the drive to operate up to 95V with only one power supply with no need for a control power supply for the logic.

The Gold DC Whistle can operate as a stand-alone device or as part of a multi-axis system in a distributed configuration on a real-time network.

The Gold DC Whistle drive is easily set up and tuned using Elmo Application Studio (EAS) software tools. As part of the Gold product line, it is fully programmable with the Elmo motion control language. For more about software tools, refer to the Elmo Application Studio Software Manual.

The Gold DC Whistle is available in a variety of options. There are multiple power rating options, two different communications options, a variety of feedback selections and I/O configuration possibilities.

3.1.1. Accessories

Cable Kit, catalog number: CBL-GDCWHIKIT02 (can be ordered separately)

For further details, see the documentation for this cable kit ([MAN-G-DCWHI-CBLKIT.pdf](#)).



Chapter 4: Technical Information

4.1. Physical Specifications

Feature	Units	All Types
Weight	g (oz)	267 g (9.42 oz)
Dimensions	mm (in)	115 x 75 x 25.8 mm (4.5" x 3.0" x 1")
Mounting method		Wall Mount / Bookshelf

4.2. Technical Data

Feature	Units	1/100	2.5/100	5/100	10/100	15/100	20/100
Minimum supply voltage	VDC	12					
Nominal supply voltage	VDC	85					
Maximum supply voltage	VDC	95					
Maximum continuous power output	W	80	200	400	800	1200	1600
Efficiency at rated power (at nominal conditions)	%	> 99					
Maximum output voltage		> 95% of DC bus voltage at f = 22 kHz					
Control power supply	VDC	12 – 95 VDC (up to 6 VA inc. 5 V/2 x 200 mA for encoder)					
Amplitude sinusoidal/DC continuous current	A	1.0	2.5	5	10	15	20
Sinusoidal continuous RMS current limit (Ic)	A	0.7	1.8	3.5	7	10.6	14.1
Peak current limit	A	2 x Ic					

Table 1: Power Ratings

Note on current ratings: The current ratings of the Gold DC Whistle are given in units of DC amperes (ratings that are used for trapezoidal commutation or DC motors). The RMS (sinusoidal commutation) value is the DC value divided by 1.41.



Elmo now offers a 200 VDC maximum output rating selection of Gold DC Whistle, according to the following technical data:

Feature	Units	3/200	6/200	9/200
Minimum supply voltage	VDC	12		
Nominal supply voltage	VDC	170		
Maximum supply voltage	VDC	195		
Maximum continuous power output	W	480	960	1450
Efficiency at rated power (at nominal conditions)	%	> 99		
Maximum output voltage		> 95% of DC bus voltage at f = 22 kHz		
Control power supply	VDC	12 to 95 VDC (up to 6 VA inc. 5 V/2 x 200 mA for encoder)		
Amplitude sinusoidal/DC continuous current	A	3	6	9
Sinusoidal continuous RMS current limit (Ic)	A	2.1	4.2	6.3
Peak current limit	A	2 x Ic		

4.3. Control Supply

Feature		Unit	Details
Control supply input voltage		V	Isolated DC source: 12 to 95
24V Control supply input power consumption	Without Encoder	W	≤ 4
	With Encoder up to 400mA@5V	W	≤ 6



Product Features

Main Feature	Details	Presence and No.
STO	TTL, <i>or</i>	√
	PLC Source, <i>or</i>	√
	PLC Sink (is not fully certified, and not recommended for new designs)	√
Digital Input Option	TTL, <i>or</i>	6
	PLC Source, <i>or</i>	6
	PLC Sink	6
Digital Output Option	TTL, <i>or</i>	4
	PLC Source, <i>or</i>	4
	PLC Sink	4
Analog Input	Differential ±10V	1
Feedback	Standard Port A, B, & C	√
Communication Option	USB	√
	EtherCAT option	√
	CAN option	√



4.4. Environmental Conditions

You can guarantee the safe operation of the Gold DC Whistle by ensuring that it is installed in an appropriate environment. The following table describes the certified environmental conditions for STO of the Gold series servo drives.

Feature	Details
Operating ambient temperature	0 °C to +40 °C (32 °F to +104 °F)
Storage temperature	-40 °C to +85 °C (-40 °F to +185 °F)
Maximum non-condensing humidity according to IEC60068-2-78	95%
Maximum Operating Altitude	2,000 m (6562 feet) It should be noted that servo drives capable of higher operating altitudes are available on request.
Mechanical Shock according to IEC60068-2-27	15g / 11ms Half Sine
Vibration according to IEC60068-2-6	5 Hz ≤ f ≤ 10 Hz: ±10mm 10 Hz ≤ f ≤ 57 Hz: 4G 57 Hz ≤ f ≤ 500 Hz:5G



Chapter 5: Standards and Certifications

5.1. Functional Safety

Standard	Item
IEC 61800-5-2:2017	Adjustable speed electrical power drive systems – Safety requirements – Functional
EN ISO 13849-1:2015	Safety of machinery — Safety-related parts of control systems.
EN 61508-1:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems
EN 61508-2:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems
EN 61508-3:2010	Functional safety of electrical/electronic/programmable electronic safety-related systems

5.2. Electrical Safety

Specification	Details
IEC/EN 61800-5-1:2007	Adjustable speed electrical power drive systems Part 5-1: Safety requirements – Electrical, thermal and energy
Recognized UL 61800-5-1	Adjustable speed electrical power drive systems: Safety requirements – Electrical, thermal and energy
CSA C22.2 NO. 274-17	Adjustable speed drives

5.3. Electromagnetic Compatibility

Specification	Details
EN 61800-3:2004/A1:2011	Adjustable speed electrical power drive systems Part 3: EMC requirements and specific test methods
EN 61800-5-2: 2017 Annex E	Adjustable speed electrical power drive systems Part 5-2: Safety requirements – Functional



5.4. Environmental

Specification	Details
IEC60068-2-78	Damp heat, steady state
IEC60068-2-6	Vibration (sinusoidal)
IEC60068-2-2	Dry heat
IEC60068-2-27	Shock

5.5. Other Compliant Standards

For other compliant standards refer to the

[MAN-G-Board Level Modules Hardware Manual section 17.7](#) or refer to the Elmo website:

<https://www.elmomc.com/capabilities/standards-compliance/gold-family/>

5.6. CE Declaration

Refer to the complete EC Declaration of Conformity available on the internet at:

https://www.elmomc.com/wp-content/uploads/dlm_uploads/2018/05/Gold-Line-CE-Declaration-of-Conformity.pdf.

5.7. Dual Use

No export license is required for the Gold Line products signified with the suffix Q in the Part Number.

The operating frequency of the Gold Line products is “factory limited” to ≤ 599 Hz, and therefore complies with the EU Dual Use Regulation 428/2009, 3A225, and the US Dual Use regulation EAR ECCN# 3A225.

This statement applies to all identical specimens and will become invalid if a change is made in the firmware.



Chapter 6: Installation

The Gold DC Whistle must be installed in a suitable environment and properly connected to its voltage supplies and the motor.

6.1. Unpacking the Drive Components

Before you begin working with the Gold DC Whistle, verify that you have all of its components, as follows:

- The Gold DC Whistle servo drive
- The Elmo Application Studio software and software manual

The Gold DC Whistle is shipped in a cardboard box with Styrofoam protection.

To unpack the Gold DC Whistle:

1. Carefully remove the servo drive from the box and the Styrofoam.
2. Check the drive to ensure that there is no visible damage to the instrument. If any damage has occurred, report it immediately to the carrier that delivered your drive.
3. To ensure that the Gold DC Whistle you have unpacked is the appropriate type for your requirements, locate the part number sticker on the side of the Gold DC Whistle. It looks like this:



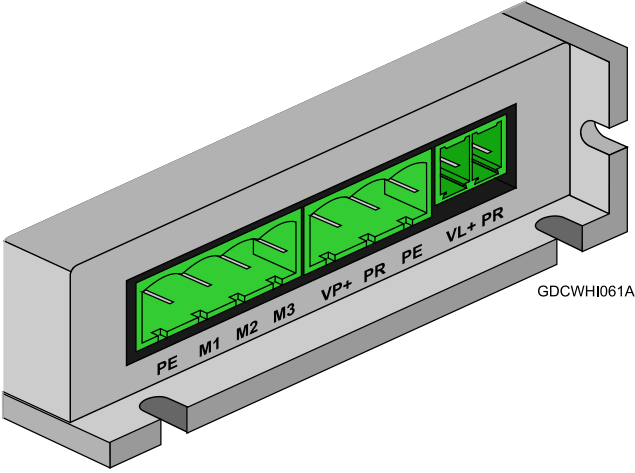
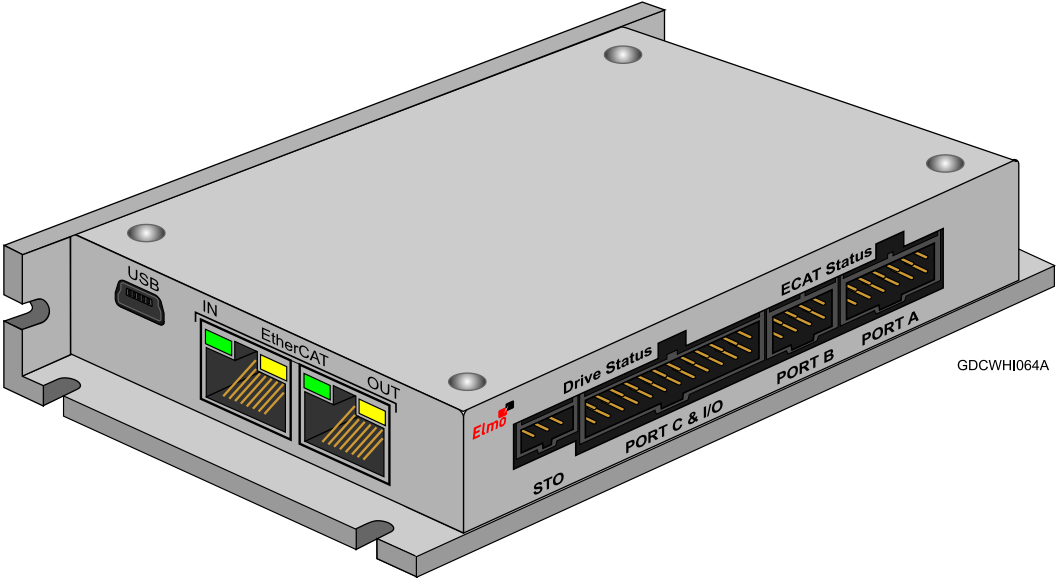
4. Verify that the Gold DC Whistle type is the one that you ordered, and ensure that the voltage meets your specific requirements.

The part number at the top provides the type designation. Refer to the appropriate part number in the section Catalog Number at the beginning of the installation guide.





6.2. Connector Types

The Gold DC Whistle has ten connectors.

No. Pins	Type	Function
Bottom Connectors		
		
4	Phoenix 5 mm Pitch 'HC'	Motor phases
3	Phoenix 5 mm Pitch 'HC'	Main Power
2	Phoenix 3.81 mm Pitch 'HC'	Control supply input
Front Connectors		
		
Front Connectors - EtherCAT		

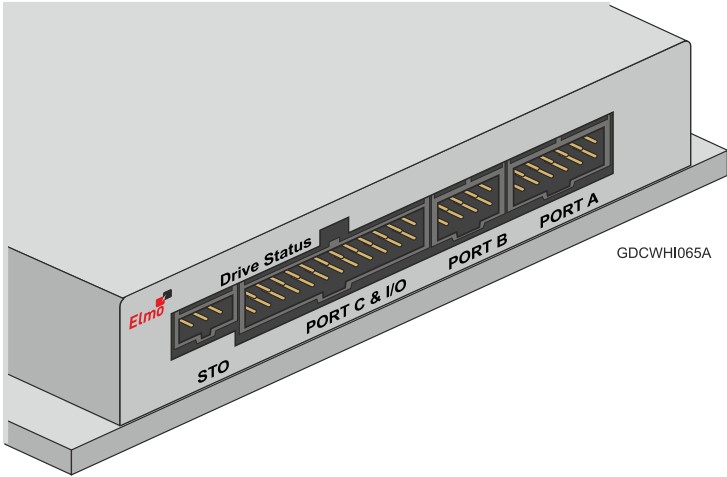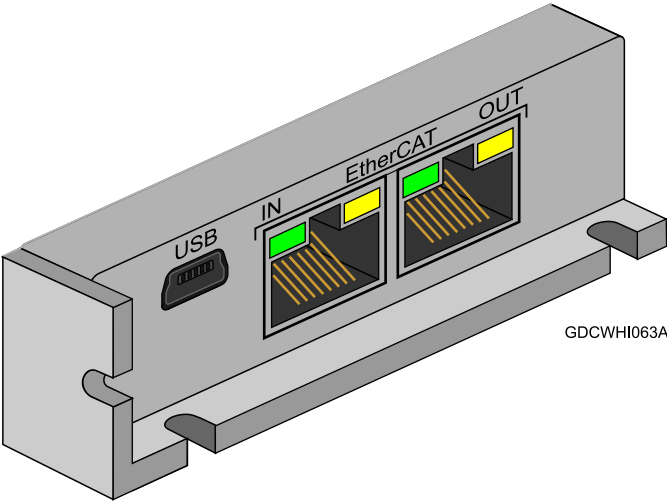

No. Pins	Type	Function
<div><p>Diagram of the front connectors of the Gold DC Whistle. It shows a 3-pin STO connector, a 24-pin PORT C & I/O connector, an 8-pin PORT B connector, and a 12-pin PORT A connector. The unit is labeled GDCWHI065A.</p></div> <p>Front Connectors - CAN</p>		
3	2.54 mm Pitch Molex	STO
24	2.54 mm Pitch Molex	Feedback port C and I/O
8	2.54 mm Pitch Molex	Feedback port B
12	2.54 mm Pitch Molex	Feedback port A
<p>Top Connectors</p> <div><p>Diagram of the top connectors of the Gold DC Whistle. It shows a USB connector, an EtherCAT IN connector, and an EtherCAT OUT connector. The unit is labeled GDCWHI063A.</p></div> <p>Top Connectors - EtherCAT</p>		



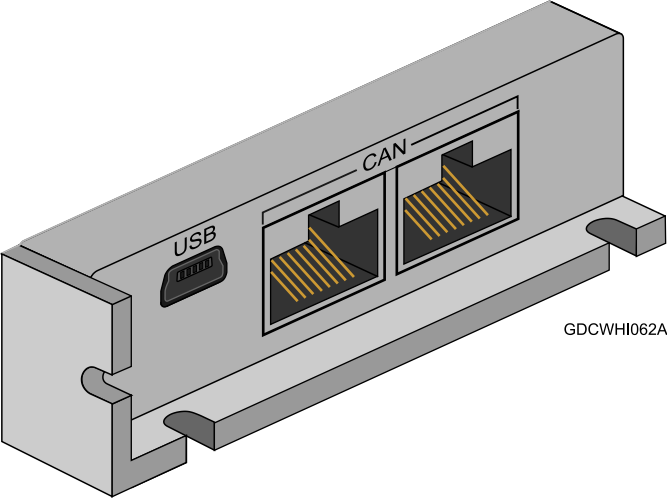
No. Pins	Type	Function
 <p style="text-align: center;">Top Connectors - CAN</p>		
5	USB Device Mini-B	USB
EtherCAT Version		
8	RJ-45	EtherCAT in
8	RJ-45	EtherCAT out
CAN Version		
8	RJ-45	CAN
8	RJ-45	CAN

Table 2: Connector Types

The pinouts in Chapter 7: Wiring describe the function of each pin in the Gold DC Whistle connectors that are listed in Table 2.



6.3. Mounting the Gold DC Whistle

The Gold DC Whistle has been designed for two standard mounting options:

- Wall Mount along the back (can also be mounted horizontally on a metal surface)
- Book Shelf along the side

M4 round head screws, one through each opening in the heat sink, are used to mount the Gold DC Whistle (see the diagram below).

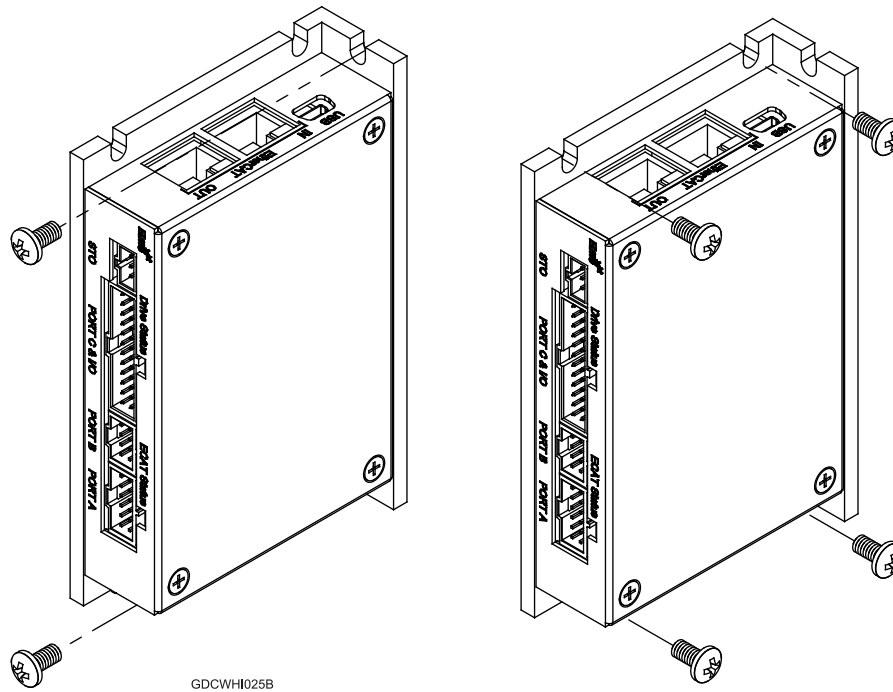


Figure 1: Mounting the Gold DC Whistle



6.4. The Gold DC Whistle Connection Diagram


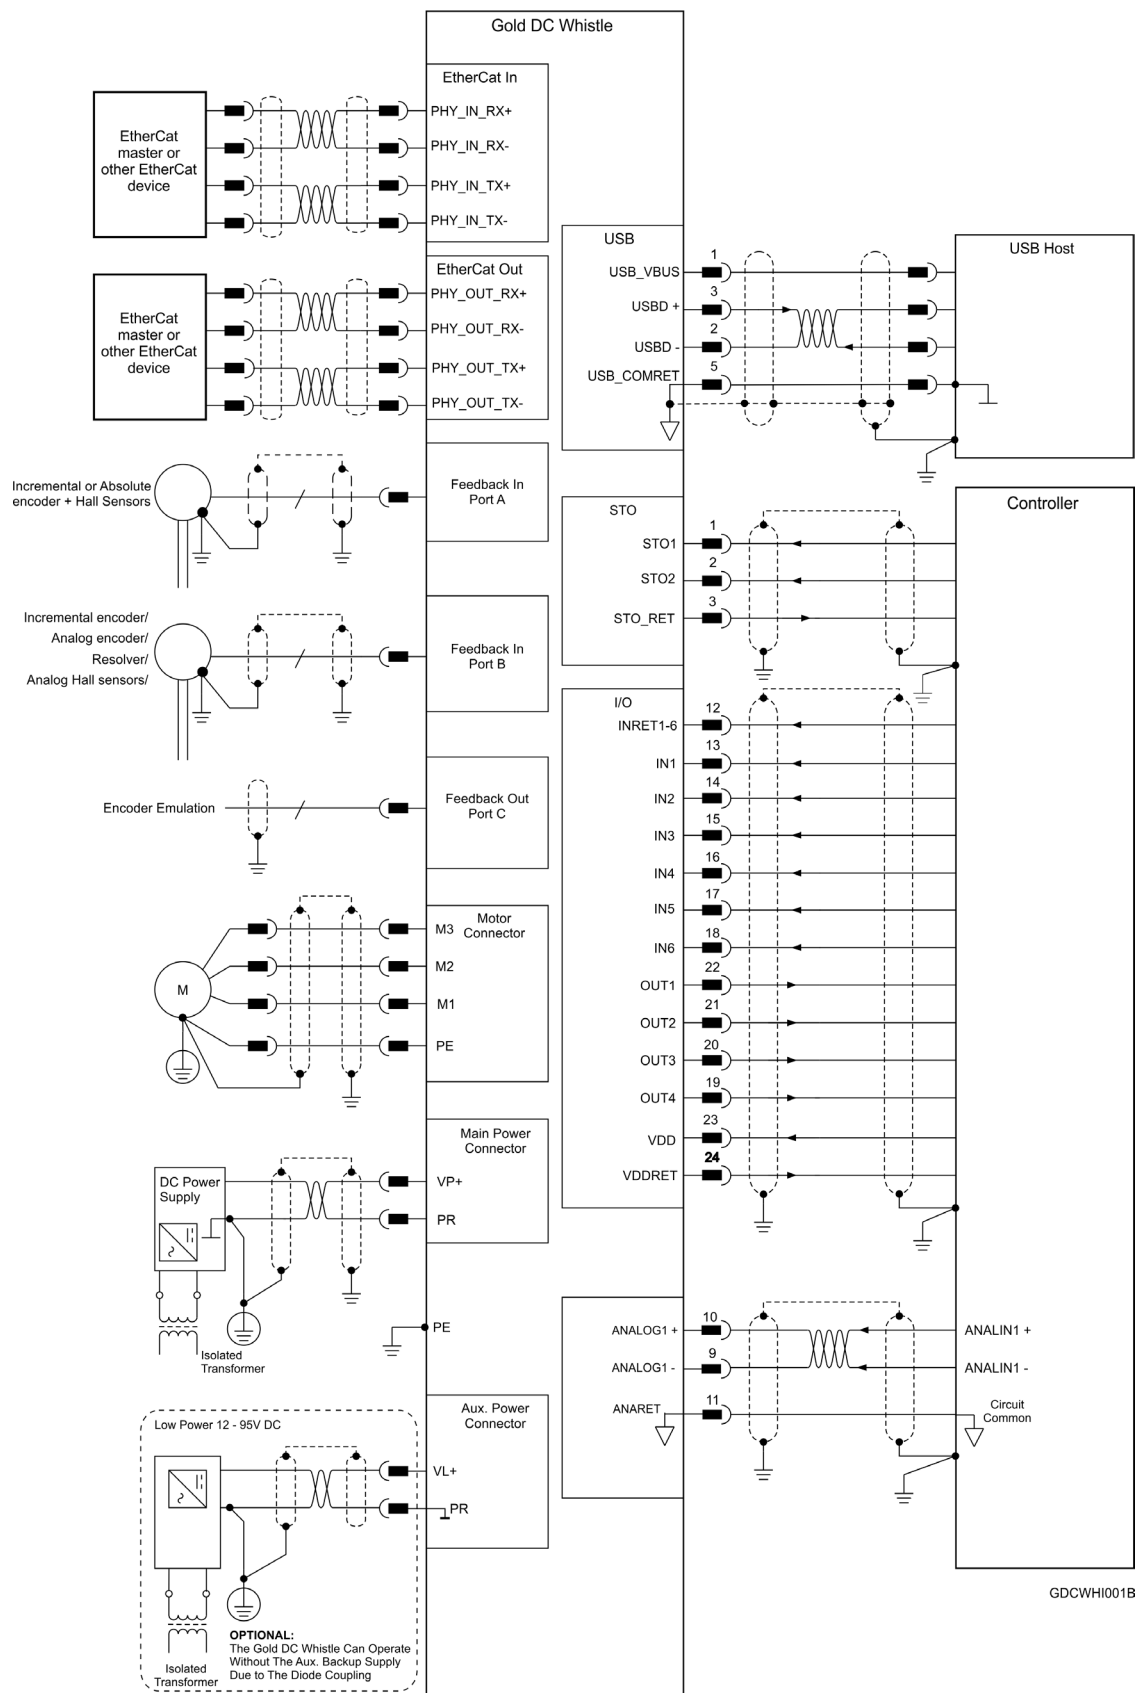


Figure 2: The Gold DC Whistle Connection Diagram – EtherCAT

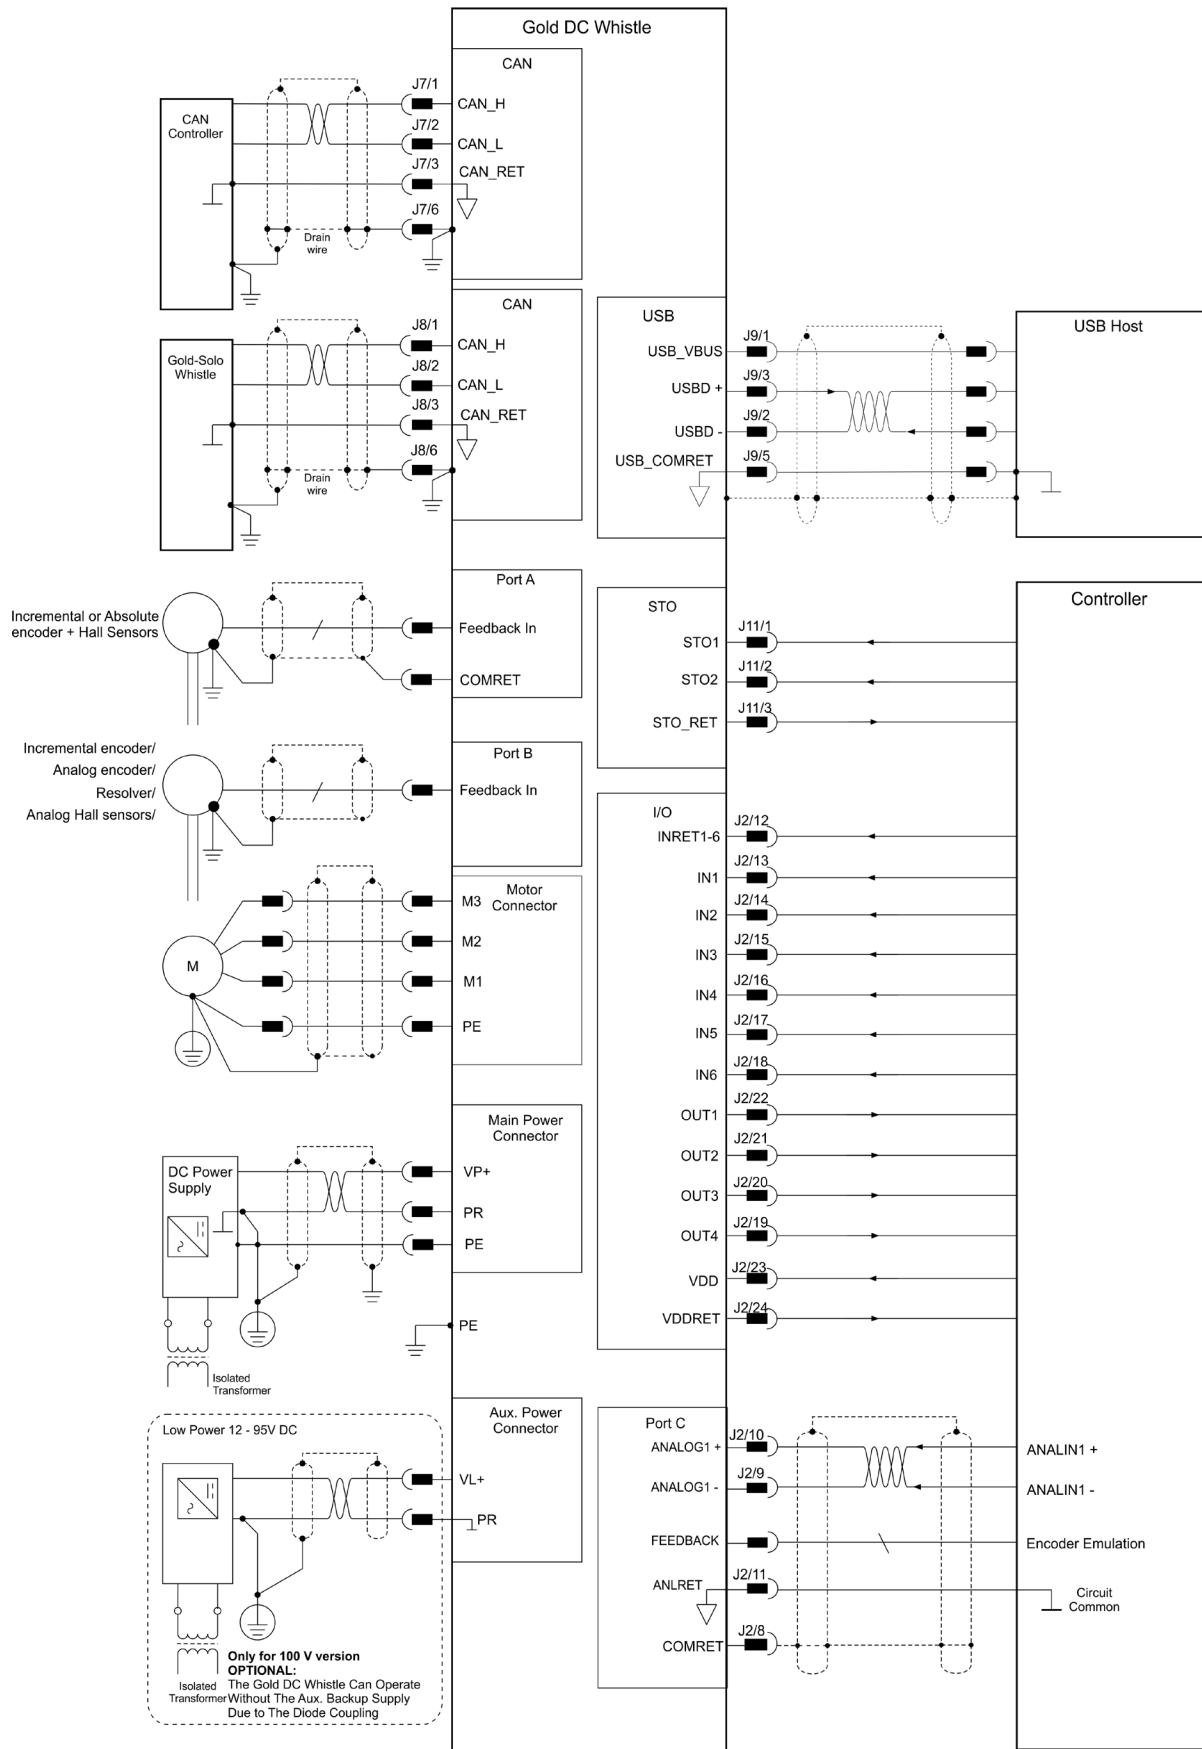

GDCWHI0056D




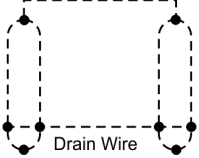
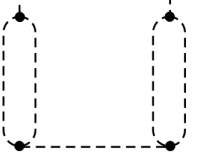

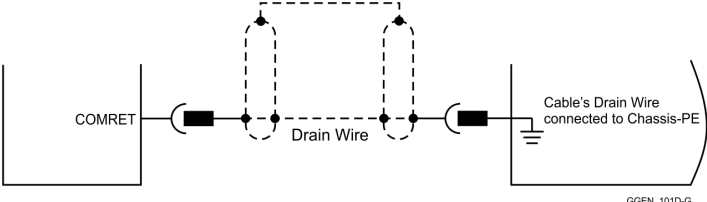
Figure 3: The Gold DC Whistle Connection Diagram - CAN



Chapter 7: Wiring

Once the product is mounted, you are ready to wire the device. Proper wiring, grounding and shielding are essential for ensuring safe, immune and optimal servo performance of the drive.

The following table legend describes the wiring symbols detailed in all installation guides.

Wiring Symbol	Description
 GGEN_101D-A	Earth connection (PE)
 GGEN_101D-B	Protective Earth Connection
 GGEN_101D-C	Common at the Controller
 GGEN_101D-D	Shielded cable with drain wire. The drain wire is a non-insulated wire that is in direct contact with the braid (shielding). Shielded cable with drain wire significantly simplifies the wiring and earthing.
 GGEN_101D-E	Shielded cable braid only, without drain wire.
 GGEN_101D-F	Twisted-pair wires
 GGEN_101D-G	Encoder Earthing. The cable's shield is connected to the chassis (PE) in the connector. Earthing the Encoder and connecting the Earth (PE) to the drive COMRET is mandatory to insure reliable operation, high noise immunity and rejection of voltage common mode interferences.



7.1. Basic Recommendations

7.1.1. General

1. Use shielded cables. For best results, the cable should have an aluminum foil shield covered by copper braid, and should contain a drain wire.
Use 24, 26 or 28 AWG twisted-pair shielded with drain wire cables.
2. Keep the cable as short as possible.
Do not mount the power cables of the motor and power bus in the proximity of the control and feedback cables.
3. Ensure that in normal operating conditions, the “earth connection” wires and shield of the control cables *carry no current*. The only time these conductors carry current is under abnormal conditions, when electrical equipment has become a potential shock or fire hazard while conducting external EMI interferences directly to ground, in order to prevent them from affecting the drive. Failing to meet this requirement might result in drive/controller/host failure.
4. After completing the wiring, carefully inspect all wires to ensure tightness, good solder of joints and general safety.

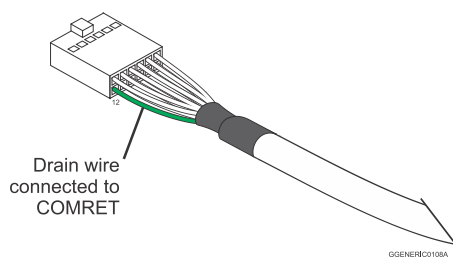


Figure 4: Feedback and Molex Control Cable Assemblies

Note: Please pay attention to the location of PIN 1 in the above connector diagram.

It should be noted that in all Elmo manuals the pinouts are shown differently to Molex's technical sheets. Molex shows pin 1 at the bottom-left when looking at the face of the cable-side connector, tab down (Figure 5).

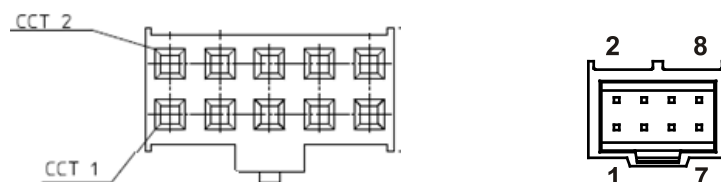


Figure 5: Molex vs Elmo Technical Diagram Examples Showing Pinout Numbers

However, Elmo specifies pin 1 as the bottom-left of drive-side connector. The result is that Elmo's pin designations are mirrored relative to the pinouts as labeled by Molex.

Where there is only one COMRET pin (Common Return) in the connector, which MUST be connected to the DRAIN WIRE and also to COMRET signal of the cable, it is necessary to connect the drain wire and COMRET signal to the same pin.



7.1.2. Feedback Cable Port A and Port B Connector

1. On the motor side connections, ground the shield to the motor chassis.
2. At least One COMRET (Common Return) must be connected to the PE.

Implement the following steps to connect the COMRET to the PE:

- a. At the drive, connect the feedback drain wire to one of the COMRET terminals in the Molex feedback connector (Figure 5).
- b. At the motor, connect the feedback cable drain wire to the GND motor chassis terminal of the feedback connector (Figure 6).

The drawing displays two earth connections.

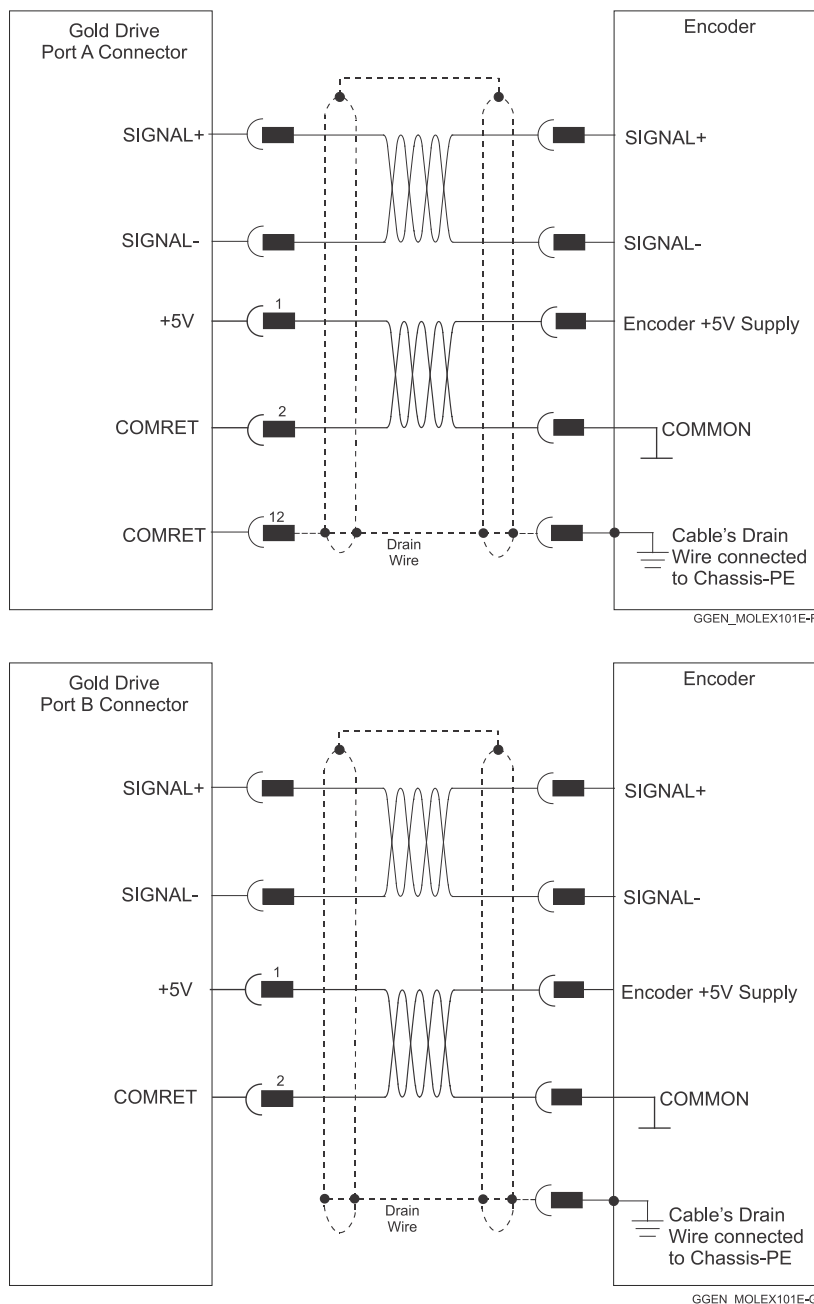


Figure 6: Feedback Port A and B Cable Assemblies



7.1.3. Feedback Cable Port C Connector

1. At the controller side connections, follow the controller manufacturer's recommendations concerning the shield.
2. The connection of the Drain wire to the Port C is not mandatory.

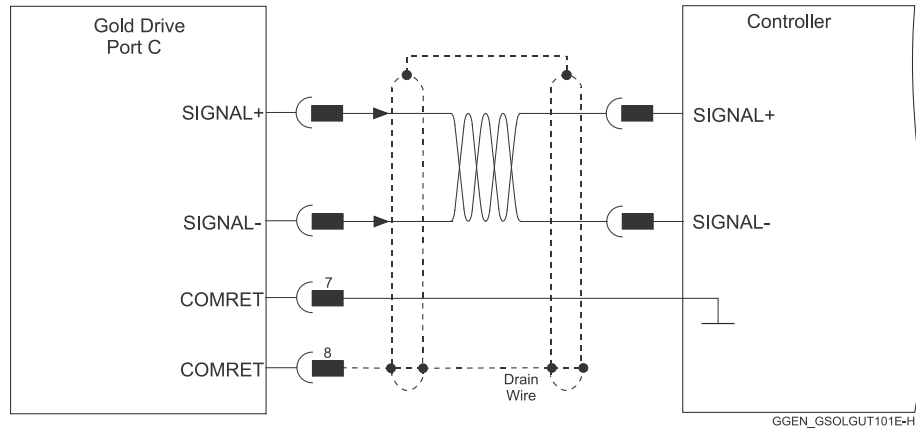


Figure 7: Feedback Port C Cable Assemblies

7.1.4. IO Cable Connector

It is recommended to use shielded cable, but is not mandatory.

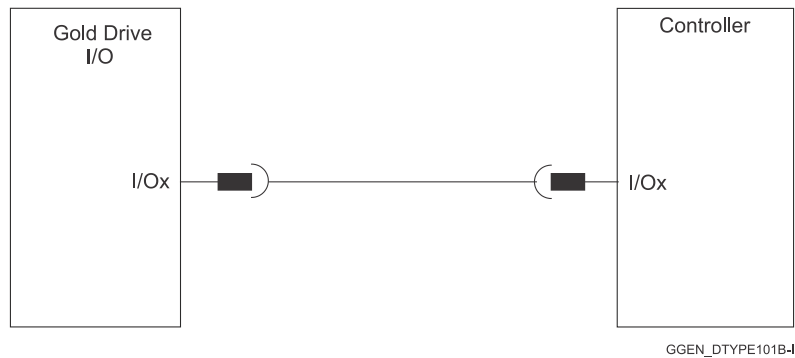


Figure 8: Feedback IO Cable Assemblies

7.1.5. STO (Port C) Cable Connector

It is recommended to use shielded cable, but is not mandatory.

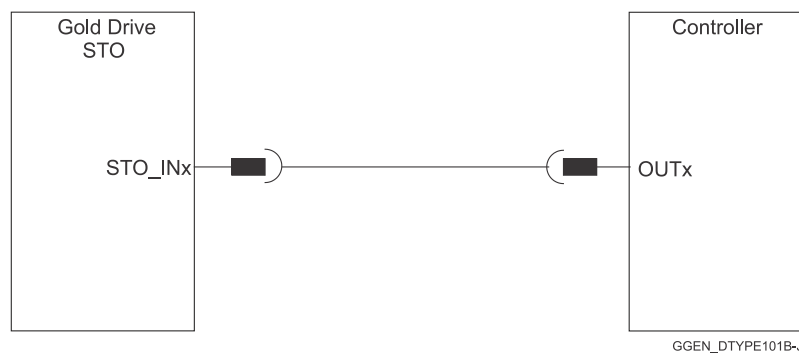



Figure 9: STO Cable Assemblies




7.2. Motor Power Connector Pinouts (J14)

See Chapter 8 in the in the MAN-G-Panel Mounted Drives Hardware manual for full details.

Pin (J14)	Signal	Function	Cable	
			Brushless Motor	Brushed DC Motor
1	PE	Protective Earth	Motor	Motor
2	M1	Motor phase	Motor	N/C
3	M2	Motor phase	Motor	Motor
4	M3	Motor phase	Motor	Motor

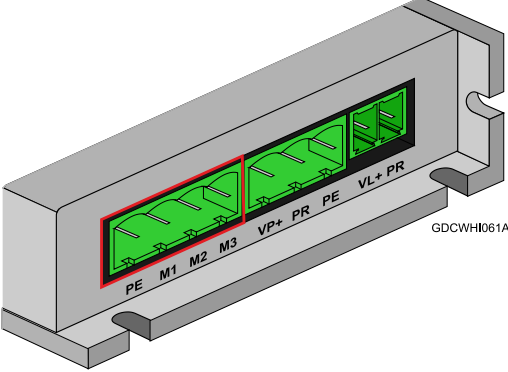

4-Pin Phoenix 5 mm Pitch 'HC'

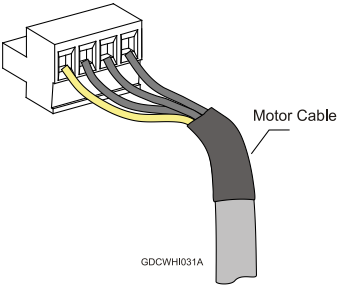

4-Pin Phoenix Plug-in Connector

Table 3: Connectors for Motor

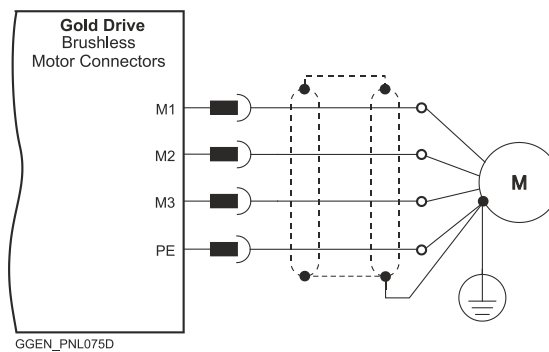


Figure 10: Brushless Motor Power Connection Diagram

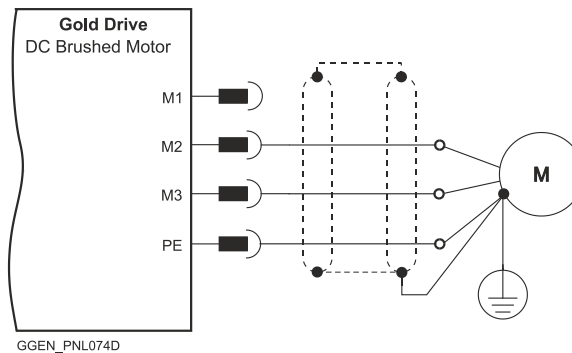


Figure 11: Brushed Motor Power Connection Diagram



7.3. Main and Control Power

The Gold DC Whistle receives power from main and control supplies and delivers power to the motor.

7.3.1. Description

This section describes the Main and Control Power for power ratings 200V and 100V, and provides details for the optional Backup (Control) Supply.

- **The Gold DC Whistle Power rating is 12 to 195 VDC**
- **There are Two power ratings for Gold DC Whistle; 100V and 200V:**

Power rating of 200V

Two power isolated DC power sources are required, main power 12 - 195V and Control Power 12-95V for the logic.

Power rating of 100V

Single DC Power Supply - Power to the Gold DC Whistle is provided by a 12–95 VDC single isolated DC power source (not included with the Gold DC Whistle). A “smart” control-supply algorithm enables the Gold DC Whistle to operate with only one power supply with no need for a control power supply for the logic.

Optional Backup (Control) Supply

If backup functionality is required in case of power loss, e.g., to keep the original position, a 12–95 VDC external isolated supply should be connected (via the Gold DC Whistle’s VL+ terminal). This is more flexible than the requirement for 24 VDC supply.


If backup is not needed, a single power supply is used for both the power and logic circuits.

There are two voltage ratings of the Gold DC Whistle, therefore the correct power supply must be used, according to the maximum operating voltage of the Gold DC Whistle. Refer to section 4.2 Technical Data.




7.3.2. Main Power (J13)

Pin (J13)	Signal	Function	Cable
1	VP+	Positive Power input	DC Power
2	PR	Power return	DC Power
3	PE	Protective Earth	DC Power

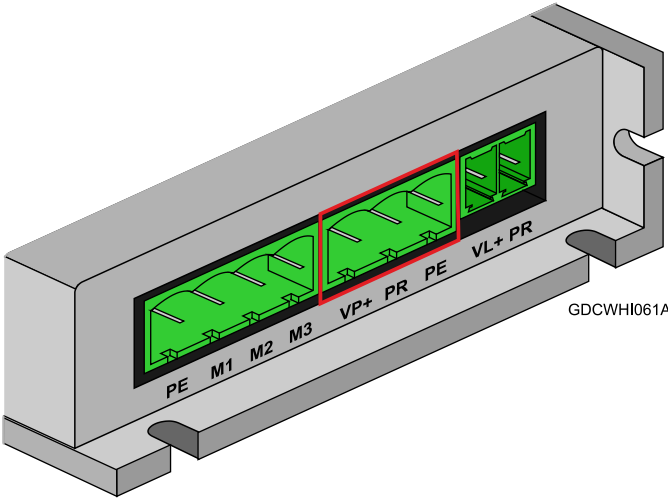

3-Pin Phoenix 5 mm Pitch 'HC'

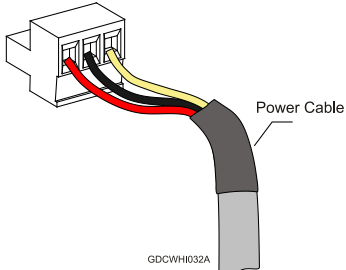

3-Pin Phoenix Plug-in Connector

Table 4: Connectors for Main Power

Connect the DC power cable to the VP+ and PR terminals on the Main Power Connector.


To connect the DC power supply:

1. The source of the 12 to 195 VDC power supply must be isolated.
2. For best immunity, it is highly recommended to use twisted and shielded cables for the DC power supply. A 3-wire shielded cable should be used. The gauge is determined by the actual current consumption of the motor.
3. Connect the cable shield to the closest ground connection near the power supply.
4. Connect the PE to the closest ground connection near the power supply.
5. Connect the PR to the closest ground connection near the power supply.
6. Before applying power, first verify the polarity of the connection.




7.3.3. Control Power Supply (J12)

Pin (J12)	Signal	Function	Cable
1	VL+	Control Supply Input	DC Power
2	PR	Control Supply Return	DC Power

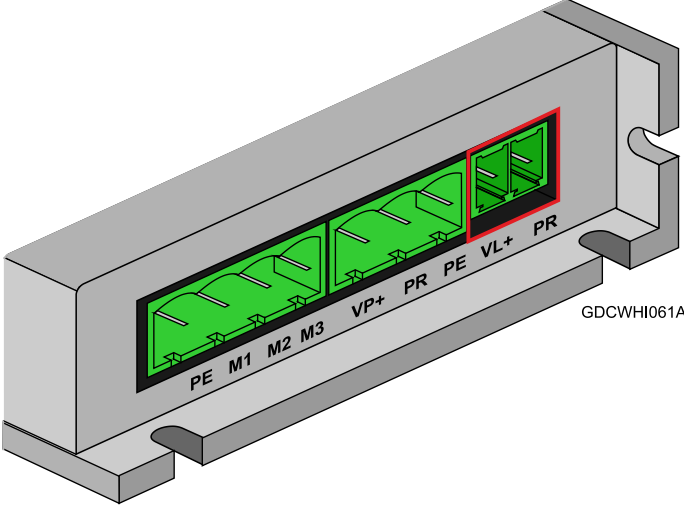

2-Pin Phoenix 3.81 mm Pitch

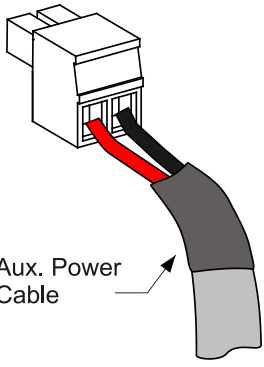

Aux. Power Cable

2-Pin Phoenix Plug-in Connector

Table 5: Control Power Connector – Pin Assignments



Caution:

Power from the Gold DC Whistle to the motor must come from the Main Supply and **not** from the Control Supply.

The backup functionality can be used for storing control parameters in case of power-outs, providing maximum flexibility and backup capability when needed.

Connect the VL+ and PR terminal to the **Control** Connector.

To connect the control supply:

1. The source of the Control Supply must be isolated.
2. For safety reasons, connect the return (common) of the control supply source to the closest ground near the control supply source
3. Connect the cable shield to the closest ground near the control supply source
4. Before applying power, first verify the polarity of the connection.



7.3.4. Connectivity

7.3.4.1. Power Rating 200 V

For Power Rating 200 V, two power isolated DC power sources are required, main power **12 - 195V** and Control Power **12-95V** for the logic.

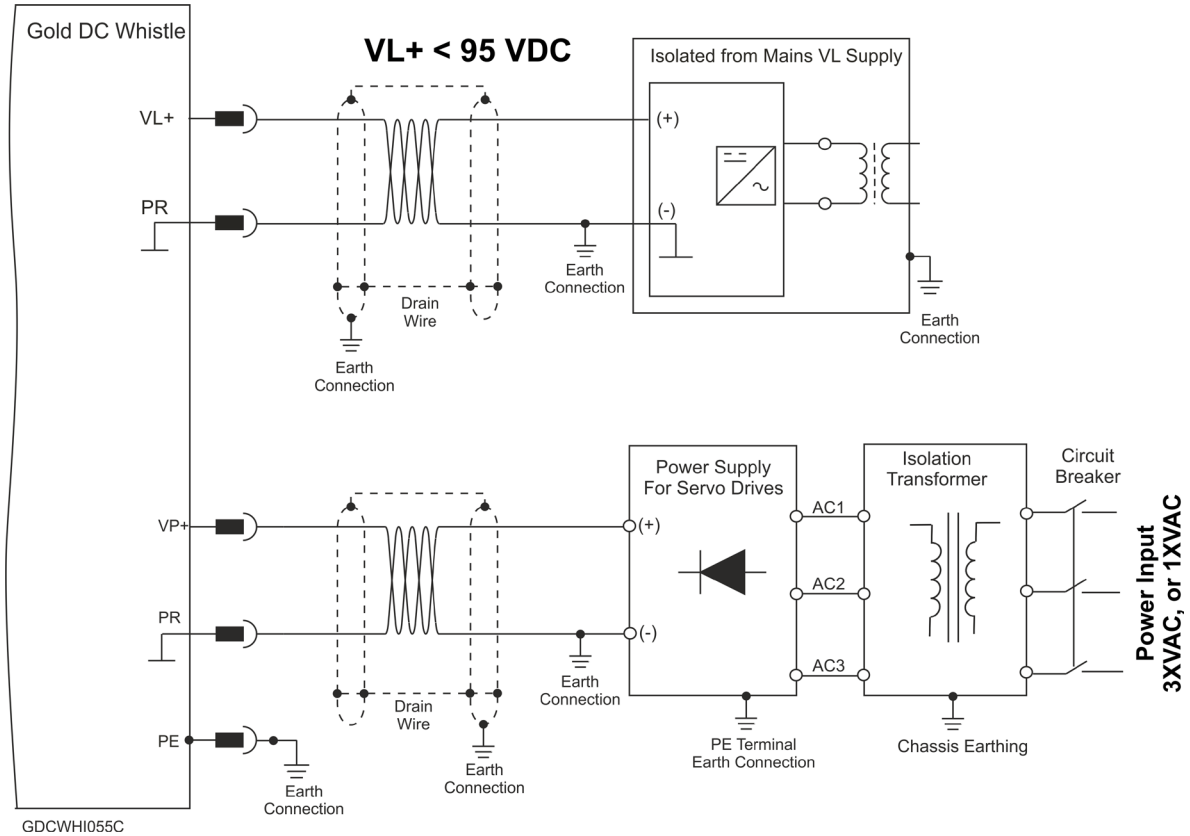


Figure 12: 200 VDC Power Source Connection Diagram



7.3.4.2. Power Rating 100 V

7.3.4.2.a Single Power Supply

For power rating 100 V , a single Power Supply is required which contains a “smart” control-supply algorithm, enabling the Gold DC Whistle to operate with only one power supply with no need for a control power supply for the logic.

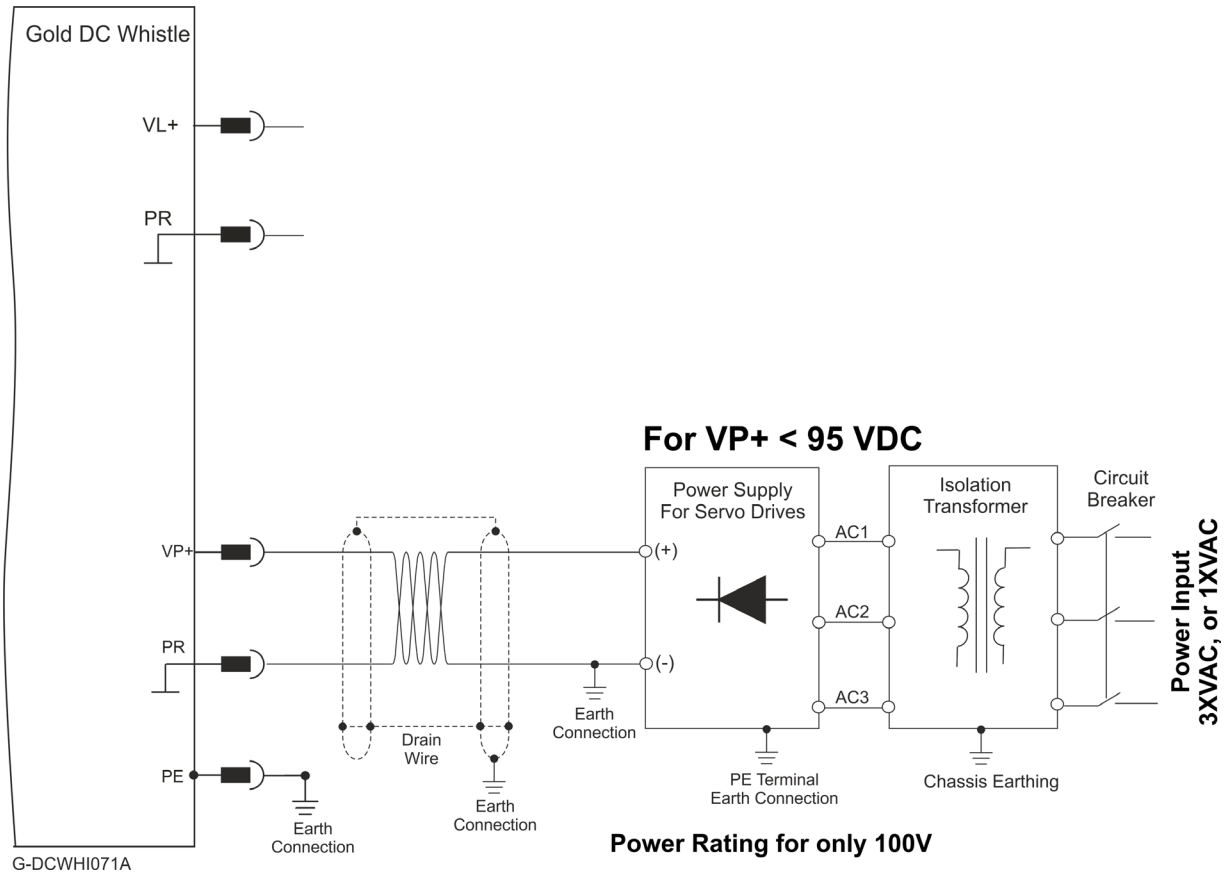


Figure 13: Main Power Supply Connection Diagram (no Control Supply)



7.3.4.2.b Optional Backup Supply

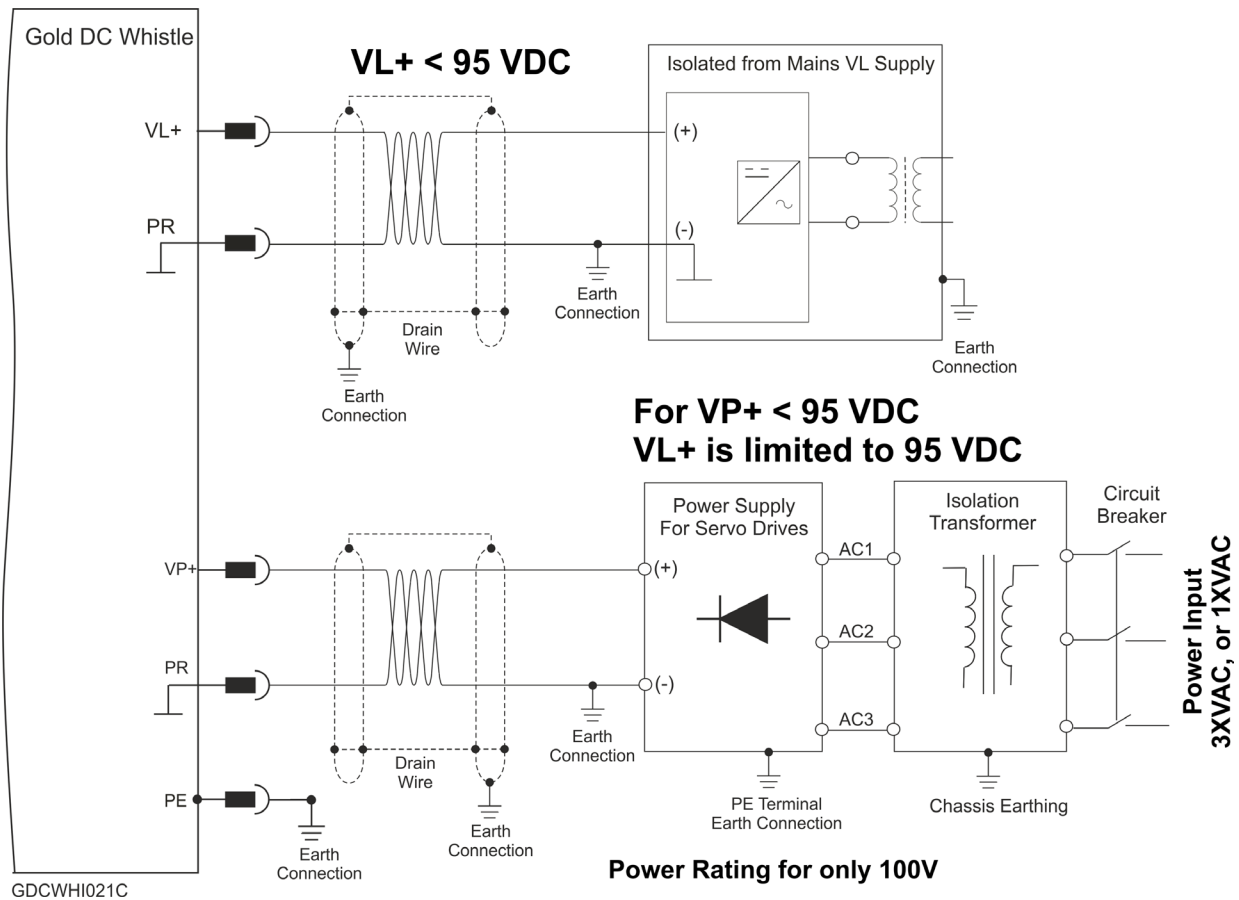


Figure 14: Control Power Supply Connections Diagram



7.4. Drive Status Indicator

Figure 15 shows the position of the red/green dual LED, which is used for immediate indication of the Initiation and Working states. For details refer to Chapter 7 Drive Status Indicator, in the MAN-G-Panel Mounted Drives Hardware manual.

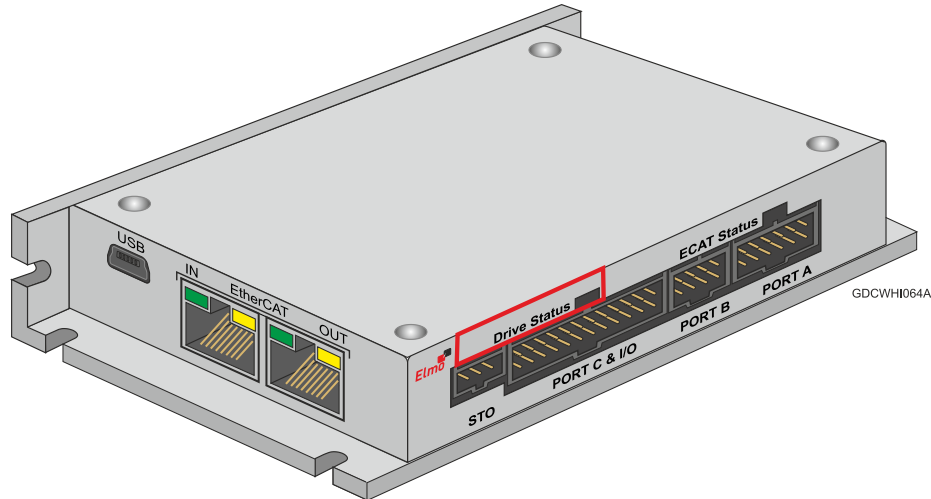


Figure 15: Drive Status Indicator - EtherCAT

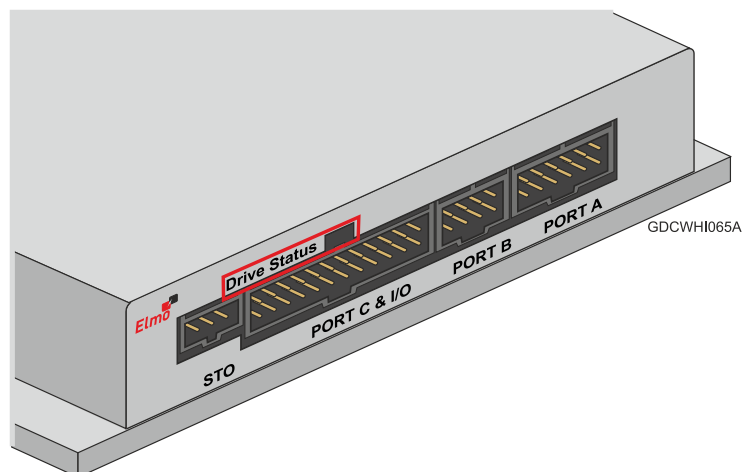


Figure 16: Drive Status Indicator - CAN

The red/green dual LED is used for immediate indication of the following states:


- **Initiation state:** In this state the LED indicates whether the drive is in the boot state (blinking red) or in the operational state (steady red).
- **Working state:** In this state the LED indicates whether the drive is in an amplifier failure state (red) or is ready to enable the motor (green).




7.5. STO (Safe Torque Off) (J11)

See Chapter 9 in the in the MAN-G-Panel Mounted Drives Hardware manual for full details.

Pin (J11)	Signal	Function
1	STO1	STO1 input (default 24 V)
2	STO2	STO2 input (default 24 V)
3	STO_RET	STO signal return

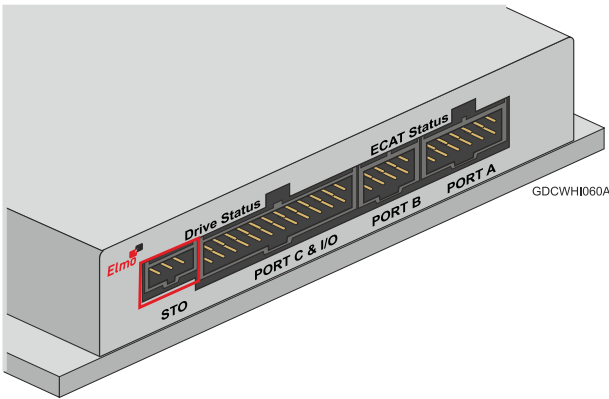


GDCWHI060A

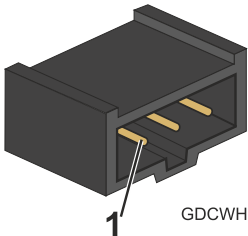

1 GDCWHI067A

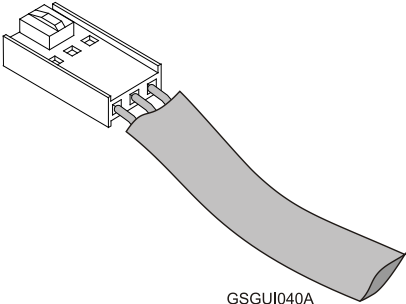3-Pin 2.54 mm Pitch Molex



GSGUI040A

3-Pin Molex Plug

This cable is included in the cable kit described in Section 3.1.1.

Table 6: STO Input – Pin Assignments



7.5.1. Source Mode – PLC Voltage Level

Refer to the diagrams below for the PLC Source option connection.

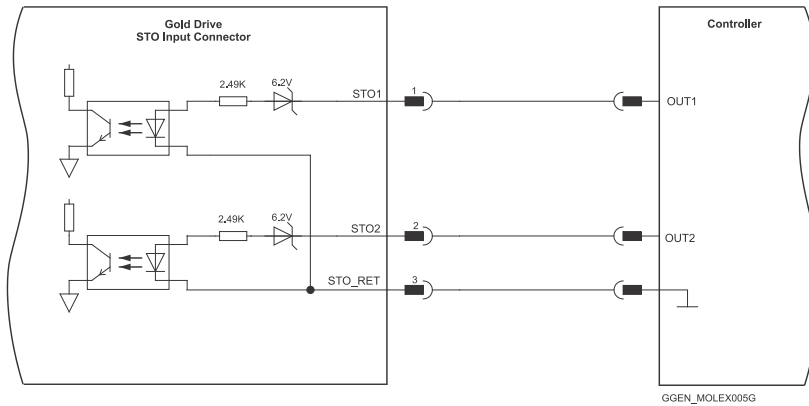


Figure 17: STO Molex Type Input Connection – PLC Source Option

7.5.2. TTL Mode – TTL Voltage Level

Refer to the diagrams below for TTL option connection.

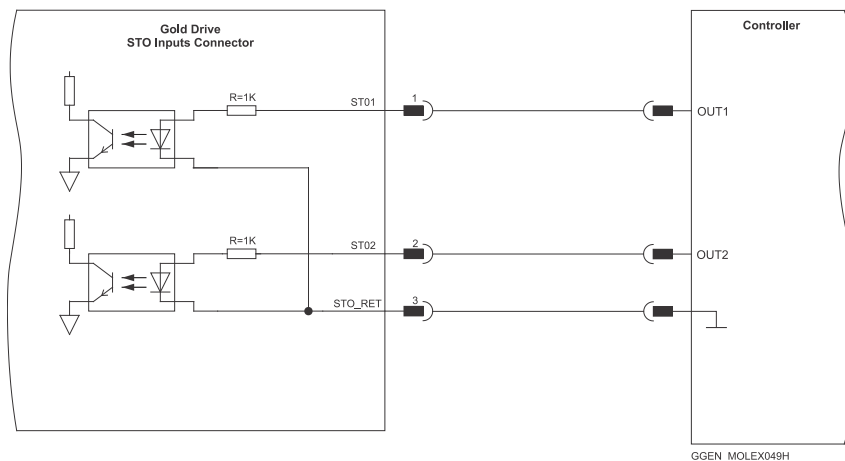


Figure 18: STO Input Connection – TTL Option

7.5.3. Sink Mode – PLC Voltage Level

Refer to the diagrams below for the PLC Sink option connections which is not fully certified for STO.

This option is not recommended for new designs.

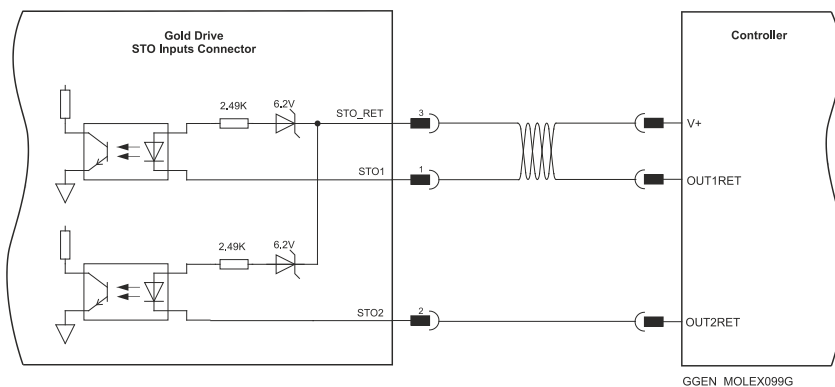


Figure 19: STO Input Connection – Sink Option



7.6. Port A (J1)

See Section 10.3 in the in the MAN-G-Panel Mounted Drives Hardware manual for full details.


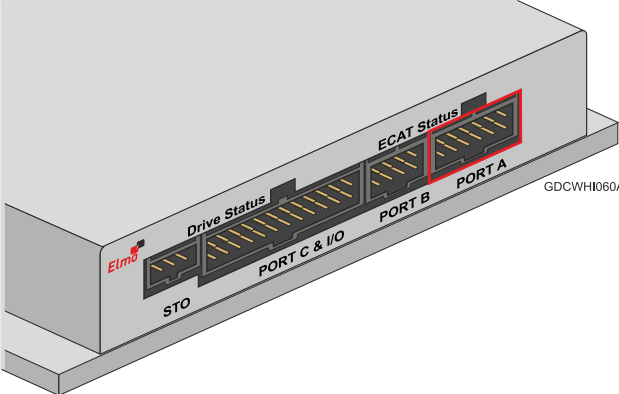
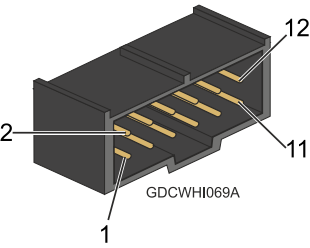
	Incremental Encoder		Absolute Serial Encoder	
Pin (J1)	Signal	Function	Signal	Function
1	+5V	Encoder +5V supply	+5V	Encoder +5V supply
2	COMRET	Common return	COMRET	Common return
3	PortA_ENC_A+	Channel A +	ABS_CLK+	Absolute encoder clock+
4	PortA_ENC_A-	Channel A -	ABS_CLK-	Absolute encoder clock-
5	PortA_ENC_B+	Channel B+	ABS_DATA+	Absolute encoder data+
6	PortA_ENC_B-	Channel B -	ABS_DATA-	Absolute encoder data-
7	PortA_ENC_INDEX+	Index+	Reserved	Reserved
8	PortA_ENC_INDEX-	Index -	Reserved	Reserved
9	HA	Hall sensor A	HA	Hall sensor A
10	HB	Hall sensor B	HB	Hall sensor B
11	HC	Hall sensor C	HC	Hall sensor C
12	COMRET	Common Return	COMRET	Common Return
Pin Positions				Cable Connector
  <p>12-Pin 2.54 mm Pitch Molex</p>				 <p>12-Pin Molex Plug</p> <p>This cable is included in the cable kit described in Section 3.1.1.</p>

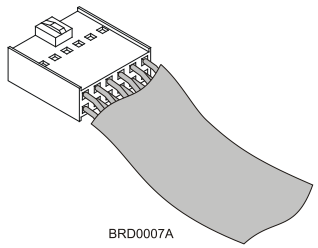Table 7: Port A Pin Assignments



7.6.1. Incremental Encoder

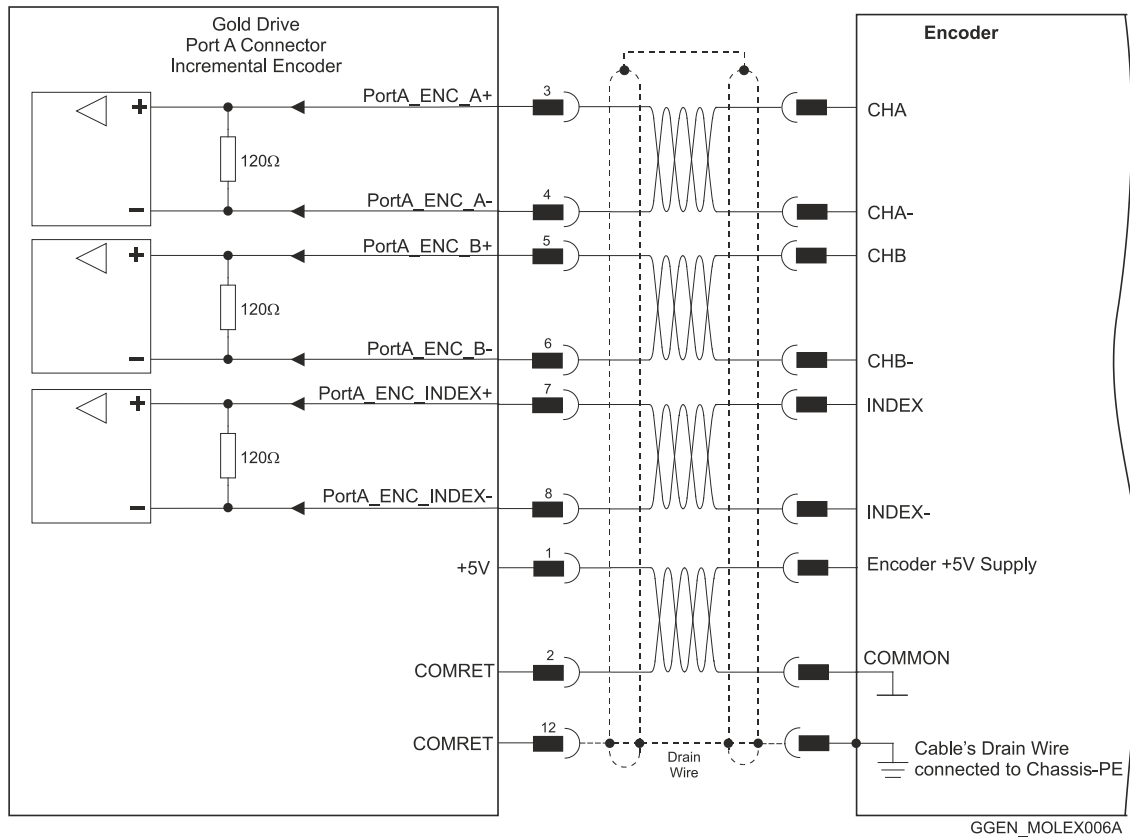


Figure 20: Port A Molex Type Incremental Encoder Input – Recommended Connection Diagram

7.6.2. Halls Sensor

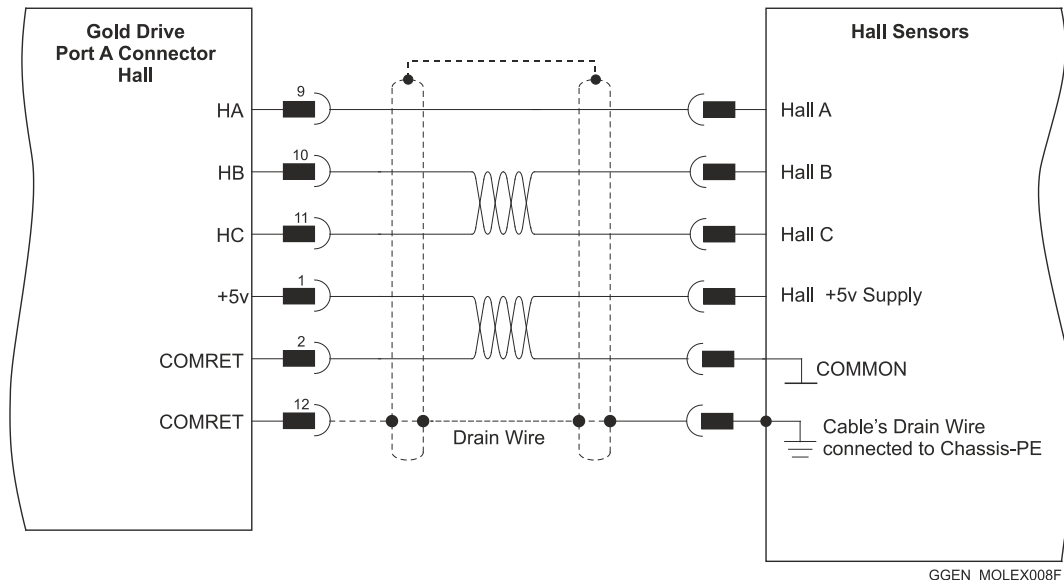


Figure 21: Molex Type Hall Sensors Connection Diagram



7.6.3. Absolute Serial Encoder

The following figures describe the connections at Port A for the Absolute Serial type encoders.

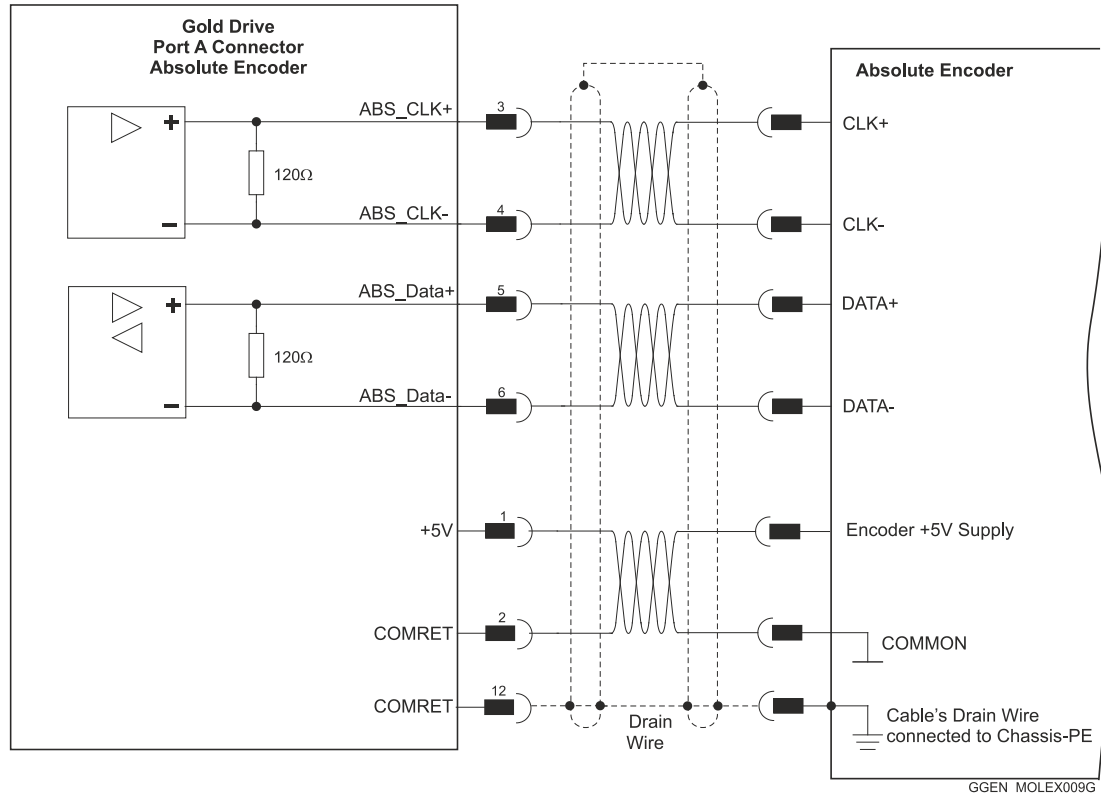


Figure 22: Absolute Serial Encoder – Recommended Connection Diagram for EnDAT, Biss, SSI

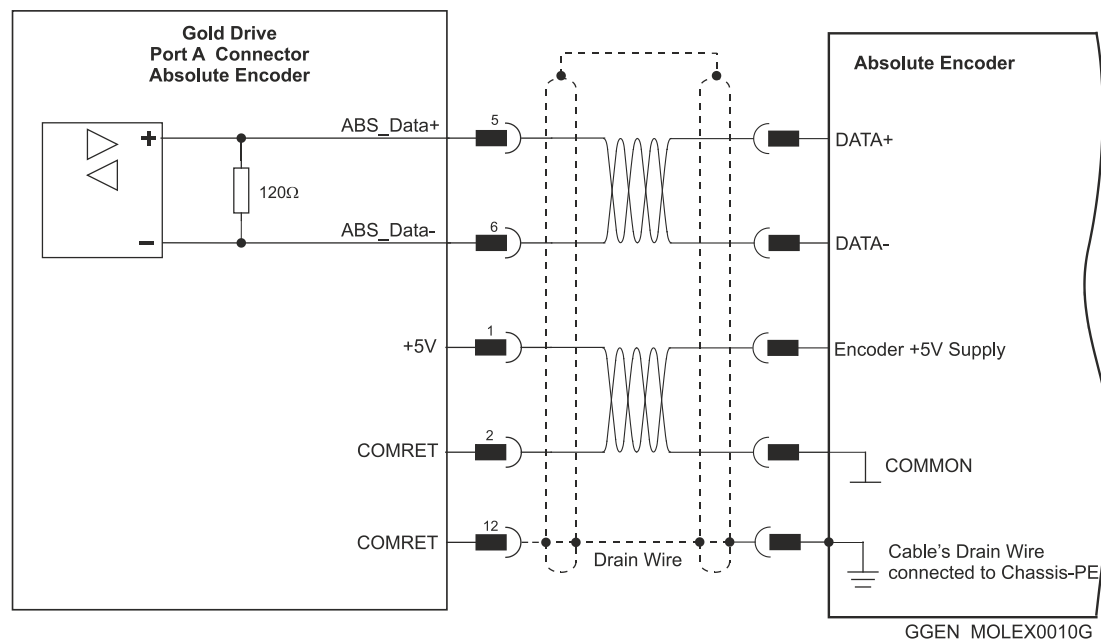


Figure 23: Absolute Serial Encoder – Recommended Connection Diagram for Sensors Supporting Data Line Only (NRZ types, e.g., Panasonic / Mitutoyo / Sanyo Danki / Tamagawa)



7.6.3.1. Hiperface

The following figure describes the connection diagram.

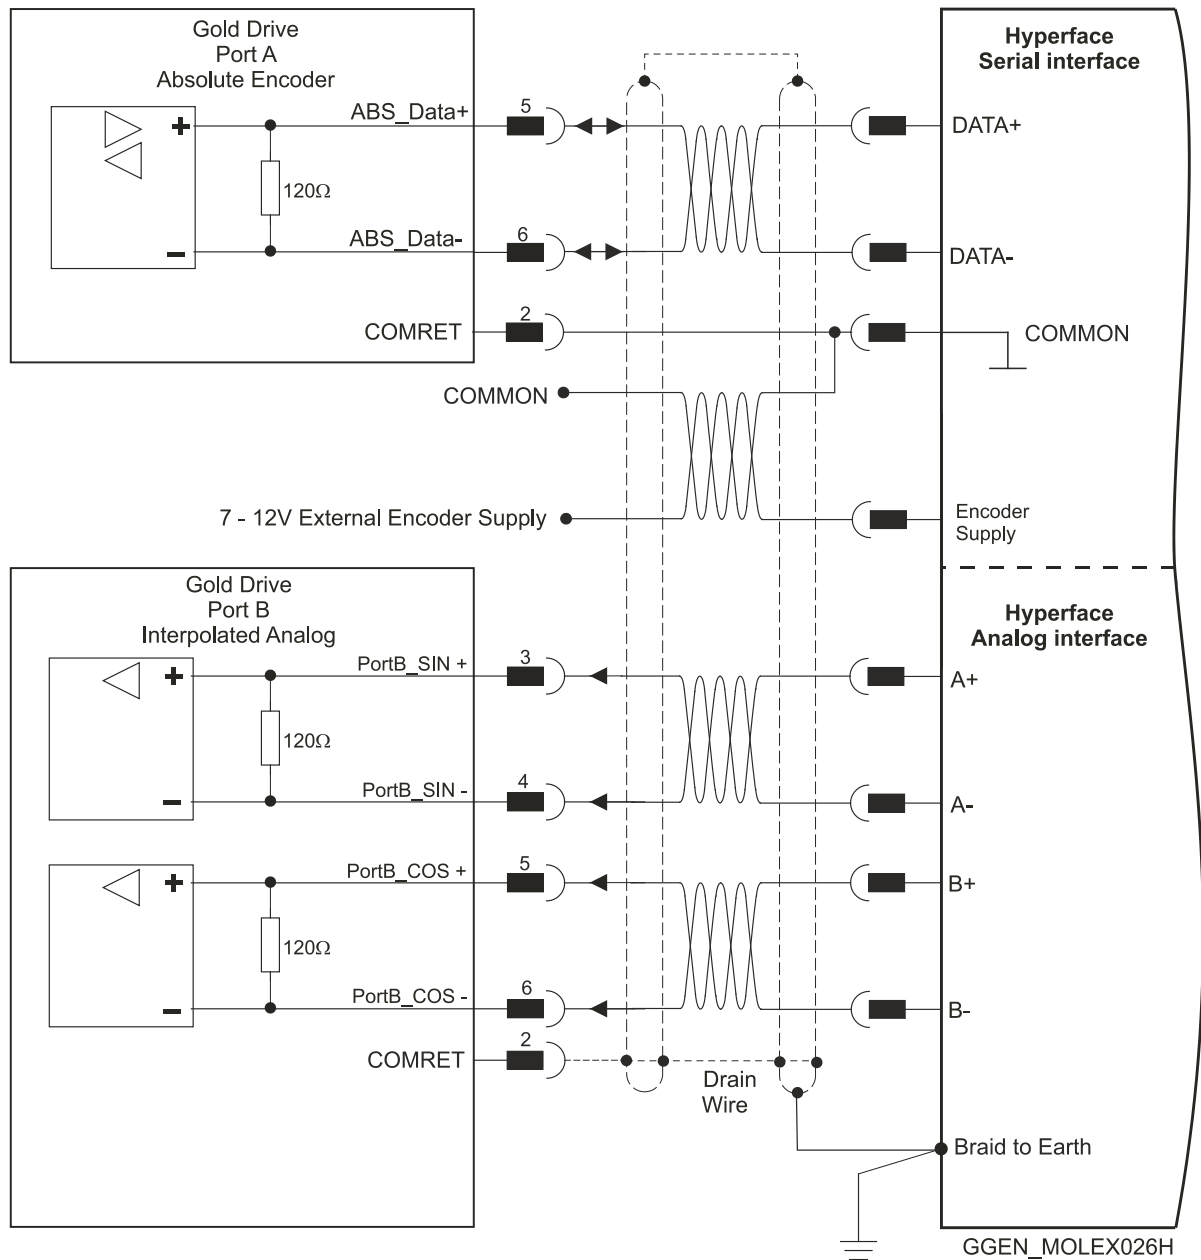


Figure 24: Absolute Serial Encoder – Recommended Molex Type Connection Diagram for Stegmann Hiperface



7.7. Port B (J3)

See Section 10.4 in the in the MAN-G-Panel Mounted Drives Hardware manual for full details.


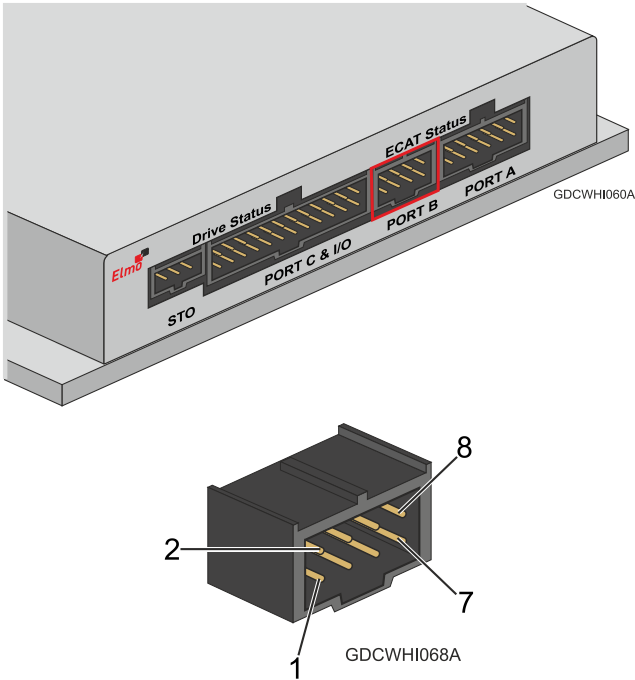
Incremental or Interpolated Analog Encoder			Resolver	
G-DCWHI ^{XXX} /YYYYE ^{XX} Q			G-DCWHI ^{XXX} /YYYYR ^{XX} Q	
Pin (J3)	Signal	Function	Signal	Function
1	+5V	Encoder +5V supply	NC	
2	COMRET	Common return	COMRET	Common return
3	PortB_ENC_A+/SIN+	Channel A+/Sine+	SIN+	Sine+
4	PortB_ENC_A-/SIN-	Channel A-/Sine-	SIN-	Sine-
5	PortB_ENC_B+/COS+	Channel B+/Cosine+	COS+	Cosine+
6	PortB_ENC_B-/COS-	Channel B-/Cosine-	COS-	Cosine-
7	PortB_ENC_INDEX+/Analog_Index+	Channel_Index+/Analog_Index+	RESOLVER_OUT +	Vref f=1/TS, 50 mA Max.
8	PortB_ENC_INDEX-/Analog_Index-	Channel_Index- /Analog_Index-	RESOLVER_OUT-	Vref complement f= 1/TS, 50 mA Maximum
Pin Positions			Cable Connector	
 <p>8-Pin 2.54 mm Pitch Molex</p>			 <p>8-Pin Molex Plug</p> <p>This cable is included in the cable kit described in Section 3.1.1.</p>	

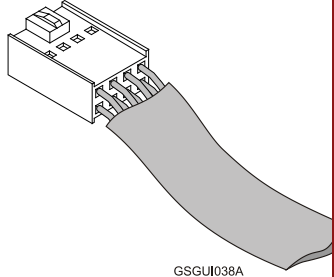Table 8: Port B Pin Assignments



7.7.1. Incremental Encoder

The following figure describes the connections at Port B for the Incremental encoder.

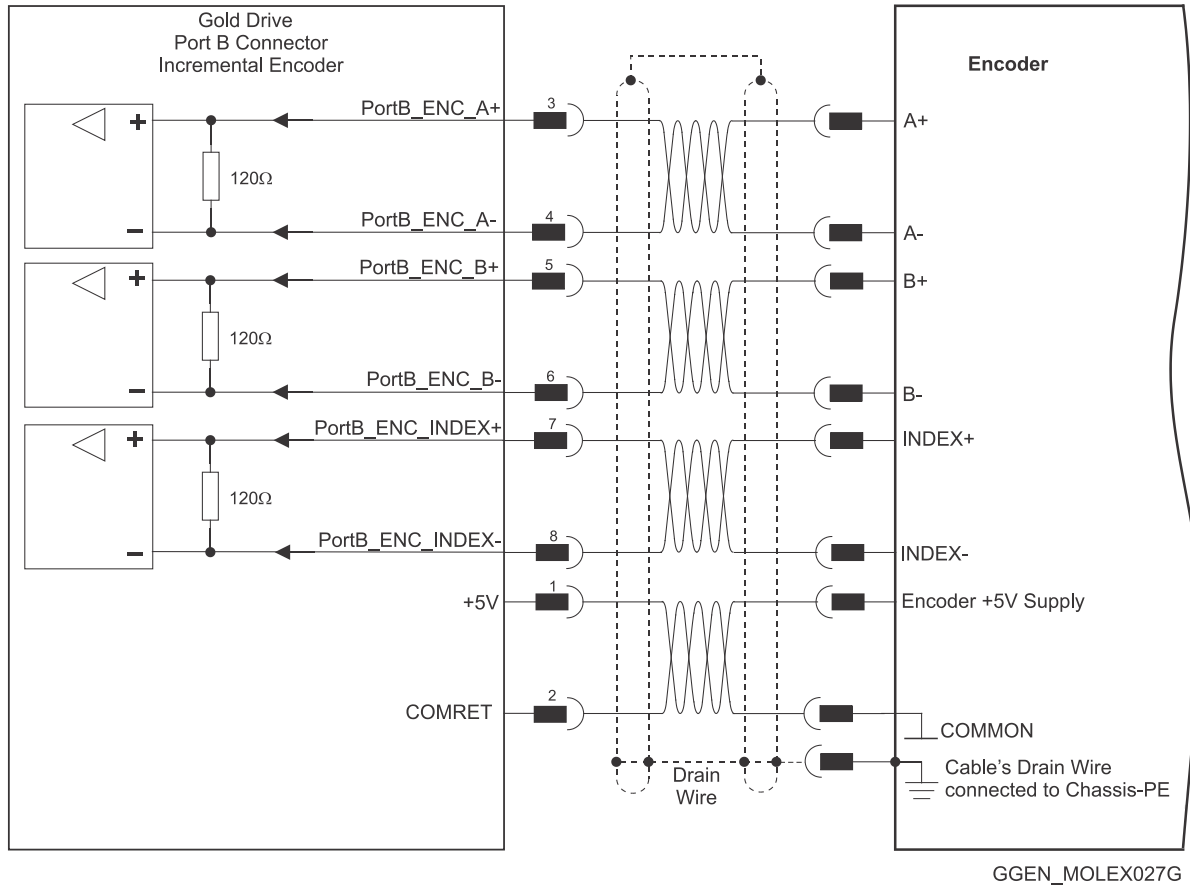


Figure 25: Port B Incremental Encoder Input – Recommended Connection Diagram



7.7.2. Interpolated Analog Encoder

The following figure describes the connections at Port B for the Interpolated Analog encoder.

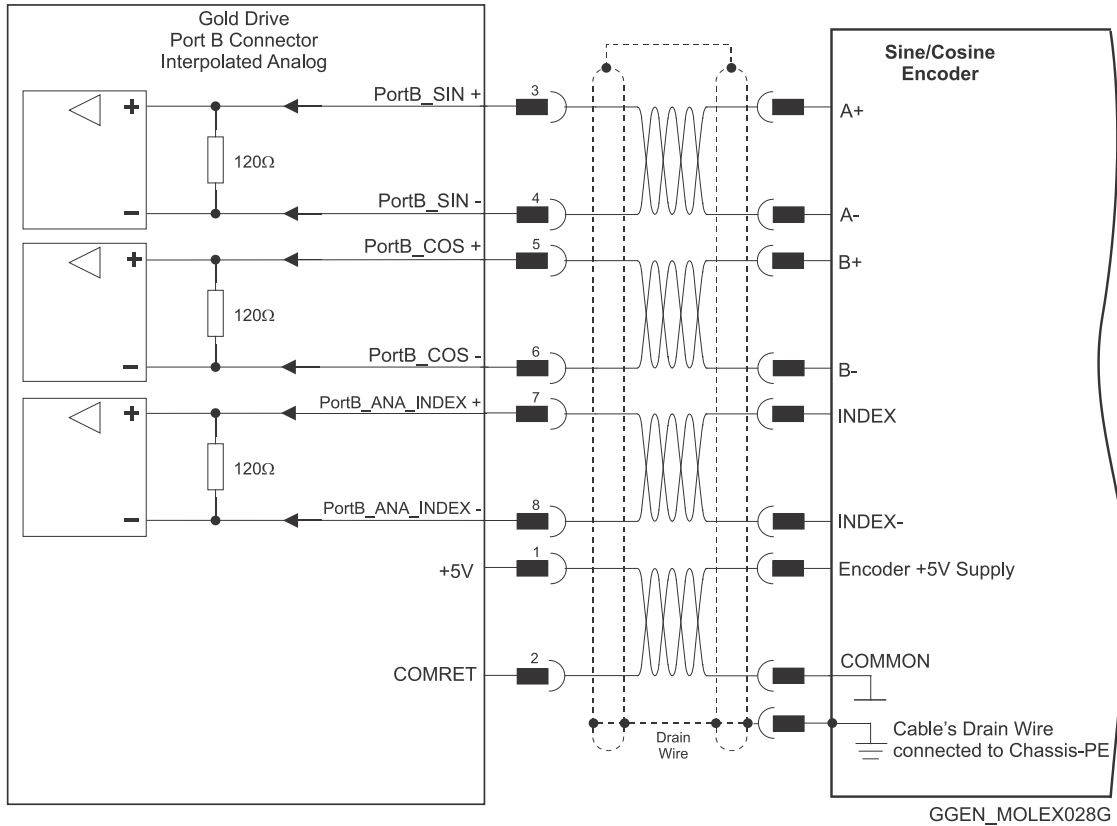


Figure 26: Port B - Interpolated Analog Encoder Molex Type Connection Diagram

7.7.3. Resolver

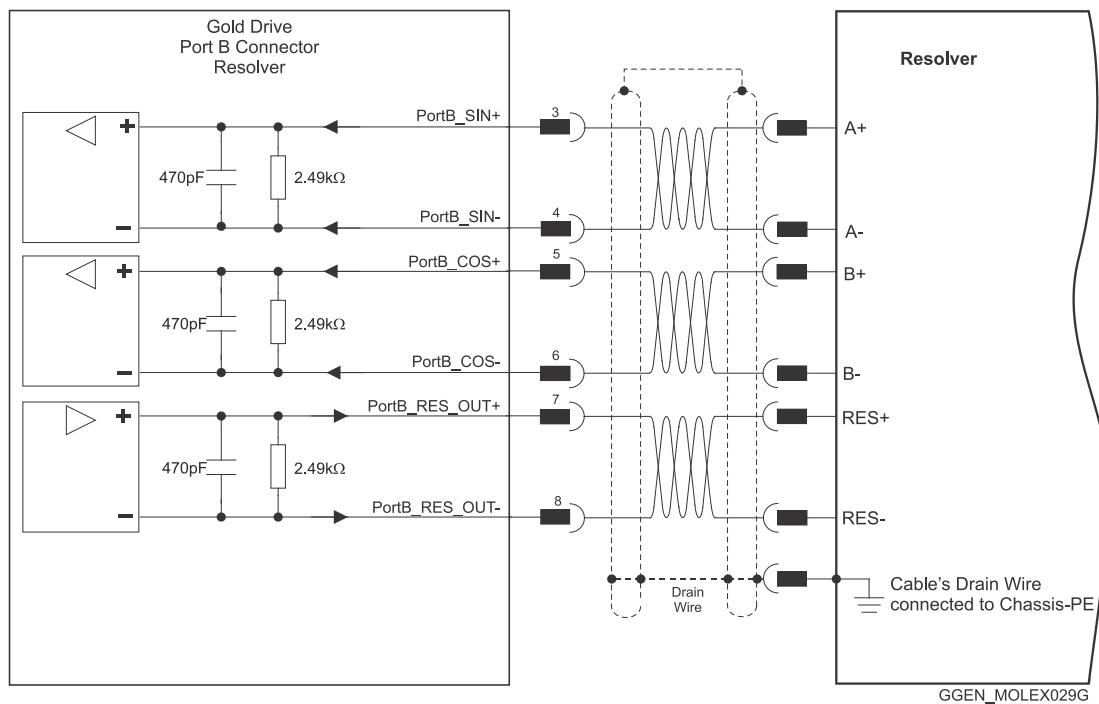


Figure 27: Port B – Resolver Molex Type Connection Diagram



7.8. Port C, Digital I/Os, and Analog Inputs (J2)

The Port C connector includes the following functions:

- Port C: Refer to Sections 10.5 in the in the MAN-G-Panel Mounted Drives Hardware manual for full details
- I/O: Refer to Chapter 11 in the in the MAN-G-Panel Mounted Drives Hardware manual for full details.
- Analog input: See Section 11.2 in the in the MAN-G-Panel Mounted Drives Hardware manual for full details.

Pin (J2)	Signal	Function
1	PortC_ENCO_A+	Buffered Channel A output
2	PortC_ENCO_A-	Buffered Channel A complement output
3	PortC_ENCO_B+	Buffered Channel B output
4	PortC_ENCO_B-	Buffered Channel B complement output
5	PortC_ENCO_Index+	Buffered INDEX output
6	PortC_ENCO_Index-	Buffered INDEX complement output
7	COMRET	Common return
8	COMRET	Common return
9	ANALOG1-	Analog input complement
10	ANALOG1+	Analog input
11	ANARET	Analog return
12	INRET1_6	Programmable input 1 – 6 return
13	IN1	Programmable digital input 1
14	IN2	Programmable digital input 2
15	IN3	Programmable digital input 3
16	IN4	Programmable digital input 4
17	IN5	Programmable digital input 5
18	IN6	Programmable digital input 6
19	OUT4	Programmable output 4
20	OUT3	Programmable output 3
21	OUT2	Programmable output 2
22	OUT1	Programmable output 1
23	VDD	VDD supply. Refer to MAN-G-Panel Mounted Drives Hardware Manual for VDD specification
24	VDDRET	VDD supply return




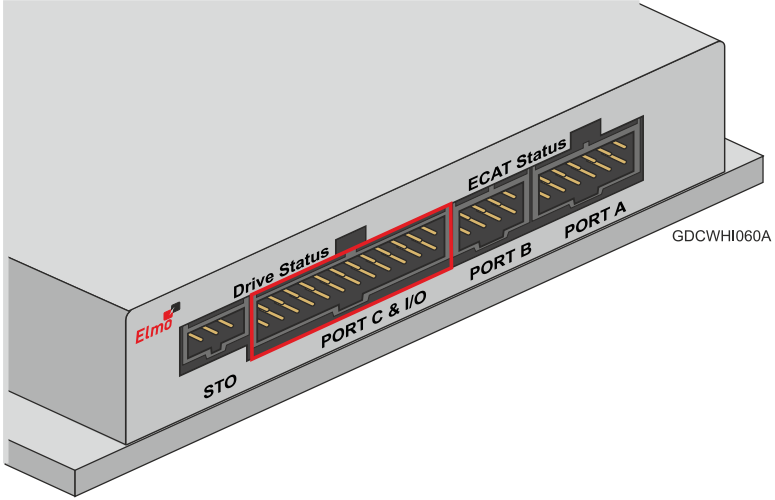
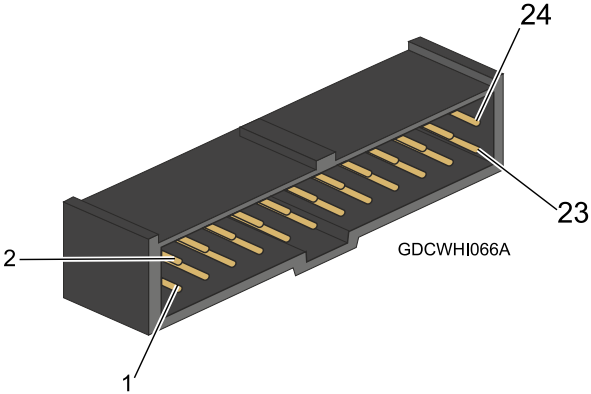
Pin Positions	Cable Connector
  <p>24-Pin 2.54 mm Pitch Molex</p>	 <p>24-Pin Molex Plug</p> <p>This cable is included in the cable kit described in Section 3.1.1.</p>

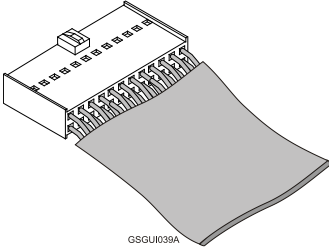Table 9: Port C Feedback Out and I/O



7.8.1. Port C – Emulated Encoder Output

The following figure describes the connections at Port C for the Emulated Encoder Differential.

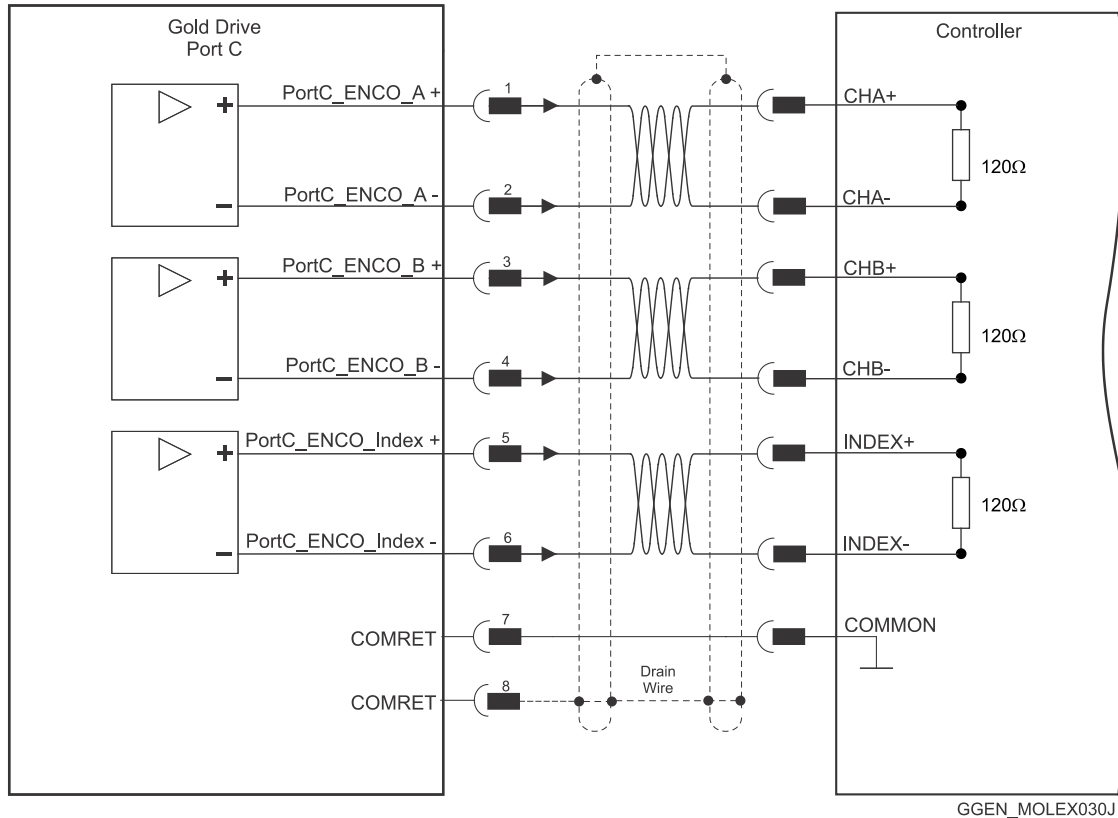


Figure 28: Emulated Encoder Differential Output – Recommended Connection Diagram

Note that the user is required to connect a 120 Ω termination at the end of each differential line.

7.8.2. Analog Input

The following circuit describes the internal interface of the Analog input.

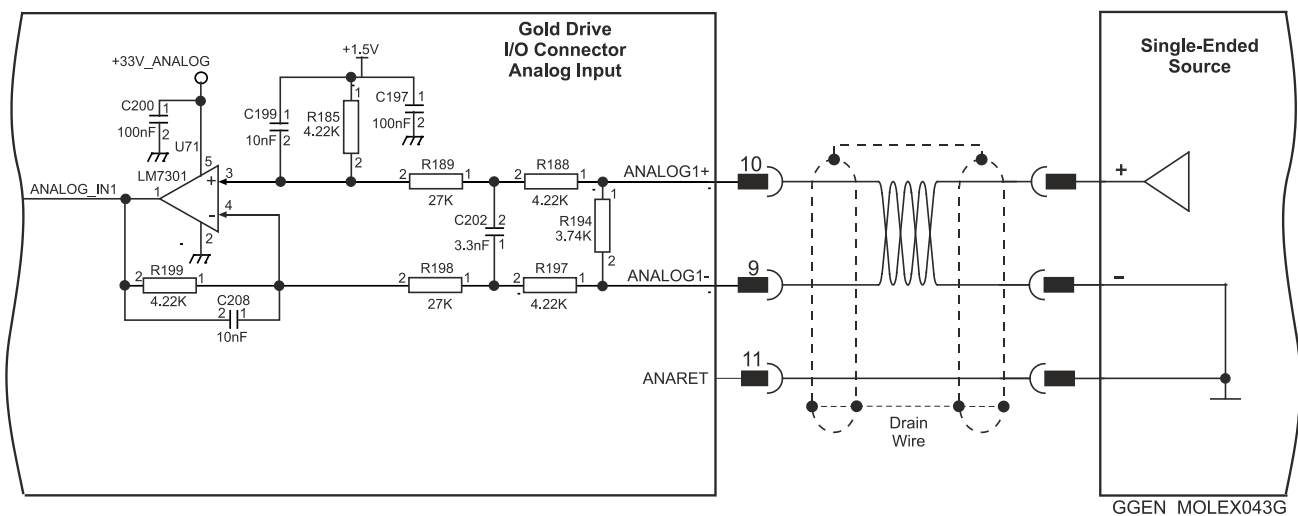


Figure 29: Differential Analog Input



7.8.3. Digital Input and Output TTL Mode

The following figure describes the connections at the I/O Port for the Digital Input and Output TTL Mode.

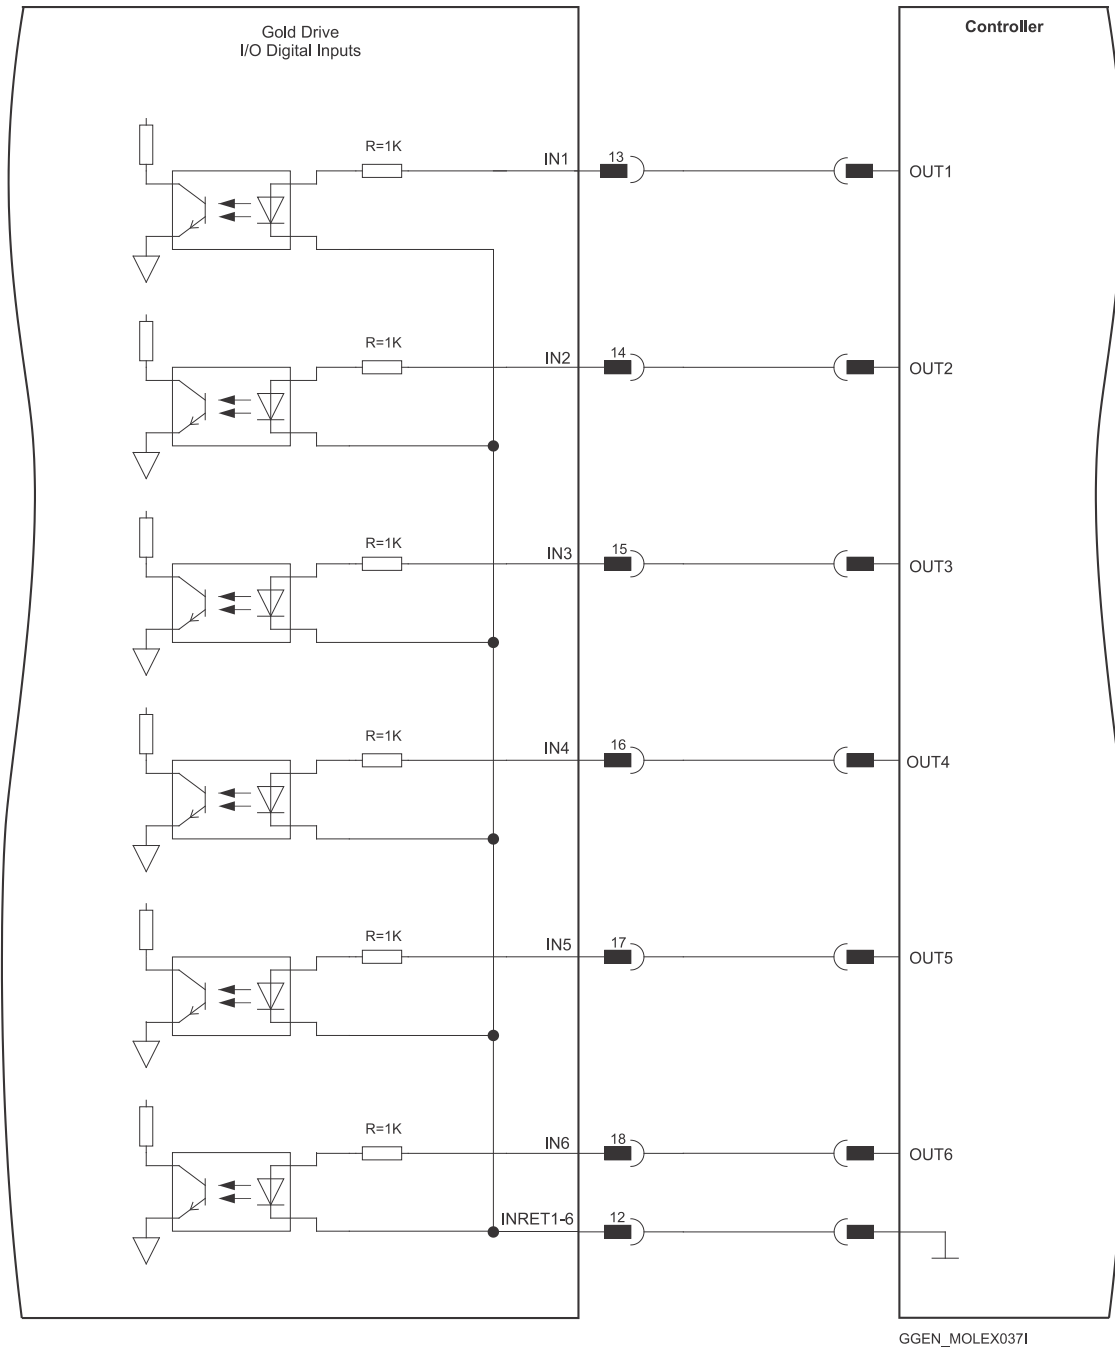


Figure 30: Digital Input TTL Mode Connection Diagram

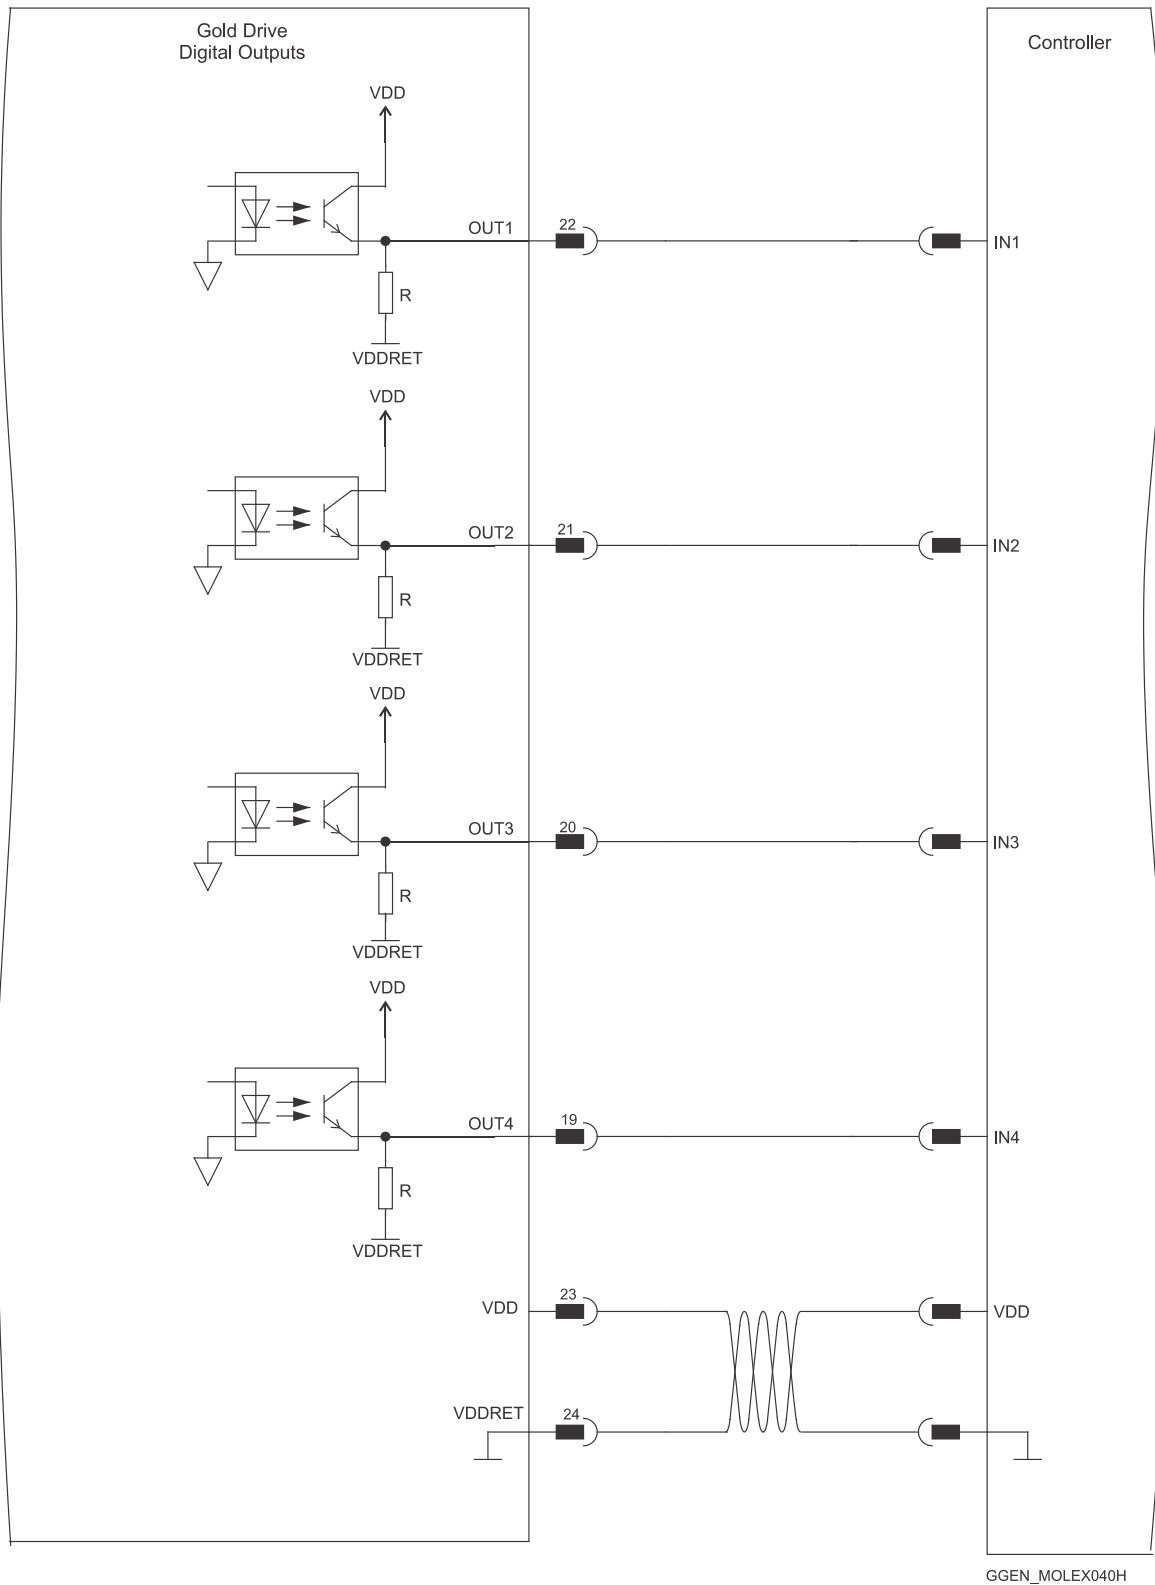


Figure 31: Digital Output Connection Diagram – TTL Option



7.8.4. Digital Input and Output PLC Source Mode

The following figure describes the connections at the I/O Port for the Digital Input and Output PLC Mode.

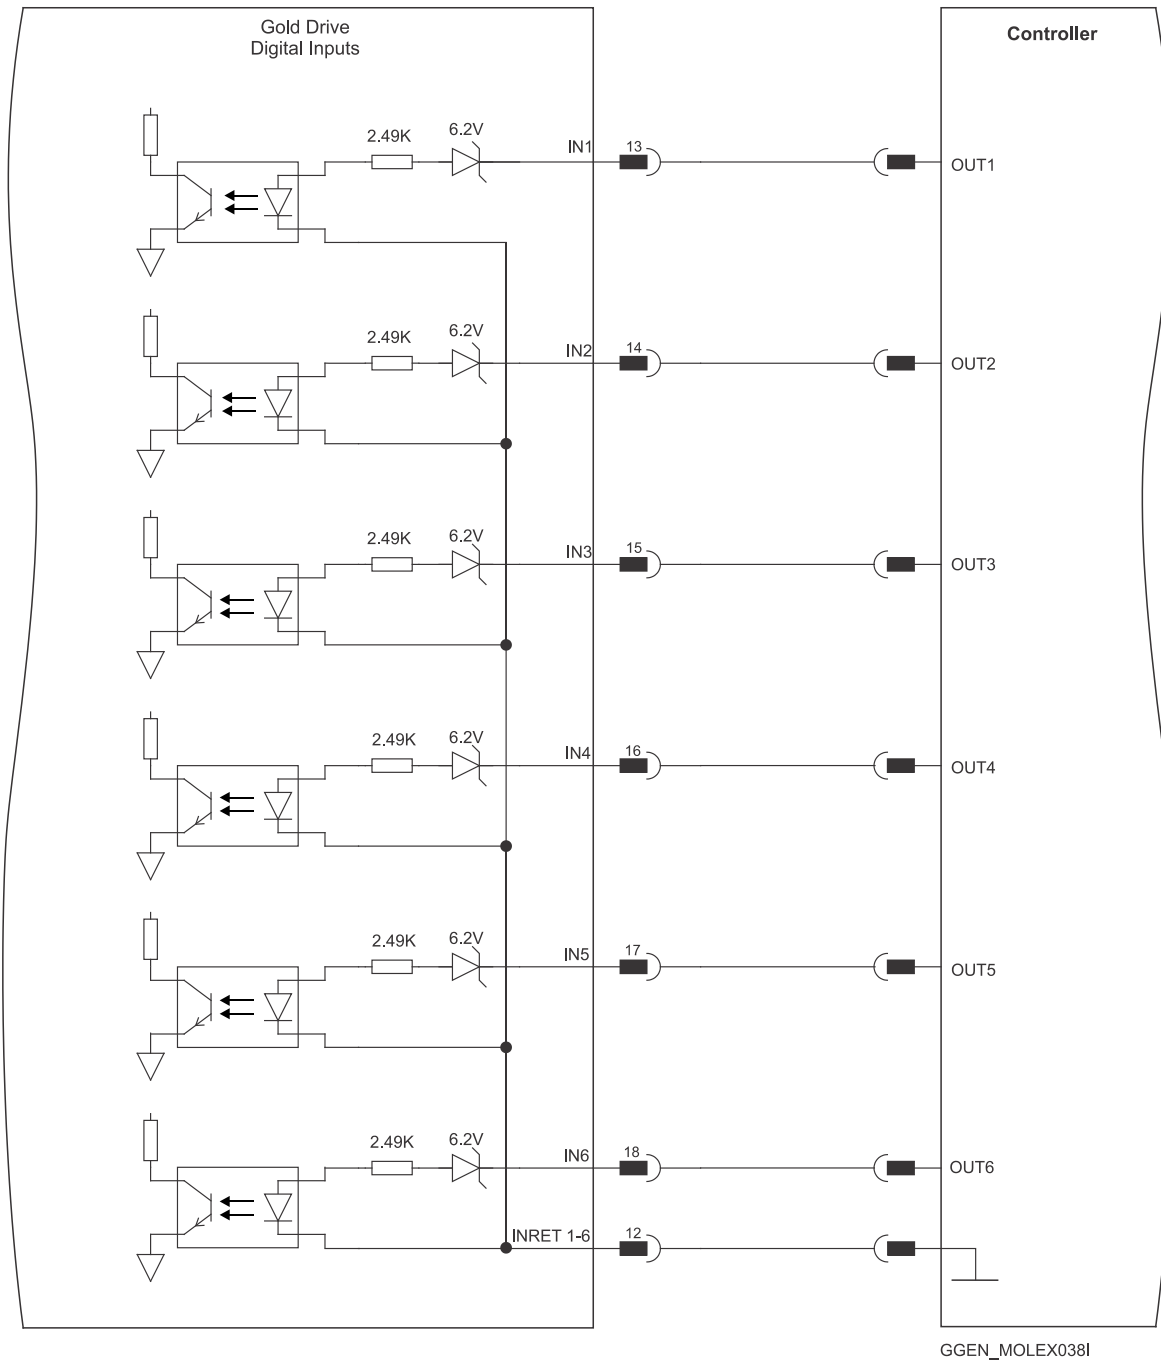


Figure 32: Digital Input Connection Diagram – Source PLC Option

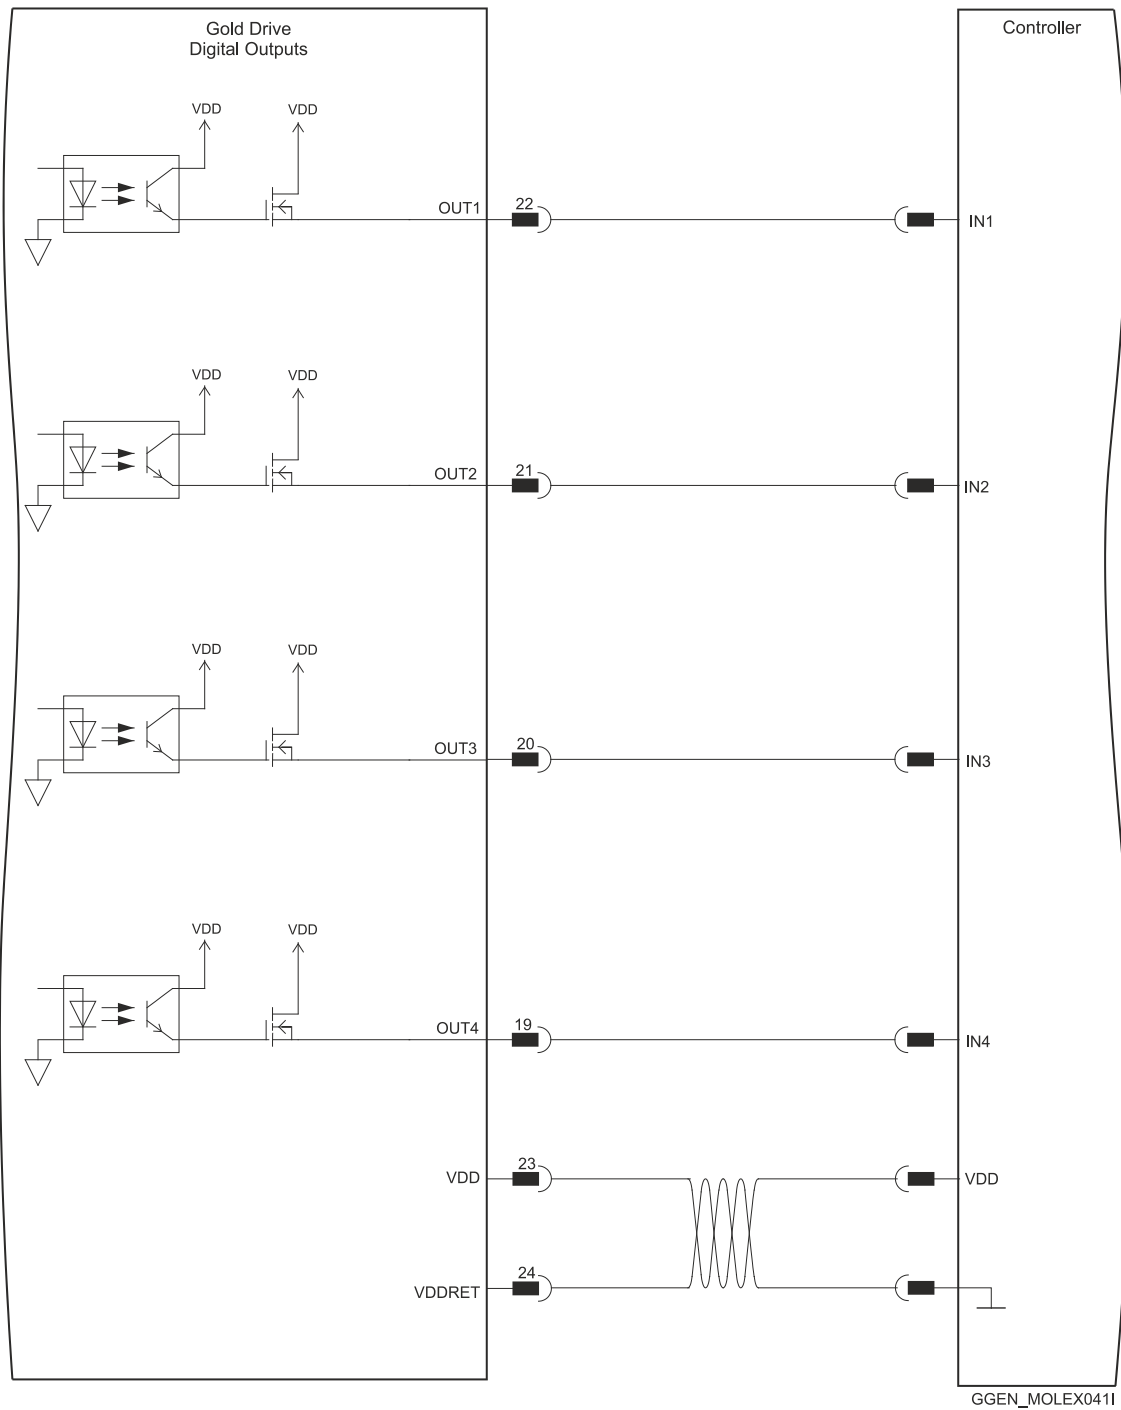


Figure 33: Digital Output Connection Diagram – Source PLC Option



7.8.5. Digital Input and Output Sink Mode

The following figure describes the connections at the I/O Port for the Digital Input and Output Sink Mode.

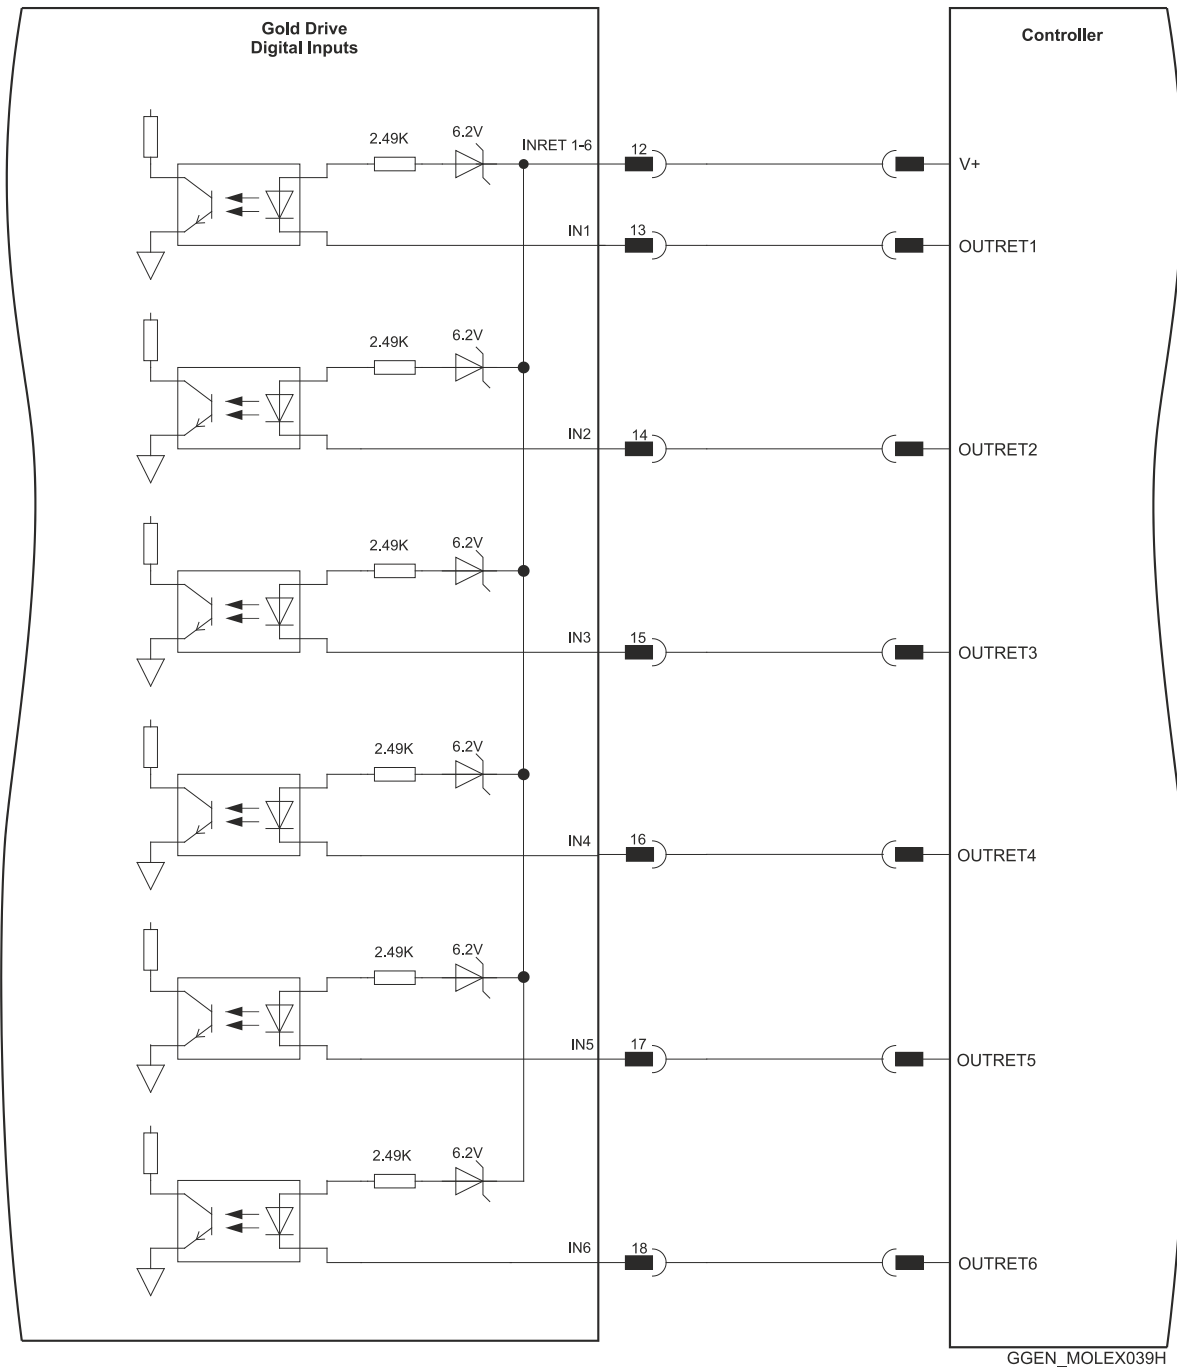


Figure 34: Digital Input Sink Mode – PLC voltage level Molex Type Connection Diagram

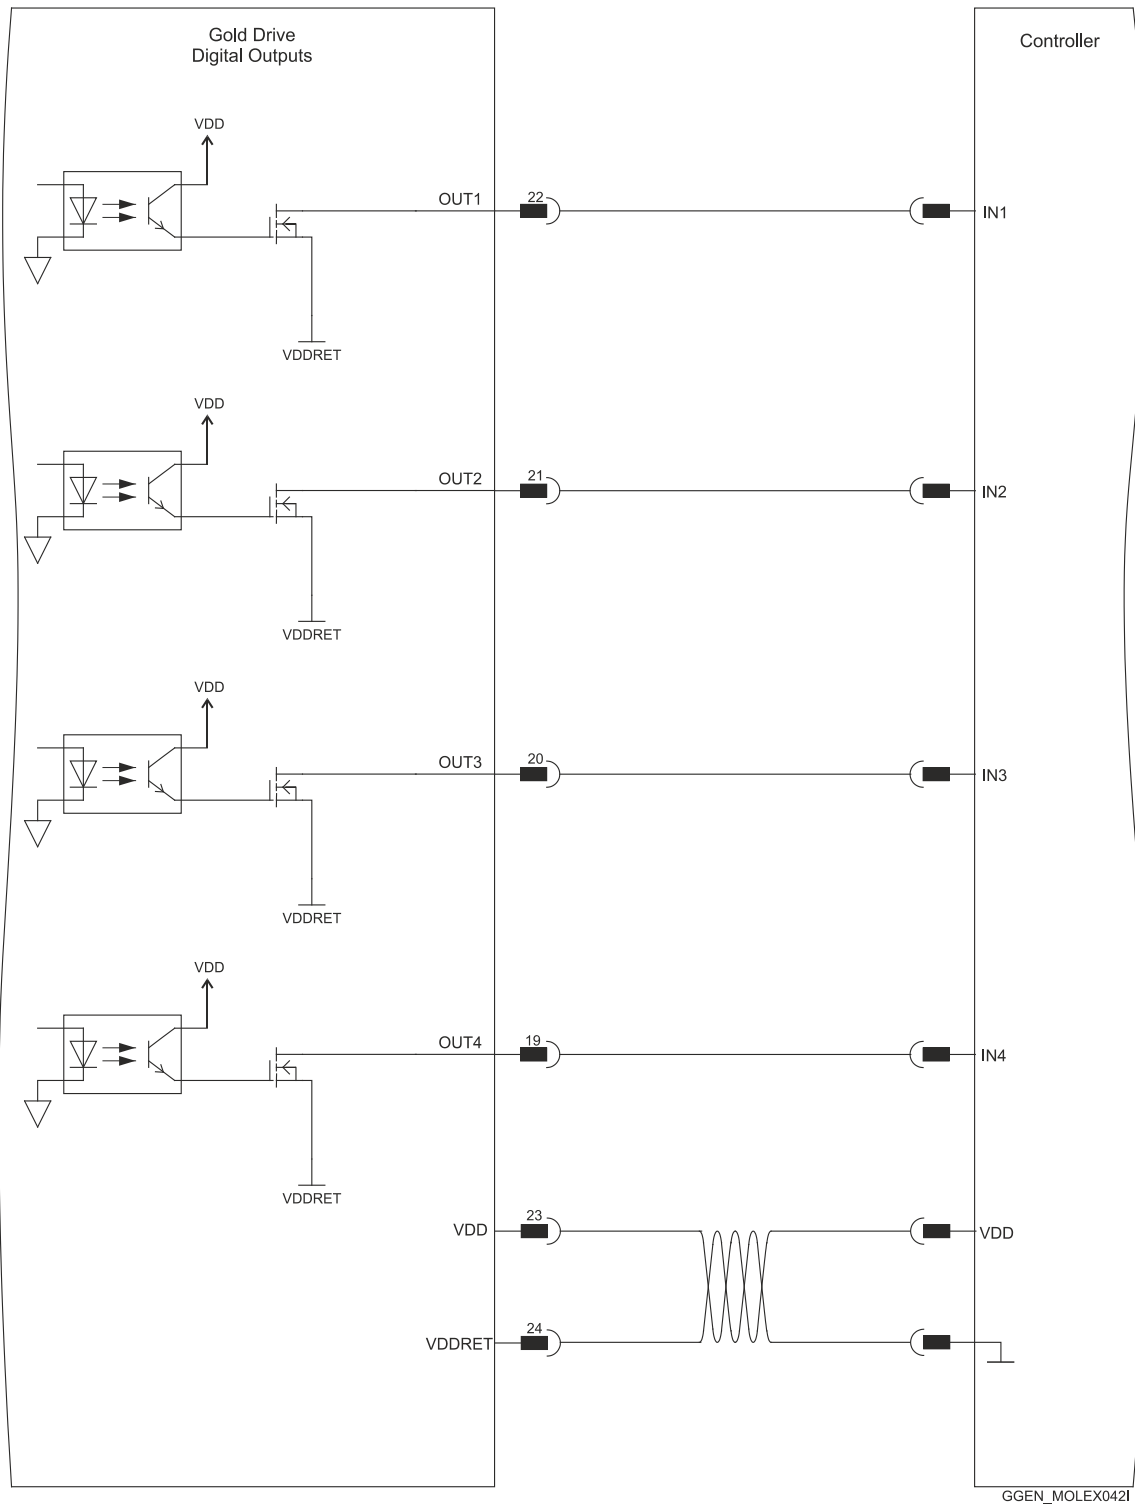


Figure 35: Digital Output as Sink Configuration Molex Type Connection Diagram



7.9. USB 2.0 (J9)

See Section 12.1 in the in the MAN-G-Panel Mounted Drives Hardware manual for full details.

Pin (J9)	Signal	Function
1	USB VBUS	USB VBUS 5 V
2	USBD-	USB _N line
3	USBD+	USB _P line
5	USB COMRET	USB communication return

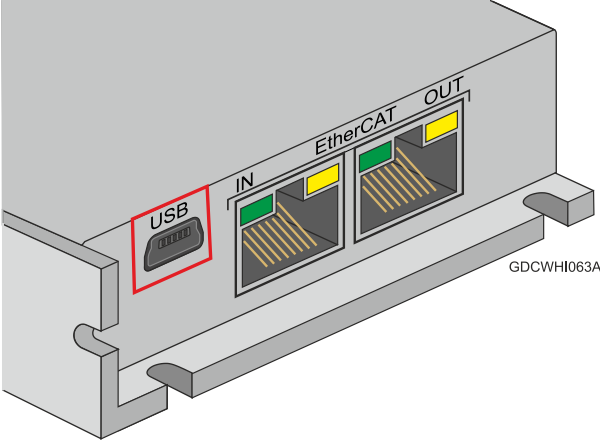
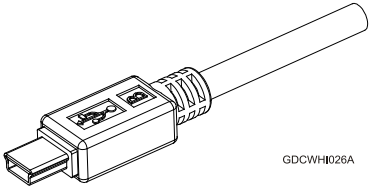
Pin Positions	Cable Connector
 <p>USB Device Mini-B</p>	 <p>USB Device Mini-B Plug</p>

Table 10: USB 2.0 Pin Assignments

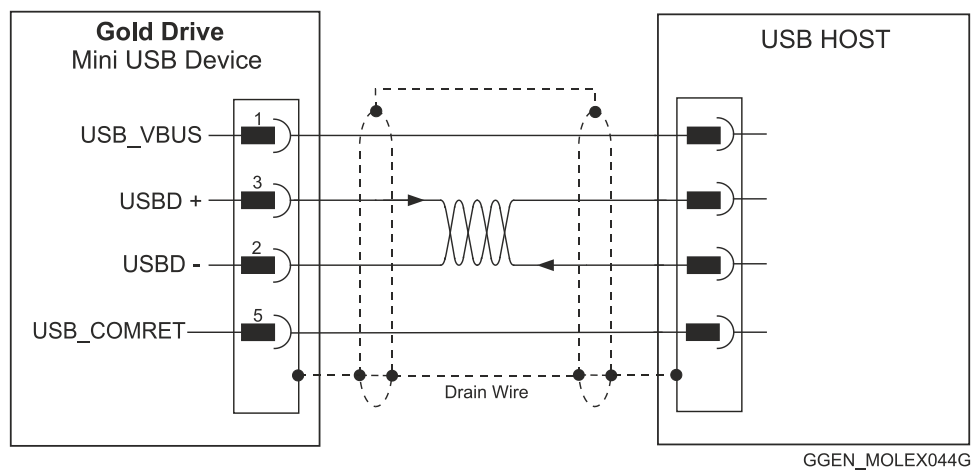


Figure 36: USB Network Diagram



7.10. EtherCAT Communication Version

Fieldbus communications are industrial network protocols for real-time distributed control that allows connection of servo drives. The Gold DC Whistle supports the following EtherCAT fieldbus type industrial network protocol:


Fieldbus Type	Product Number
EtherCAT	G-DCWHI XX/YYY XXX Q

7.10.1. EtherCAT IN/Ethernet Pin Assignments (J7)


Refer to section 12.2 in the MAN-G-Panel Mounted Drives Hardware manual for more details.

Pin (J7)	Signal	Function
1	EtherCAT_IN_TX+/Ethernet_TX+	EtherCAT in/Ethernet transmit +
2	EtherCAT_IN_TX-/Ethernet_TX-	EtherCAT in/Ethernet transmit -
3	EtherCAT_IN_RX+/Ethernet_RX+	EtherCAT in/Ethernet receive +
4, 5	N/A	
6	EtherCAT_IN_RX-/Ethernet_RX-	EtherCAT in/Ethernet receive -
7, 8	N/A	

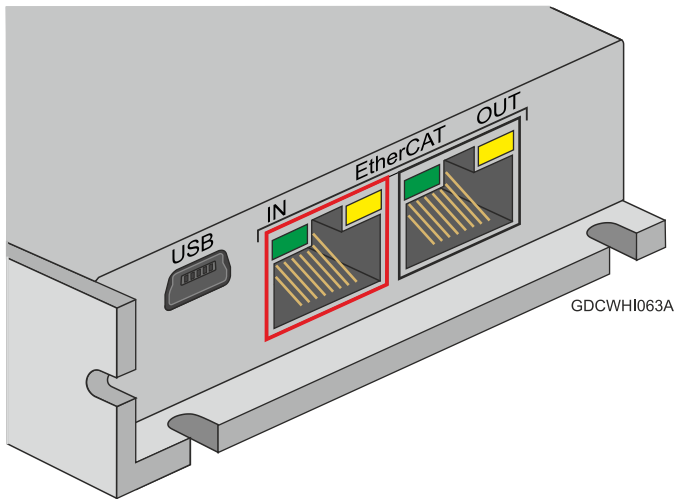Connectors



8-Pin RJ-45

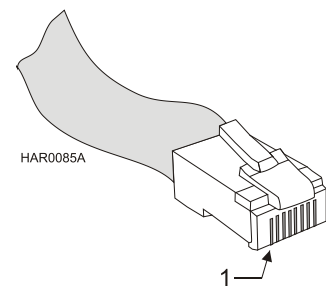

Standard Ethernet CAT5 Cable




7.10.2. EtherCAT OUT Pin Assignments (J8)


See Section 12.2 in the MAN-G-Panel Mounted Drives Hardware manual for the electrical diagram.

Pin (J8)	Signal	Function
1	EtherCAT_OUT_TX+	EtherCAT out transmit +
2	EtherCAT_OUT_TX-	EtherCAT out transmit -
3	EtherCAT_OUT_RX+	EtherCAT out receive +
4, 5	N/A	
6	EtherCAT_OUT_RX-	EtherCAT out receive -
7, 8	N/A	

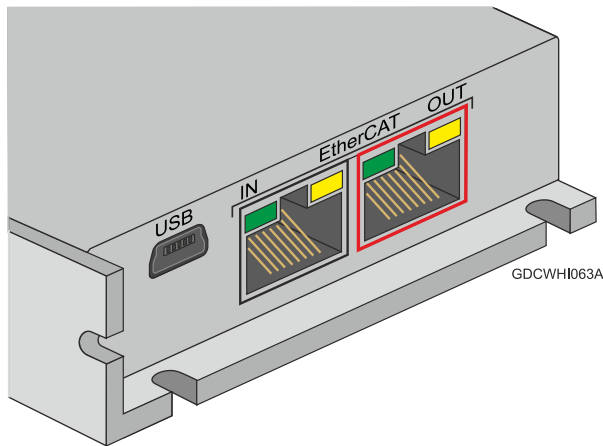Connectors



8-Pin RJ-45

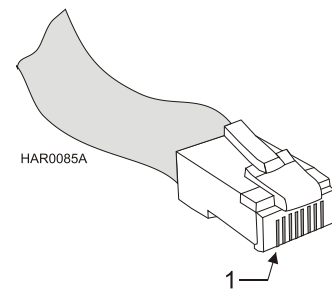

Standard Ethernet CAT5 Cable

7.10.3. EtherCAT Wiring

Figure 37 describes the wiring diagram for the EtherCAT connections.

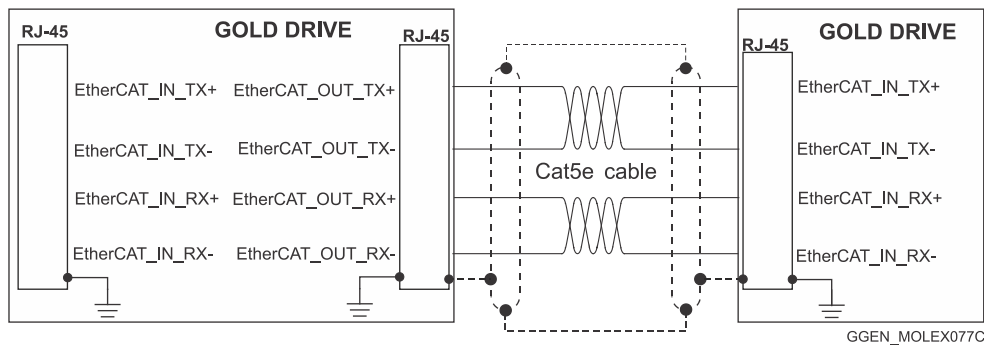


Figure 37: EtherCAT RJ-45 Connections



7.10.4. EtherCAT Status Indicator

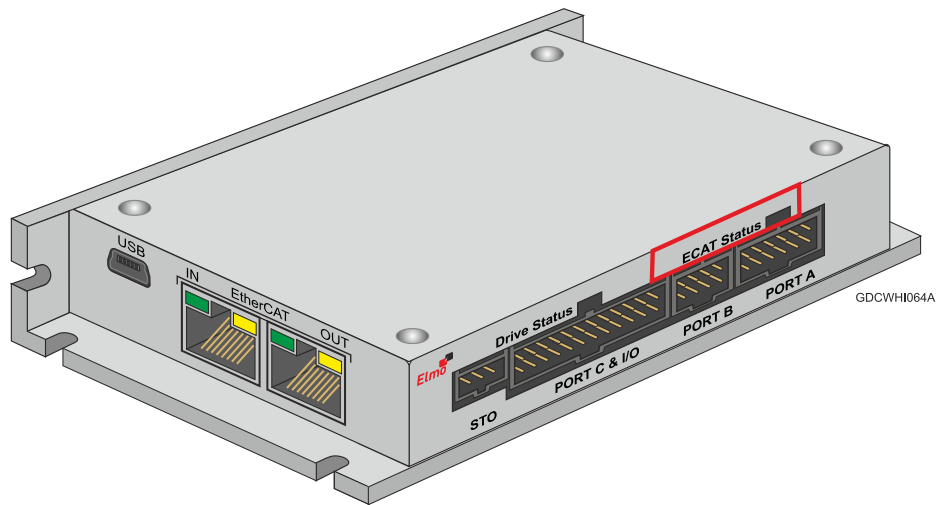


Figure 38: EtherCAT Status LED

The EtherCAT status indicator is a single red/green dual bi-colored LED that combines the green RUN indicator and the red ERROR indicator of the EtherCAT state machine. For further details, see the EtherCAT Application Manual.

Note: There is no Gold DC Whistle ECAT Status indicator equivalent in the CAN version, refer to the figure below.

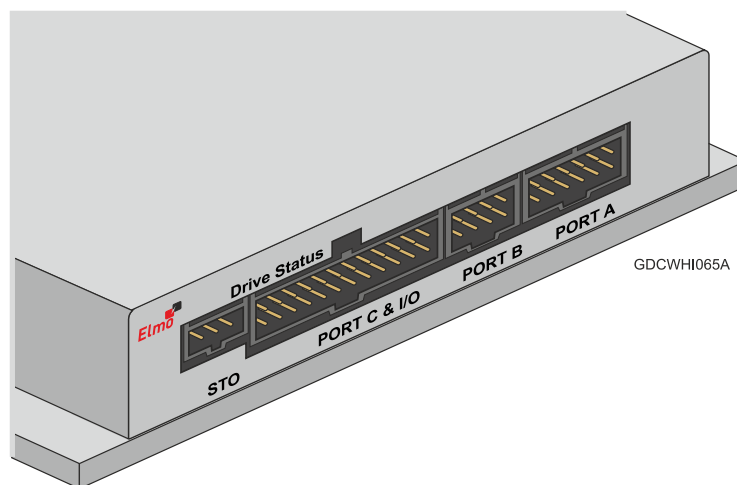


Figure 39: Gold DC Whistle Status Indicator - CAN



7.11. CAN Communication Version

Fieldbus communications are industrial network protocols for real-time distributed control that allows connection of servo drives. The Gold DC Whistle supports the following CAN fieldbus type industrial network protocol:

Fieldbus Type	Product Number
CAN	G-DCWHI XX/YYYYSXXQ

See Section 12.4 in the MAN-G-Panel Mounted Drives Hardware manual for the electrical diagram.

Pin (J7, J8)	Signal	Function
1	CAN_H	CAN_H bus line (dominant high)
2	CAN_L	CAN_L bus line (dominant low)
3	COMRET (CAN_RET)	CAN Return
4, 5	N/A	—
6	CAN_SHLD	Shield, connected to the RJ plug cover
7	CAN_RET	CAN Return
8	N/A	—

Pin Position

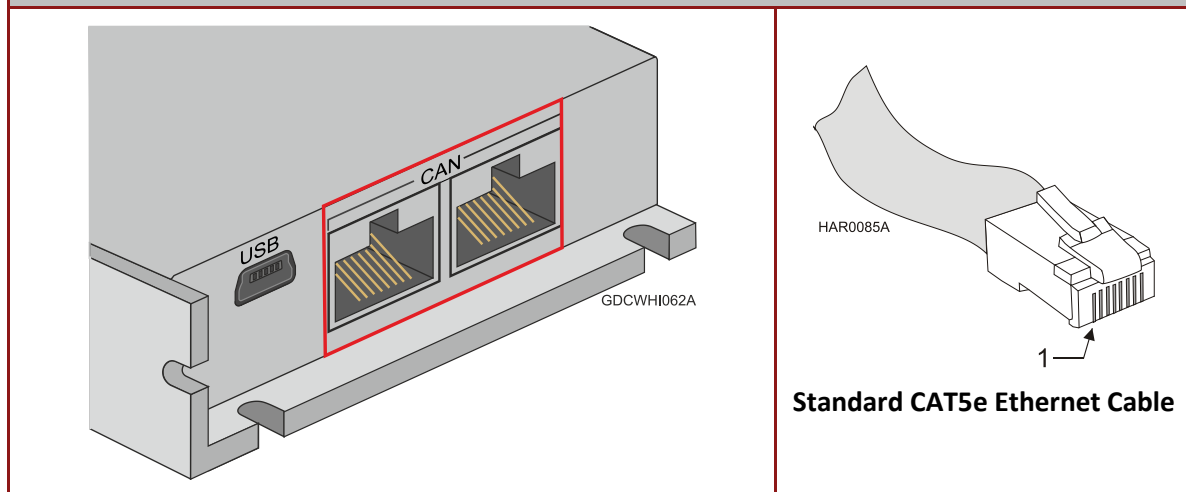


Table 11: CAN In/Out Connectors Pin Assignments



7.11.1. CAN Wiring

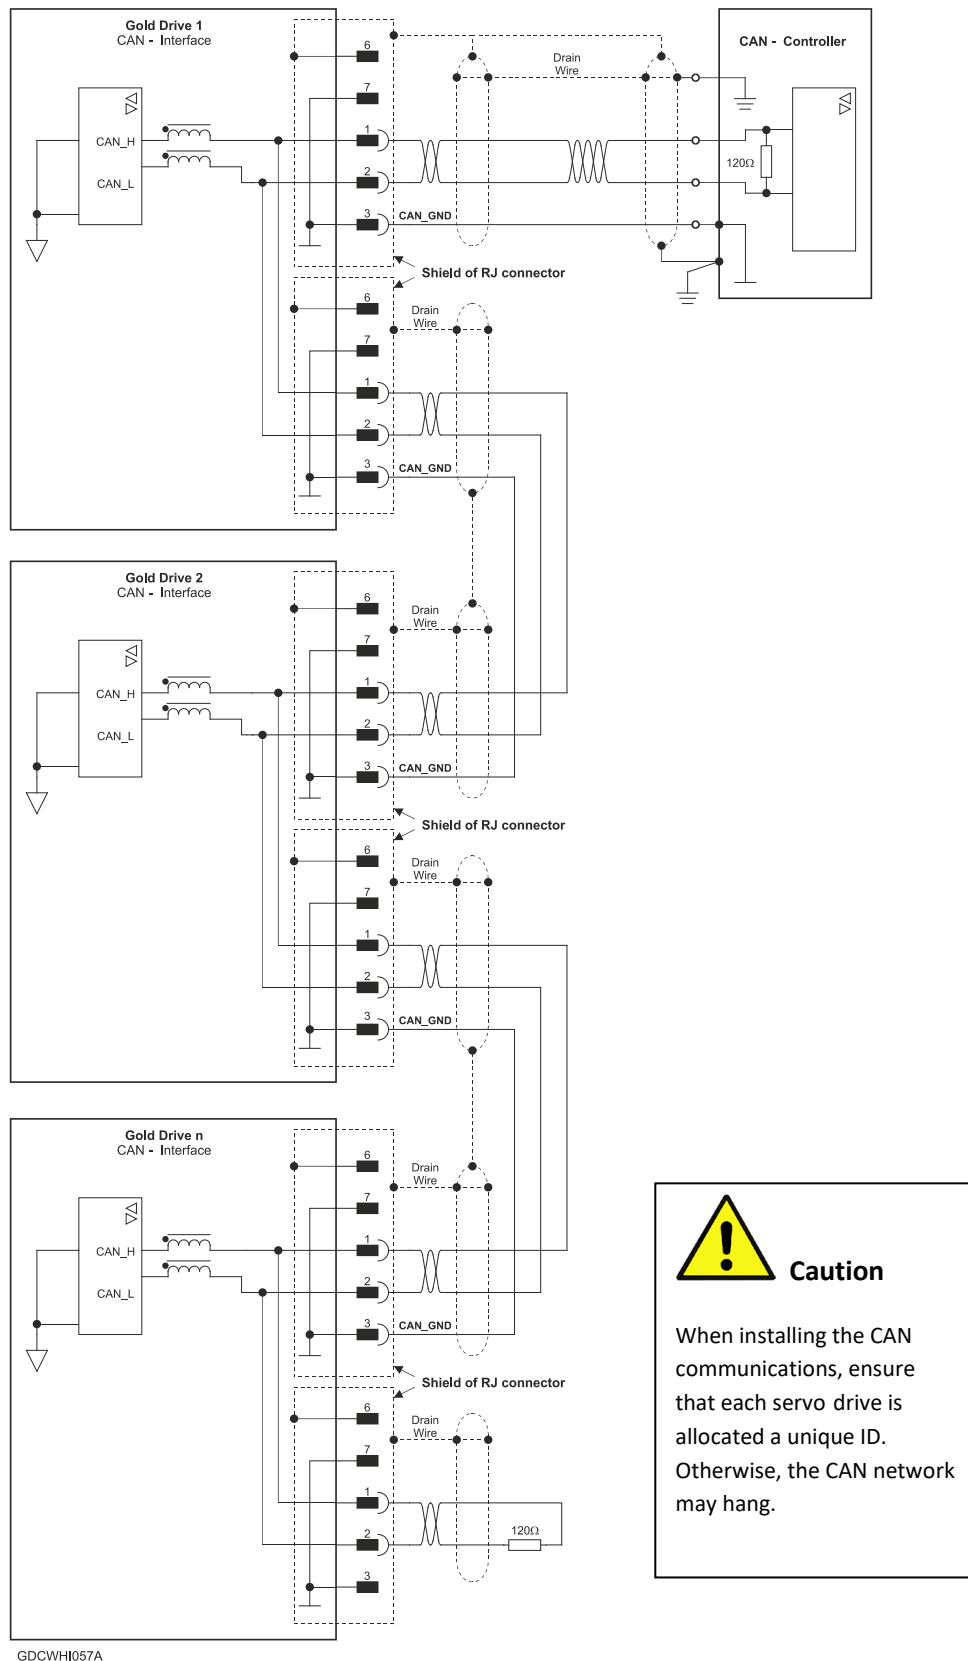


Figure 40: Gold DC Whistle Connection Diagram – CAN



7.12. Powering Up

After the Gold DC Whistle is connected to its device, it is ready to be powered up.



Caution:

Before applying power, ensure that the DC supply is within the specified range and that the proper plus-minus connections are in order.

7.13. Initializing the System

After the Gold DC Whistle has been connected and mounted, the system must be set up and initialized. This is accomplished using the *EASII*, Elmo's Windows-based software application. Install the application and then perform setup and initialization according to the directions in the *EASII User Manual*.



Chapter 8: Dimensions

This chapter provides detailed technical information regarding the Gold DC Whistle.

