

# SBA SERIES Installation & Operating Manual

Rev 8/06

## **SBA - SAFETY INSTRUCTIONS**

Read this page carefully before installation and use of the instrument, and follow all instructions in section 6 of Installation Procedures for safe installation of this product.

### **INTRODUCTION**

The following clauses contain information, cautions and warnings which must be followed to ensure safe operation and to retain the instrument in a safe condition.

As this product is intended for incorporation into a machine or end-product, the end product must comply with all safety aspects of the relevant requirements of the European Safety of Machinery Directive 89/392/EEC as amended, and with those of the most recent versions of standards EN60204-1 and EN292-2 at least.

Installation, adjustment, maintenance and repair of the instrument shall be carried out only by qualified personnel.

### **WARNINGS**

Any removal from the structure or removal of parts, except those to which access is permitted, is likely to expose live parts and accessible terminals which can be dangerous to live. If afterwards any adjustment, maintenance or repair of the opened instrument under voltage is inevitable, it shall be carried out only by a qualified person who is aware of the hazard involved.

The instrument shall be disconnected from all voltage sources before it is opened (for service method).

**Any interruption of the protective earth conductors inside the instrument, is likely to make the instrument dangerous.**

Components which are important for the safety of the instrument, may only be renewed by components obtained through Elmo service organization.

Before switching on, ensure that the instrument has been installed in accordance with the Installation Instructions.

Maximum DC supply according to the types described in the operating manual.

## How to use this manual - Flow Chart

The SBA amplifier represents a flexible design approach which enables the use of various feedback sensors and allows several modes of operation.

Use the following flow chart in order to determine the chapters that you should read. If you are a new user of the SBA, you should read chapters 1-4 which will familiarize you with the product.

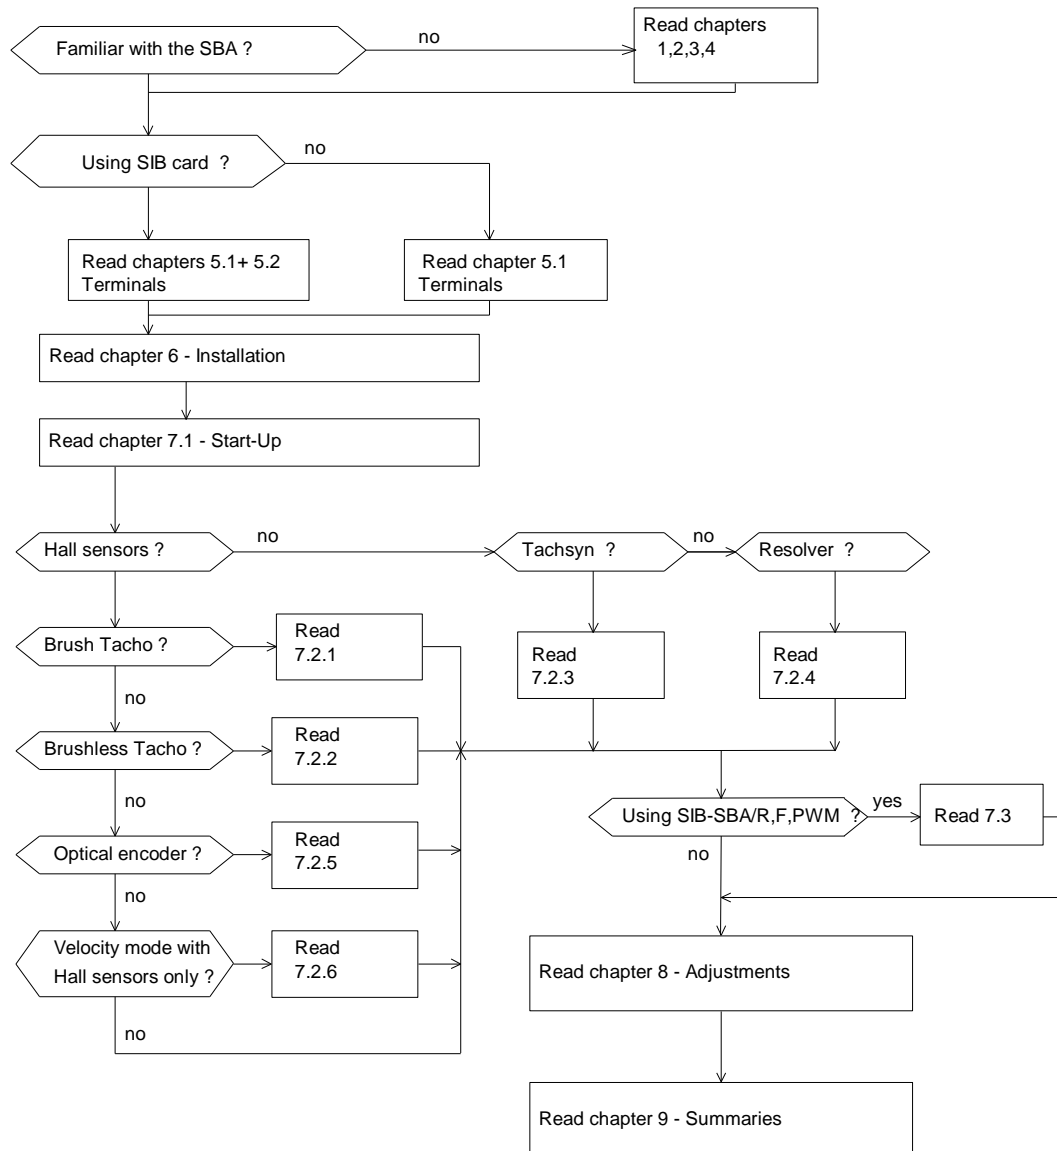


TABLE OF CONTENTS

<b>1. DESCRIPTION</b>	<b>7</b>
<b>2. TYPE DESIGNATION</b>	<b>9</b>
<b>3. TECHNICAL SPECIFICATIONS</b>	<b>10</b>
<b>4. OPERATION OF THE SERVO CONTROL</b>	<b>11</b>
<b>4.1 Inputs</b>	<b>11</b>
<b>4.2 Velocity mode</b>	<b>12</b>
<b>4.3 Velocity feedback sensors</b>	<b>13</b>
<b>4.4 Current mode</b>	<b>13</b>
<b>4.5 Current feedback</b>	<b>14</b>
<b>Current feedback multiplier</b>	<b>14</b>
<b>Current loop</b>	<b>14</b>
<b>4.6 Current limits</b>	<b>16</b>
4.6.1 Time dependent peak current limit	16
<b>4.7 Commutation signals format</b>	<b>17</b>
<b>4.8 Protective functions</b>	<b>18</b>
4.8.1 Short circuit protection	18
4.8.2 Under/over voltage protection	18
4.8.3 Temperature protection	18
4.8.4 Loss of commutation feedback	18
<b>5. TERMINAL DESCRIPTION</b>	<b>31</b>
<b>5.1 Terminals for H,B,T,R and E types</b>	<b>31</b>
<b>5.2 Terminals for SIB-SBA</b>	<b>36</b>

5.2.1 Terminal for SIB-SBA/R	36
5.2.2 Terminal for SIB-SBA/F	37
5.2.3 Terminal for SIB-SBA/PWM	38
<b>6. INSTALLATION PROCEDURES</b>	<b>40</b>
<b>6.1 Mounting</b>	<b>40</b>
<b>6.2 Wiring</b>	<b>40</b>
<b>6.3 Load inductance</b>	<b>41</b>
<b>6.4 DC power supply</b>	<b>41</b>
<b>6.5 Wiring diagrams</b>	<b>43</b>
<b>7. START - UP PROCEDURES</b>	<b>49</b>
<b>7.1 Common procedures for all amplifiers types</b>	<b>49</b>
7.1.1 Commutation signals format	49
7.1.2 CFM function	49
7.1.3 Inhibit logic	49
7.1.4 Current mode	53
7.1.5 Velocity mode	53
7.1.6 Selecting the reference signal gain	53
7.1.7 Static current limit adjustment	54
7.1.8 Latch mode of the protective functions	55
<b>7.2 Connecting the velocity feedback elements</b>	<b>56</b>
7.2.1 Brush Tachogenerator	56
7.2.2 Brushless Tachogenerator	56
7.2.3 Tachsyn	57
7.2.4 Resolver	58
7.2.5. Optical Encoder	65
7.2.6. Hall effect sensors	66
<b>7.3 SIB-SBA/R,F,PWM</b>	<b>67</b>
7.3.1 SIB-SBA/F	67

7.3.2 SIB-SBA/PWM	69
<b>8. AMPLIFIER ADJUSTMENT</b>	<b>70</b>
8.1 Balance adjustment	70
8.2 Dynamic current limit adjustment	70
8.3 Adjusting the motor speed (velocity mode only)	71
8.4 Response adjustment (Velocity mode only)	72
<b>9. TABLES AND SUMMARIES</b>	<b>74</b>
9.1 Adjusting trimmers - summary	74
9.2 LED diagnostics	74
9.3 DIP switches summary	74
<b>APPENDIX A - RESPONSE ADJUSTMENT - CURRENT LOOP</b>	<b>77</b>
<b>LIST OF ELMO SERVICE CENTERS</b>	<b>82</b>

## **1. Description**

The SBA is a miniature PWM, full wave, three phase servo amplifier designed for high performance brushless servo motors in the range of up to 0.7KW. It utilizes power MOSFETs and Surface Mounting Technology which contribute to its high efficiency and compact design. The SBA is constructed from two PCBs mounted on a heat sink plate. The lower board contains the power switching transistors which drive the motor, terminals for the power stage, the switch mode power supply and the protection logic. The upper PCB contains the control logic, commutation logic, terminals for the control stage, adjusting trimmers and indication LED's.

An optional third board is installed for velocity sensors others than a brush type tacho.

### **Standard Features**

- \* Internal DC to DC converter allows operation from a single supply.
- \* 20 KHz switching frequency (40KHz or 60KHz on request).
- \* 2KHz current loop response.
- \* 97% efficiency.
- \* Output voltage is up to 90% of input voltage.
- \* Zero deadband.
- \* Better than 1% linearity.
- \* 2 inputs.
- \* Motor current monitor.
- \* Operation in velocity or current mode.
- \* Remote inhibit.
- \* Inhibit/fault indication (logic level).
- \* Latch/self-restart modes for protective functions.
- \* Adjustable compensation.
- \* External current limit inputs.
- \* Current feedback multiplier.
- \* Input balance (offset).
- \* LED diagnostics.
- \* Removable terminals (Panel mount type) for easy installation and service.
- \* Standard commutation sensors: Hall effect, Resolver, or Tachsyn.

\* Outputs voltages of +5V and  $\pm$ 13V for external use.

The amplifier is fully protected against the following faults:

- Under/over voltage.
- Shorts between: outputs, output to ground.
- Excess temperature.
- Loss of commutation signals.

### **SIB-SBA**

The SIB-SBA is an interface board for the SBA that is used to convert the SBA flat ribbon connector to screw type Phoenix terminals. This board has the same size as the SBA board and it can be assembled as an add-on card on top of any SBA amplifier or as a separate panel mount unit.

The SIB-SBA is connected to the SBA amplifier via a 26 wires ribbon cable.

Three derivatives of the basic SIB-SBA are available in addition to the basic SIB-SBA:

#### **- SIB-SBA/R**

In this option the following features are included:

- Buffered and differential outputs for the encoder channels.
- Inhibit output relay
- Inhibit input optocoupler

#### **- SIB-SBA/F**

In this option the following features are included:


- Buffered and differential outputs for the encoder channels.
- Inhibit output relay
- Inhibit input optocoupler
- Differential amplifier for input 1 (terminal 26)
- Linear Acc/Dec (for input 1) adjustable by trimmers.

- **SIB-SBA/PWM**

In addition to the features of the SIB-SBA/R, this option includes an opto-isolated decoding circuit for a PWM and direction reference input. The output of this circuit is fed into input 1 (terminal 26).

This option is useful when the reference signal comes from a position controller like the LM629.

## 2. Type Designation

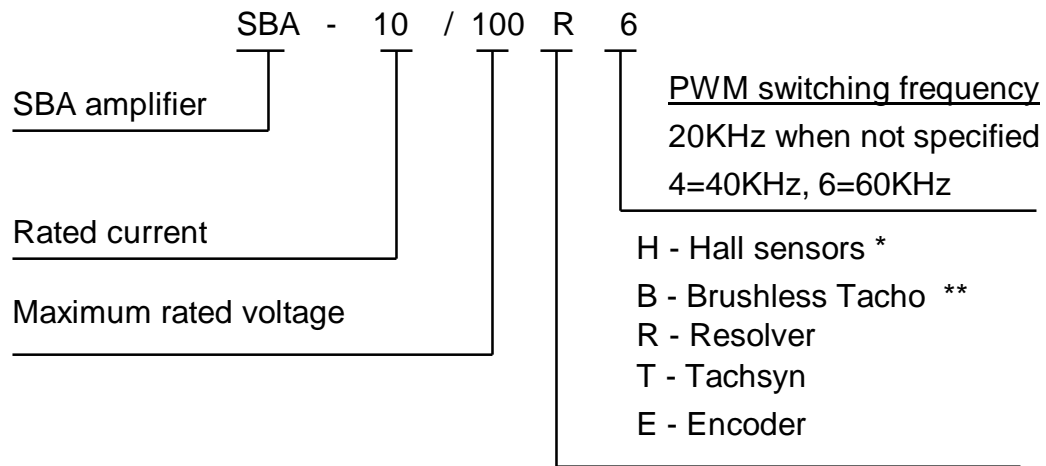

\* The Hall effect version accepts a brush tachogenerator for velocity feedback and Hall effect sensors for commutation.

\*\* The B and E versions require Hall effect sensors for commutation.

### **3. Technical specifications**

Type	DC Supply Min.- Max.(V) *	Current limits Cont./Peak(A)	Size (mm)	Weight Kg
SBA-10/100	20-94	10/20	130x78x30	0.3
SBA-5/200	40-195	5/10	130x78x30	0.3
SBA-2.5/330	90-330	2.5/5	130x78x30	0.3

- \* DC output voltage is 90% of DC input voltage.
- \* 20KHz, 40KHz or 60KHz switching frequency.
- \* 2KHz current loop response (minimum)
- \* Outputs voltages of +5V,  $\pm$ 13V for external use.
- \* Efficiency at rated current - 97%.
- \* Drift: 10 $\mu$ V/ $^{\circ}$ C (referred to input)
- \* Operating temperature: 0-50 $^{\circ}$ C.
- \* Storage temperature: -10 - +70 $^{\circ}$ C.

#### **Resolver option features:**

- 10, 12, 14 and 16 bit resolution, set by user.
- Maximum tracking rate 1040 rps (10 bit).
- Encoder A,B outputs + programmable index output.

#### **Optical encoder velocity feedback features:**

- Maximum input frequency: 800KHz
- Speed regulation: 500:1
- Encoder frequency: x1 or x4
- Encoder output voltage range: 2-30V
- Output supplies: 5V/50mA, 12V/20mA.

---

\* These are the absolute minimum-maximum DC supply voltage under any condition.

## 4. Operation of the servo control

### 4.1 Inputs

The SBA has 2 inputs: single ended input (terminal 26) and a differential input (terminals 11,12). The current gain of terminal 26 (current mode) is given by:

$$G_c = \frac{0.533 \times I_c}{1 + 0.11 \times R_3} \quad (\text{Amp/Volt}), \quad R_3 \text{ in Kohm}$$

$I_c$  - amplifier rated continuous current

The current gain of the differential input for  $R_7=R_8$  (current mode) is given by:

$$G_{c_d} = \frac{5.33 \times I_c}{R_7} \quad (\text{Amp/Volt})$$

$R_7$  in Kohm

The current gain in velocity mode is given by (place the appropriate  $G_c$  for each input):

$$G_v = \frac{50 \times G_c}{R_5} \quad (\text{Amp/Volt}), \quad R_5 \text{ in Kohm}$$

All the gains are divided by 2 if CFM is ON

The maximum input voltage at terminal 26 is calculated by:

$$V_{26\text{max}} = 8 + 0.9R_3 \quad (\text{Volts}), \quad R_3 \text{ in Kohm}$$

## 4.2 Velocity mode

In the velocity mode, op amp U1/2 is employed as a high gain error amplifier. The amplifier sums velocity command and the velocity feedback signal, and provides the necessary servo compensation and gain adjustments, resulting in stable, optimum servo operation.

This op amp is configured with two feedback paths:

One, in the form of a resistive T network, controls the DC gain of this amplifier. The equivalent value of a T network is given by:

$$R_f = \frac{10^{10}}{R5} \quad (\text{Ohm})$$

Resistor R5 is mounted in solderless terminals so it can be changed easily whenever the DC gain of the error amplifier is to be changed. The AC gain is controlled by C2, R4 and T1. Maximum AC gain is obtained with T1 set fully CCW. Setting T1 fully CW removes AC gain and no lag in response occurs. R4 and C2 are mounted in soldering terminals and can be easily replaced in cases when T1 range is not enough to get optimum response (See 8.4 for details).

The output of the error amplifier is:

$$V_o = (V_{26} \times G_{V26} + V_d \times G_d) \times \left[ \frac{1 + S \times C2 \times R4}{1 + S \times C2 \times R4 (1 + R_f \times K / R4)} \right]$$

V<sub>26</sub> - Input signal at terminal 26.

G<sub>V26</sub> - Gain of input in terminal 26.

V<sub>d</sub> - Input signal at the differential inputs (terminals 11,12).

G<sub>d</sub> - Gain of differential input.

K = Position factor of the wiper of T1.

Full CCW = 1

Full CW = 0.01

### 4.3 Velocity feedback sensors

There are three (optional) boards that are installed on top of the SBA for processing velocity sensors other than brush tacho:

#### E (Optical Encoder/Hall Sensors):

The encoder interface gives a bi-directional velocity feedback for 4-Q speed control when using an optical encoder or Hall effect sensors.

- Encoder: Two channels with 90° phase shift are required.
- Hall sensors: the commutation sensors can be used for high speed applications.

#### B (Brushless Tacho) and T (Tachsyn):

- Three phase brushless tacho (30°/60° Hall effect can be selected).
- Two phase brushless tachogenerator: the logic board accepts the two independent Hall effect signals for commutating the two windings.
- Tachsyn: the logic board provides the oscillator for the Tachsyn.

#### R (Resolver):

- Resolver: A flexible oscillator for various types of resolvers is provided.

For the above mentioned "brushless" sensors, the velocity output of the velocity processor is internally connected to terminal 1 that serves also as velocity monitor.

A filtering capacitor, C2, is placed in parallel to R4 to minimize noise carried on the input signals. This is especially beneficial when employing motors where a significant degree of electromagnetic coupling is present between armature and Tachogenerator. Values in the range of 1000pF - 6800pF are recommended.

### 4.4 Current mode

In order to operate the servo amplifier as a current amplifier, the velocity loop should be disabled. This is done by converting the error amplifier into a low gain DC amplifier which has a flat response beyond the desired current bandwidth. In this mode, R5 and C2 have to be removed from the circuit.


Current mode operation with Resolver or Tachsyn options requires that the input resistor of the velocity signal will be removed.

## 4.5 Current feedback

### Current feedback multiplier

#### Current loop

Three current feedbacks are obtained by measuring the voltage drop across current sensing resistors. These three signals are synthesized and multiplexed which result in a single voltage signal proportional to phases currents. It is then compared to the error amplifier output. The error is processed by the current amplifier to provide a voltage command to the PWM section. The actual motor current can be monitored by measuring the voltage at terminal 20. The current monitor scale is given in 8.2.

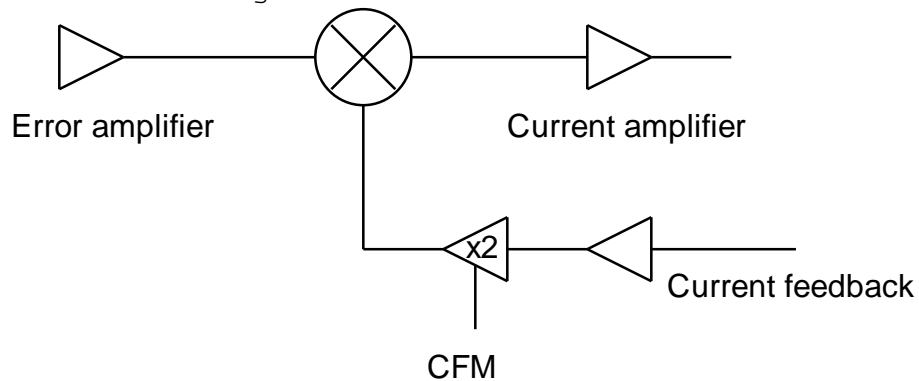

Current loop control is obtained by op amp U1/3 (current amplifier) and R6, C1 which form a lag-lead network for current loop. The standard amplifier is equipped with R6 and C1 to get optimum current response for an average motor in this power range. These components are mounted in solderless terminals.

The amplifier is equipped with Current Feedback Multiplier (CFM). By turning DIP switch 4 to ON the signal of the current feedback is multiplied by 2 and consequently the following changes occur:

- Current gains are multiplied by 2.
- Current monitor is divided by 2.

- Current limits are divided by 2.
- Dynamic range is improved.
- Commutation ripple is reduced.

This function should be activated whenever the rated current AND the peak current of the motor are less than 20% of the amplifier rated continuous and peak limits respectively.

Sometimes, oscillations may occur in the current loop due to the fact that the feedback gain was multiplied. This can be resolved by substituting R6 with a lower value.

### 4.6 Current limits

The servo amplifier can operate in the following voltage-current plane:

-Ip	-Ic	+V	Ip
Intermittent zone	Continuous zone	Ic	Ip
		-V	

Ic - Continuous current      Ip - Peak current

Fig. 4.1: Voltage-Current plane

Each amplifier is factory calibrated to have this shape of voltage-current operating area with rated values of continuous and peak current limits. In addition the peak current limit is time dependent as explained in 4.6.1.


#### 4.6.1 Time dependent peak current limit

The peak current is so designed that its duration is a function of the peak amplitude and the motor operating current. The maximum peak current is available for 1 second. The duration of Ip is given by:

$$T_p = 2.2 \ln \frac{I_p - I_{op}}{I_p - I_c}$$

Iop - Actual operating current before the peak demand.

4.7 Commutation signals format

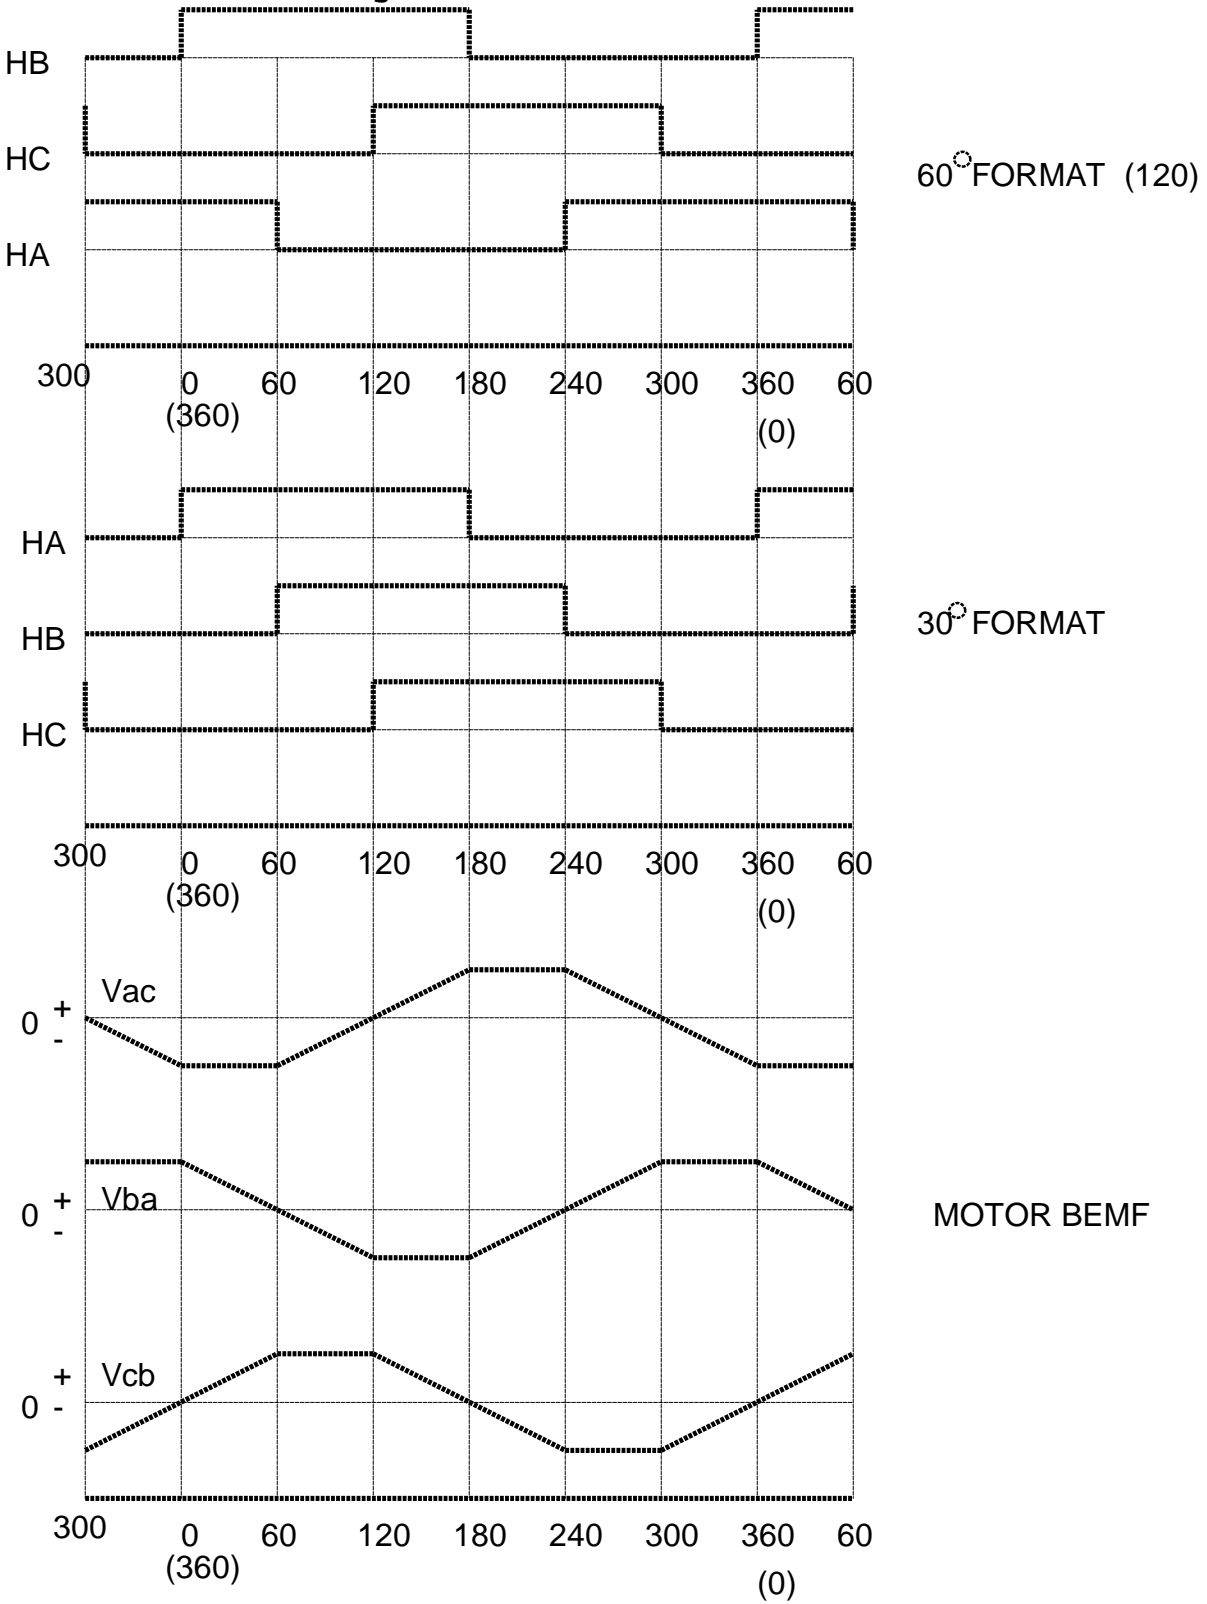

## **4.8 Protective functions**

All the protective functions activate internal inhibit. There are two modes of resetting the amplifier after the cause of the inhibit disappears: Auto Restart and Latch. Self Restart (DS6-OFF): The amplifier is inhibited only for the period that the inhibit cause is present. Latch (DS6-ON): All failures latch the Inhibit and the In LED. For restart (after clearing the failure source), reset has to be performed either by turning DS6 to "OFF" or by applying logic 0 at the reset input (terminal 19).

### **4.8.1 Short circuit protection**

The short circuit protection uses the capability of the power MOSFET to tolerate high energy peaks for short periods of time. This protection is realized by sensing current in the DC line. Every current peak above a certain value will inhibit the amplifier for a period of approx. 30mS. If a short circuit condition still exists, the cycle will repeat endlessly. The amplifier is protected against shorts between outputs and output to ground.

### **4.8.2 Under/over voltage protection**


Whenever the DC bus voltage is under or over the limits indicated in the technical specifications, the amplifier will be inhibited.


### **4.8.3 Temperature protection**

Temperature sensor is mounted on the heatsink. If, for any reason, the temperature exceeds 85°C the amplifier will be inhibited. The amplifier will restart when the temperature drops below 80°C.


### **4.8.4 Loss of commutation feedback**


Lack of either of the commutation signals will inhibit the amplifier.

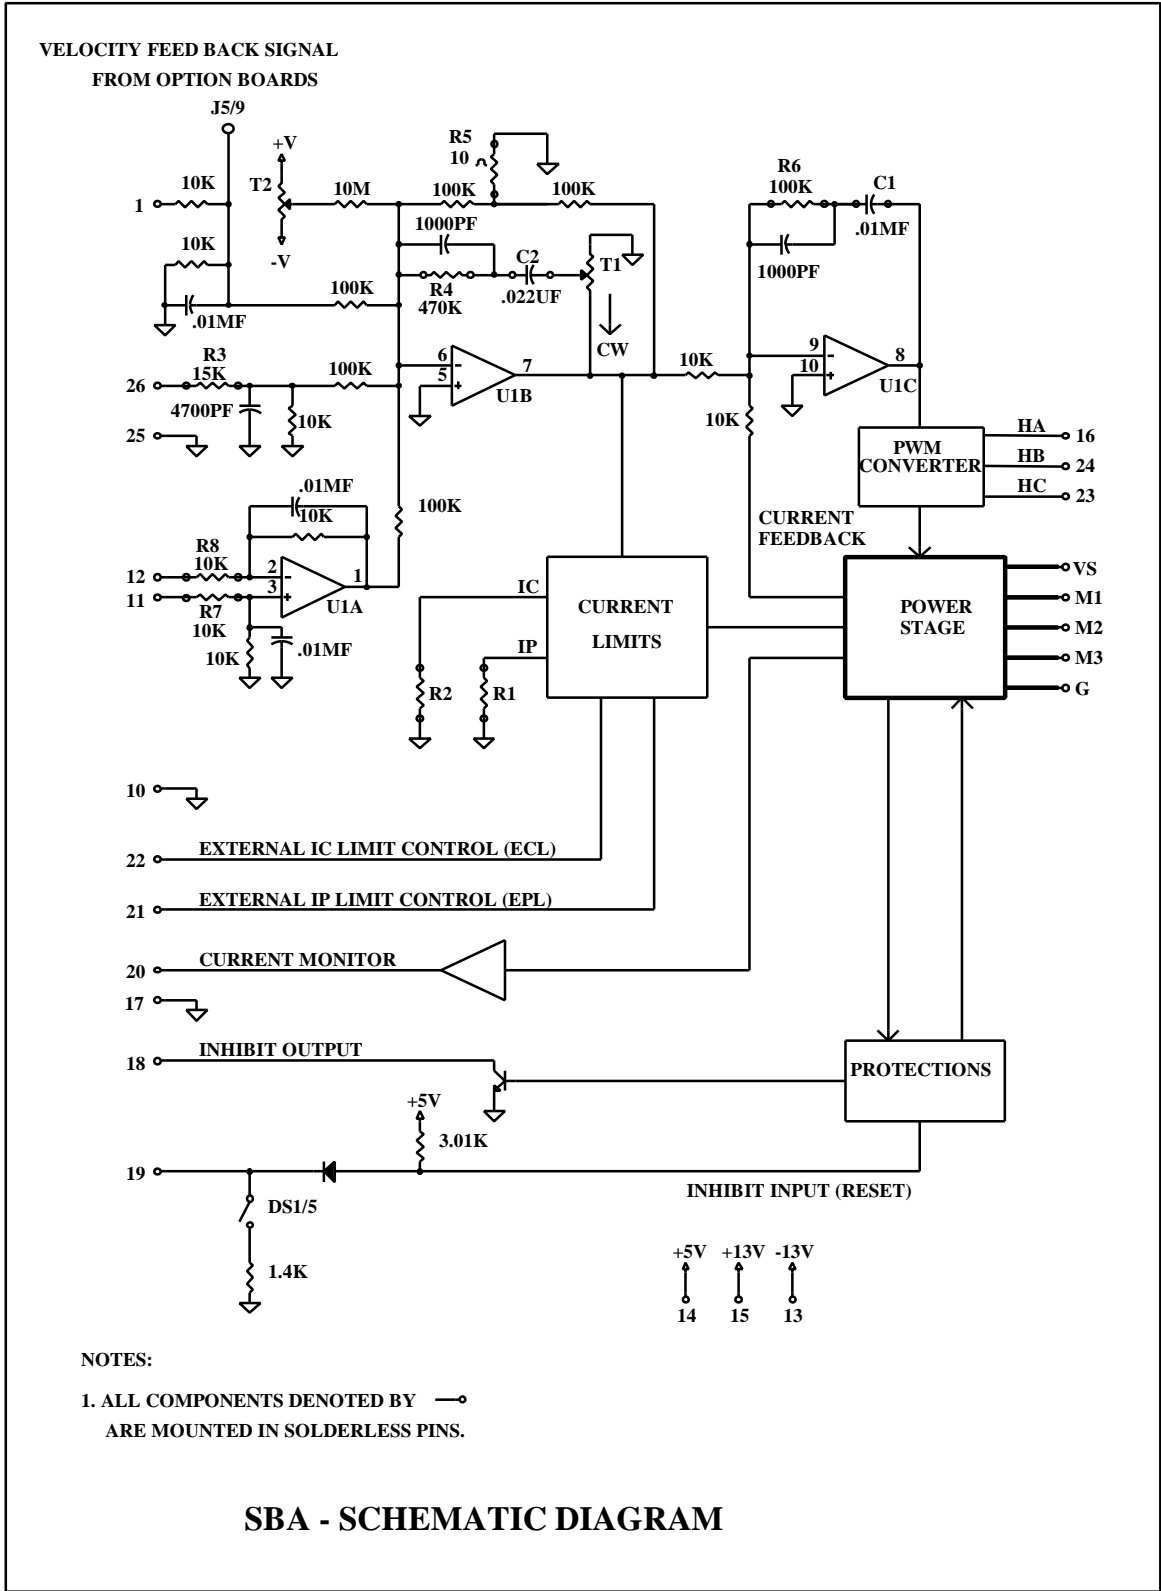

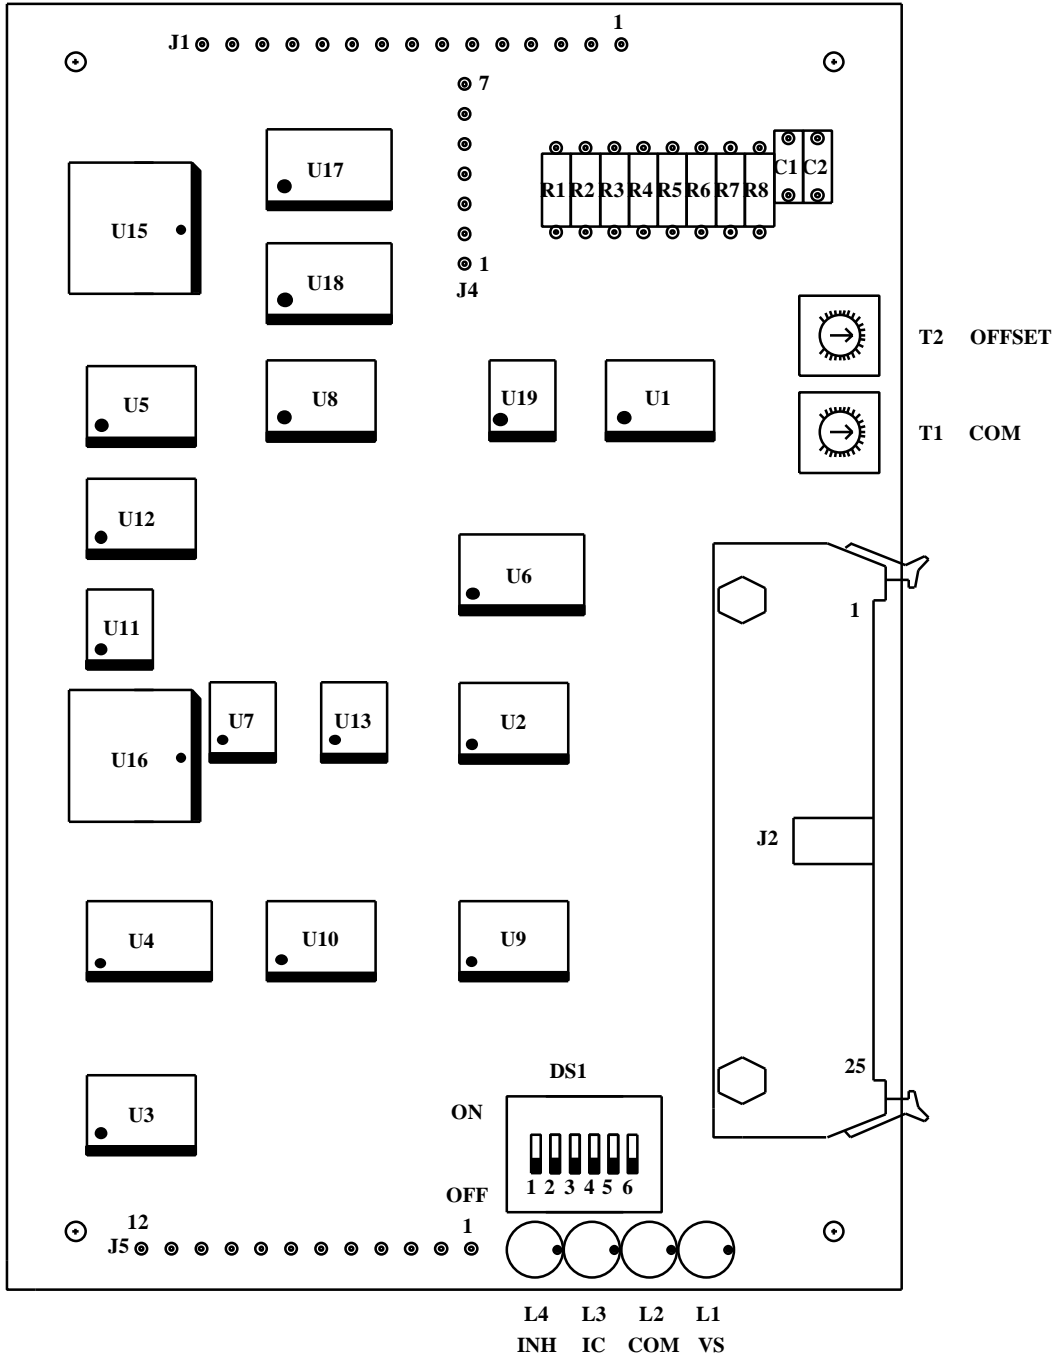



# SBA - CONTROL BOARD

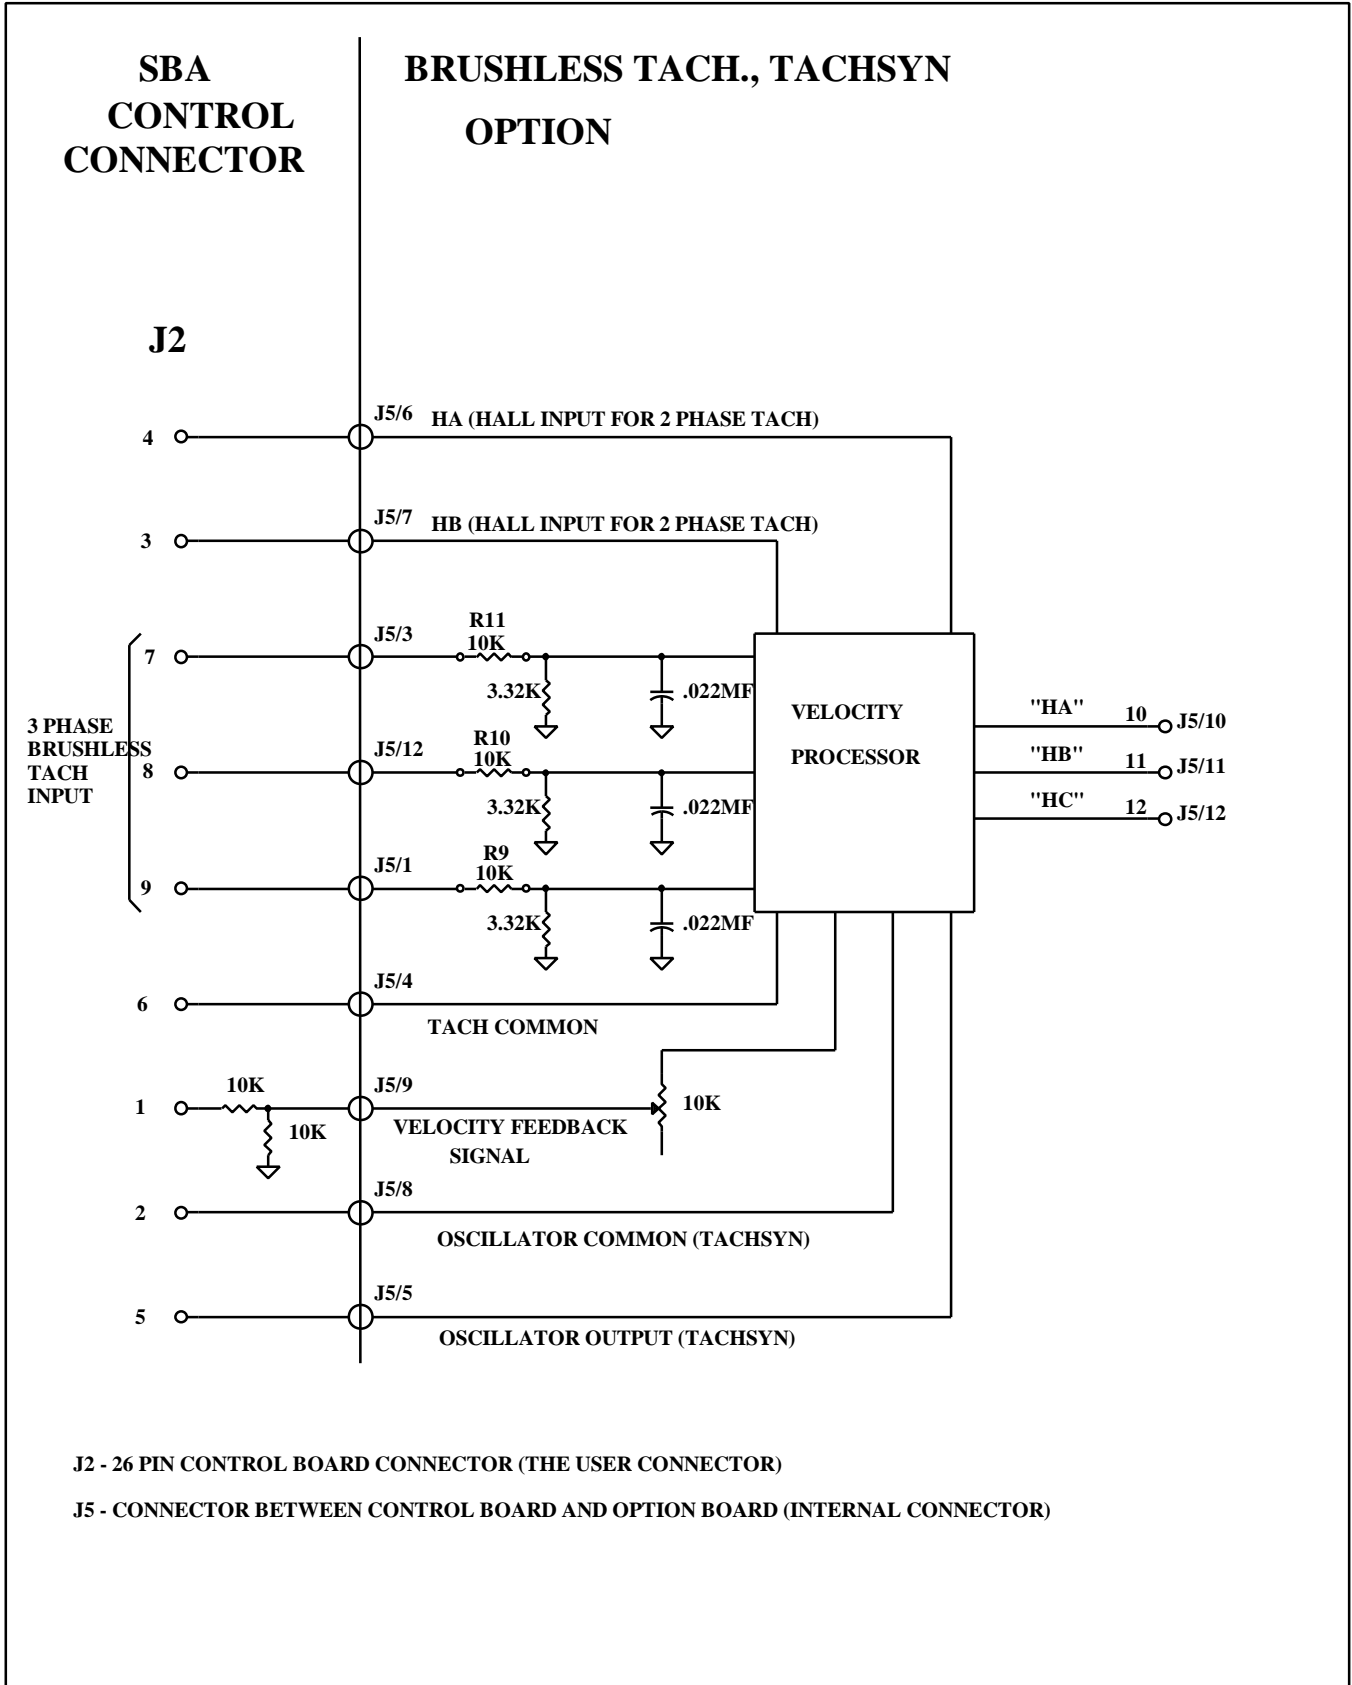

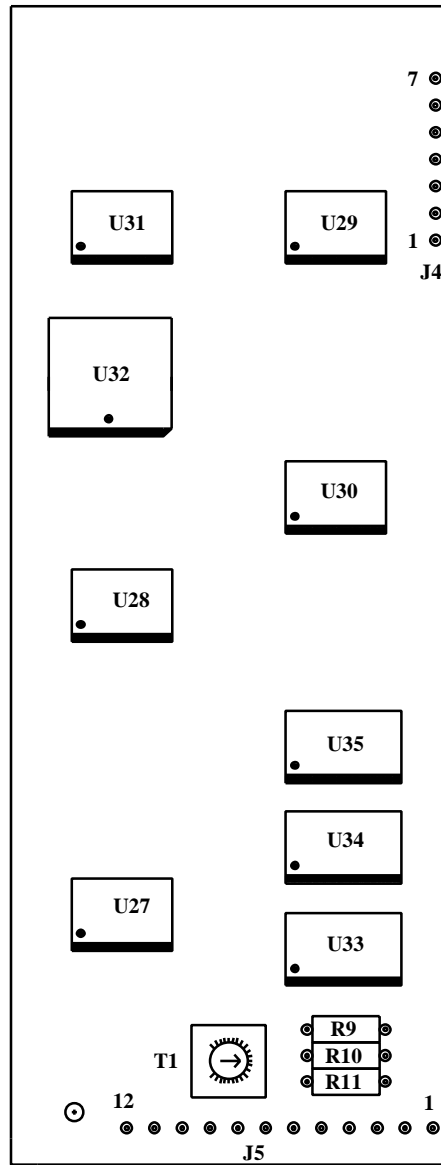


# SBA BRUSHLESS TACHO AND TACHSYN OPTION BOARD

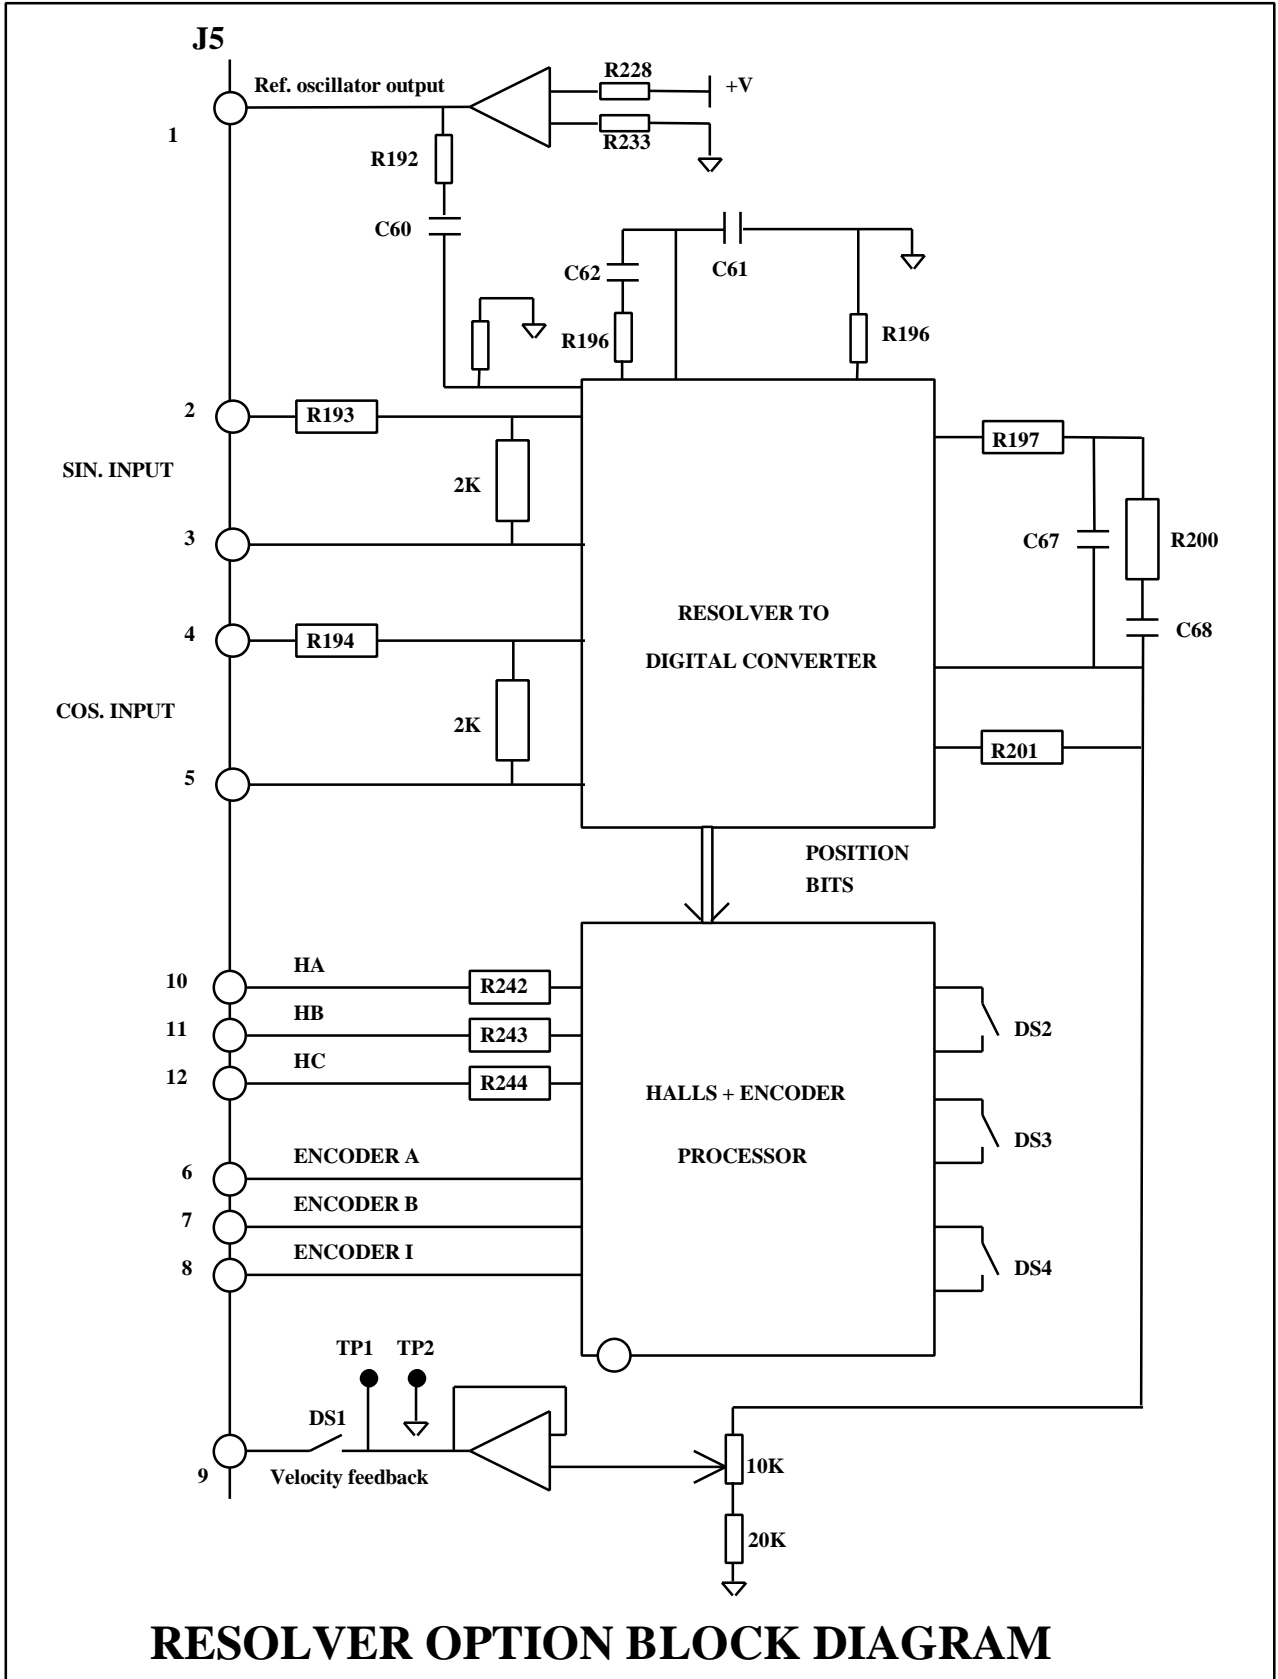

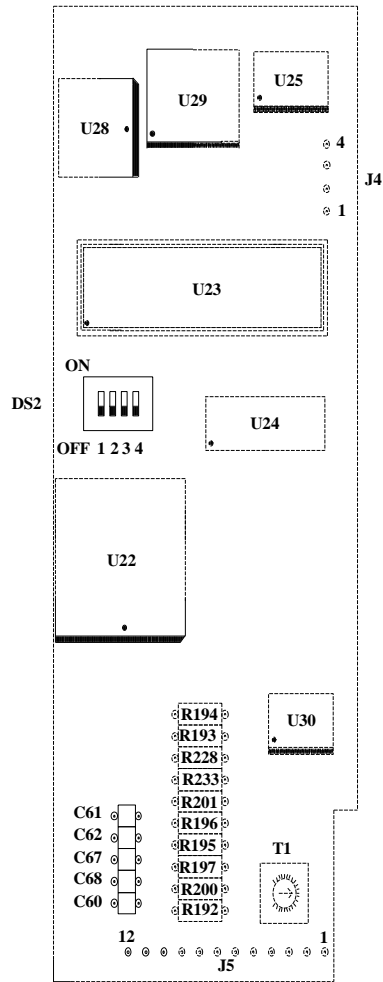

### SBA - RESOLVER OPTION BOARD


## SBA CONTROL BOARD

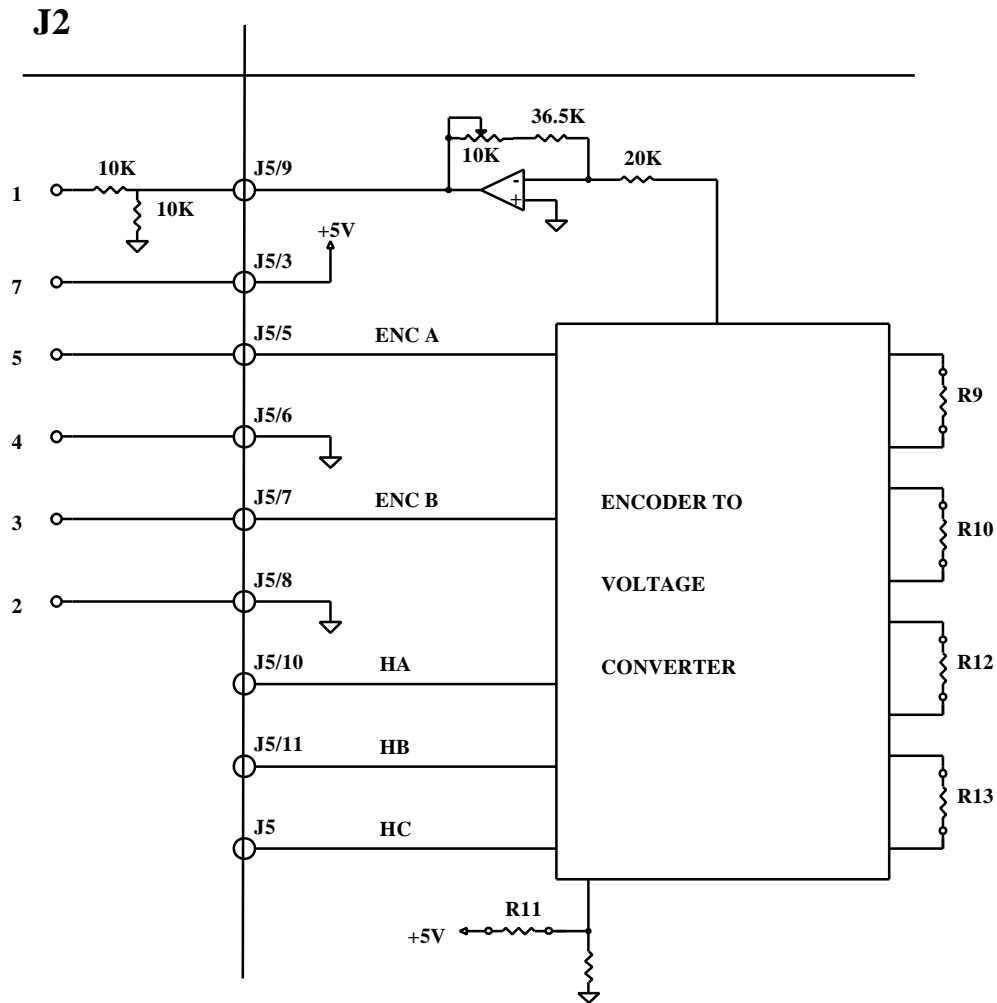

J2 - 26 PIN CONTROL BOARD CONNECTOR (THE USER CONNECTOR)

J5 - CONNECTOR BETWEEN CONTROL BOARD AND OPTION BOARD (INTERNAL CONNECTOR)


## SBA - ENCODER OPTION BLOCK DIAGRAM

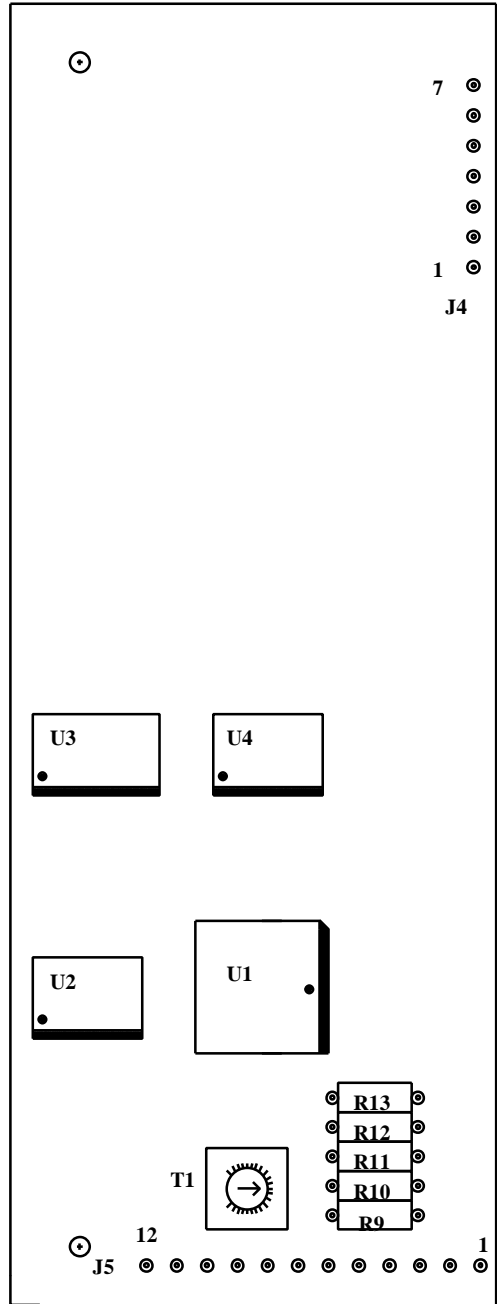


## SBA - ENCODER OPTION

**J1**  
**SIB-SBA/R**


**J2**  
**SBA CONTROL BOARD**

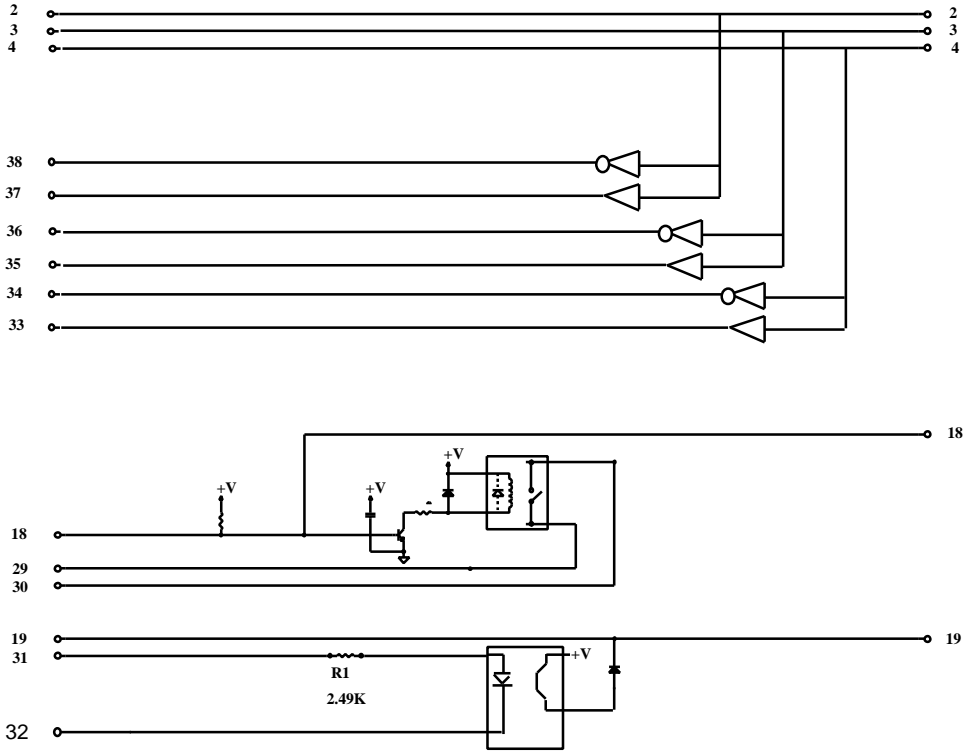


**SIB-SBA/R BLOCK DIAGRAM**

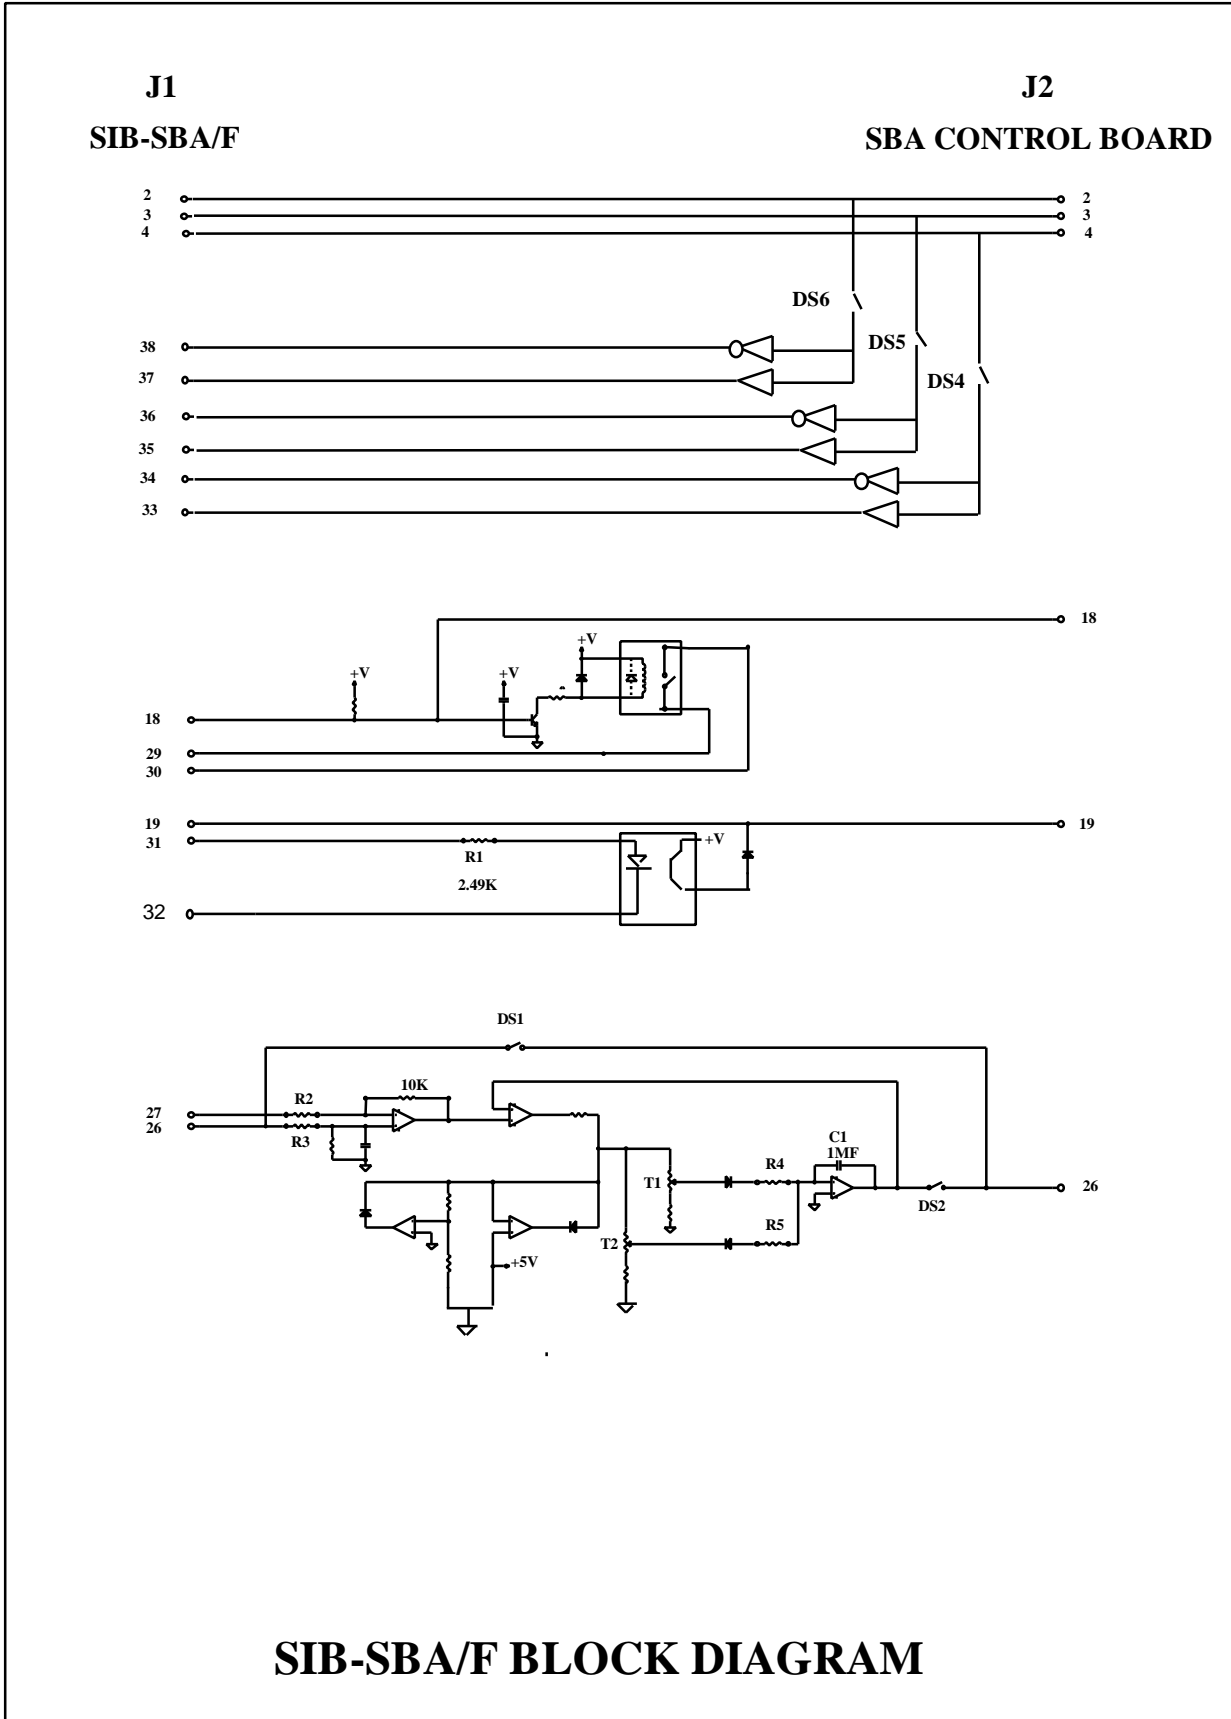

**SIB-SBA/F BLOCK DIAGRAM**

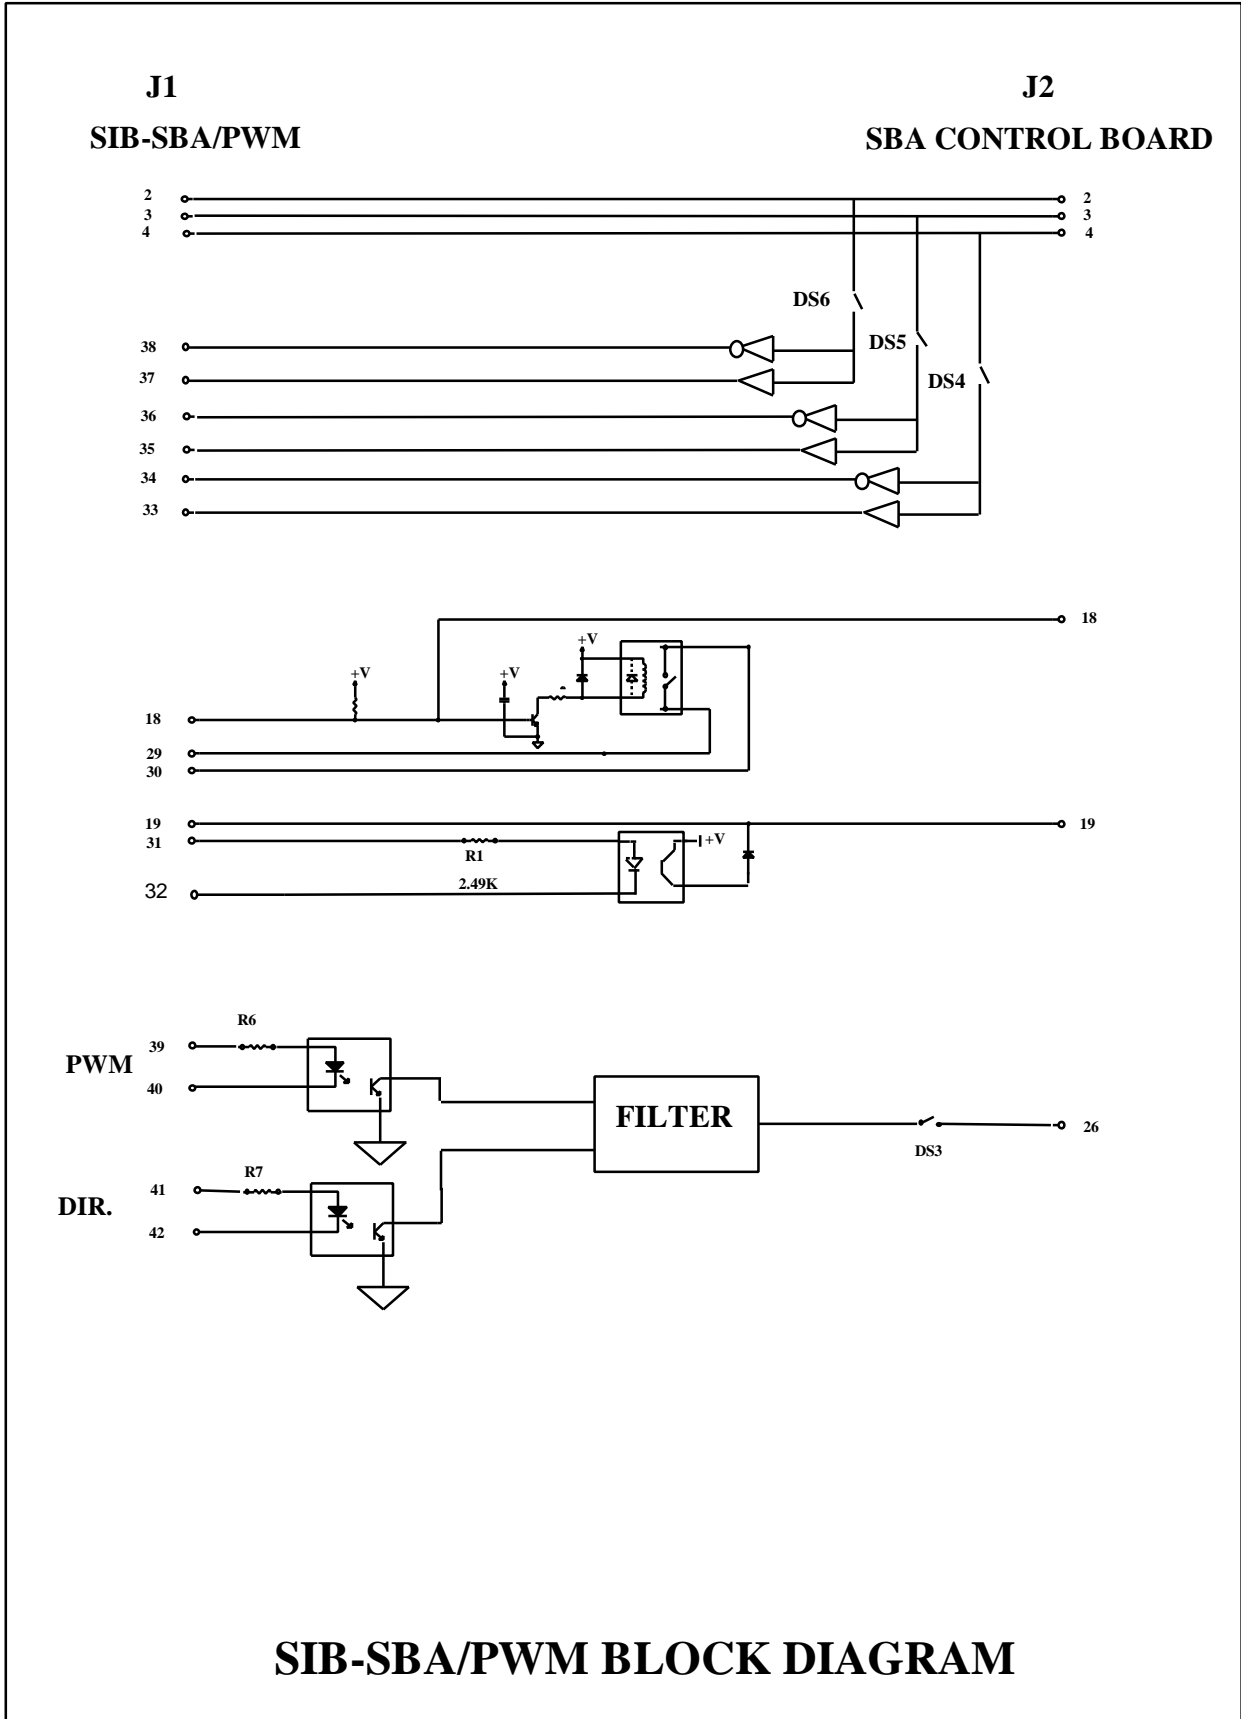

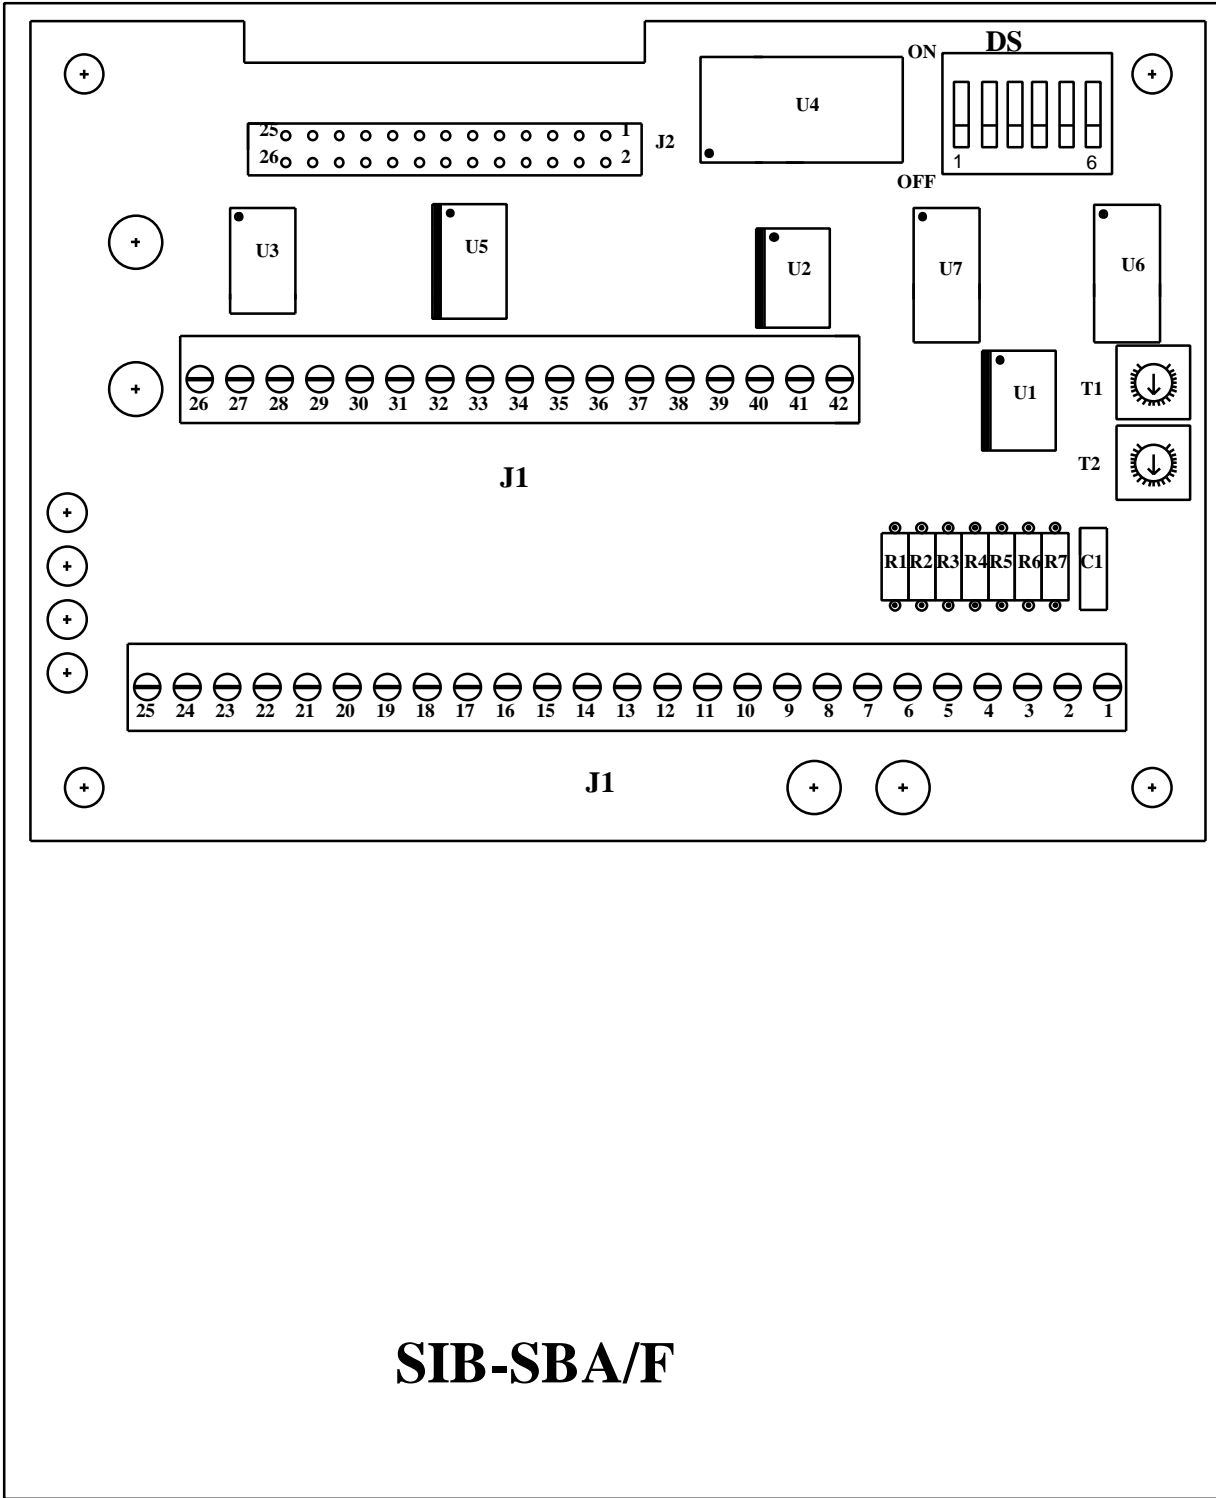

## 5. Terminal Description

### 5.1 Terminals for H,B,T,R and E types

#### Power Stage

Terminal	Function
Vs	Power input positive.
M1	Motor phase A output.
M2	Motor phase B output.
M3	Motor phase C output.
G	Power input common.

#### Control stage

Terminals for H version (Hall effect sensors only)

Terminal	Function	Remark
1	Fix gain reference input.	
10	Circuit common.	
11	Positive input of differential amplifier.	For more details see chapter 4.1.
12	Negative input of differential amplifier.	For more details see chapter 4.1.
13	-13V stabilized	20mA external load.
14	+5V stabilized	50mA external load.
15	+13V stabilized	20mA external load.
16	Hall sensor A input	*
17	Circuit common	

---

\*  $-1V \leq V_{il} < 1V$  ;  $2V \leq V_{ih} < 30V$   
 Source sink capability - 2mA min.

## Terminals for H version (Hall effect sensors only) - Cont.

Terminal	Function	Remark
18	Inhibit indication output	Whenever the amplifier is inhibited, whether by an internal or external cause, this open collector output goes low state (max. sink current 10mA, 30VDC max)
19	Inhibit input/reset	For inhibit logic see 7.1.3. For reset logic see 4.8.
20	Current monitor	This output can be used to adjust the current limits. It is equivalent to the current feedback signal. It simplifies the complexity of measuring the actual motor current in a brushless motor. For scale details see 7.1.7.
21	External peak current limit	External current limit input (0-7.5V range). For more details see 8.1.
22	External continuous current limit	External current limit input (0-3.75V range). For more details see 8.1.
23	Hall sensor C input	*
24	Hall sensor B input	*
25	Circuit common	
26	Input 1	Single ended input. See chapter 4.1 for details.

---

\*  $-1V \leq V_{il} < 1V$  ;  $2V \leq V_{ih} < 30V$

Source sink capability - 2mA

Additional terminals for B versions (brushless tach). The rest of the terminals are the same as in H versions.

Terminal	Function	Remark
1	Velocity monitor.	
2	N/A	
3	Hall 2 input of 2 phase brushless tach.	*
4	Hall 1 input of 2 phase brushless tach.	*
5	N/A	
6	Tacho common.	
7	Phase 3 of brushless tach.	
8	Phase 2 of brushless tach.	
9	Phase 1 of brushless tach.	

Additional terminals for T version (Tachsyn). The rest of the terminals are the same as in H versions.

Terminal	Function	Remark
1	Velocity monitor.	
2	Oscillator common	
3	N/A	
4	N/A	
5	Oscillator output.	
6	Tacho common.	
7	Phase 3 of Tachsyn.	
8	Phase 2 of Tachsyn.	
9	Phase 1 of Tachsyn.	

---


\*  $-1V \leq V_{il} < 1V$  ;  $2V \leq V_{ih} < 30V$   
 Source sink capability - 2mA

Additional terminals for R version (resolver). The rest of the terminals are the same as in H versions.

Terminal	Function	Remark
1	Velocity monitor.	
2	Encoder output - Index	
3	Encoder output - Channel B.	
4	Encoder output - Channel A.	
5	Common of cosine input.	
6	Cosine input.	
7	Common of sine input.	
8	Sine input.	
9	Reference frequency output.	

Additional terminals for E version (optical encoder). The rest of the terminals are the same as in H versions.

Terminal	Function	Remark
1	Velocity monitor.	
2	N/A.	
3	Encoder input	Channel A.
4	N/A.	
5	Encoder input	Channel B.
6	Circuit common	Encoder supply only
7	+5V	50mA encoder supply.
8	N/A.	N/A.
9	N/A.	N/A.

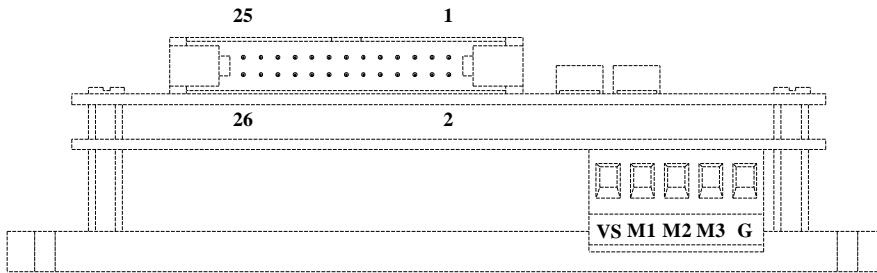

**CONNECTORS**  
**SBA WITHOUT SIB CARD**

## 5.2 Terminals for SIB-SBA

The numbering of the SIB-SBA terminals (1-26) is identical to the numbering of the SBA control board connector. Following are the additional terminals for the other SIB-SBA types.

### 5.2.1 Terminal for SIB-SBA/R

1-26	Same as SBA.
27	N/A
28	Circuit common
29	Inhibit output - Free contact relay Contacts rating: 0.5A, 200V, 10W
30	Inhibit output - Free contact relay
31	Inhibit input (positive input to an optocoupler) The standard value of R1 (2.49Kohm) is suitable for 24V input. For other input voltage, change R1 in order to ensure input current of 10mA.
32	Inhibit input (negative input to an optocoupler)
33	Buffered channel I output, +20mA max.
34	Buffered channel -I output, +20mA max.
35	Buffered channel B output, +20mA max.
36	Buffered channel -B output, +20mA max.
37	Buffered channel A output, +20mA max.
38	Buffered channel -A output, +20mA max.
39	N/A
40	N/A
41	N/A
42	N/A

### 5.2.2 Terminal for SIB-SBA/F

1-25	Same as SBA.
26	Positive differential input of input 1. The serial resistor for this input is R3 with a standard value of 10Kohm. If the linear Acc/Dec function is not activated, this input is a single ended input and there is no need for R3.
27	Negative input of differential input 1. The serial resistor for this input is R2 with a standard value of 10Kohm. If the linear Acc/Dec function is not activated, this input is not applicable.
28	Circuit common
29	Inhibit output - Free contact relay Contacts rating: 0.5A, 200V, 10W
30	Inhibit output - Free contact relay
31	Inhibit input (positive input to an optocoupler. The standard value of R1 (2.49Kohm) is suitable for 24V input. For other input voltage, change R1 in order to ensure input current of 10mA.
32	Inhibit input (negative input to an optocoupler)
32	Inhibit input (negative input to an optocoupler)
33	Buffered channel I output, +20mA max.
34	Buffered channel -I output, +20mA max.
35	Buffered channel B output, +20mA max.
36	Buffered channel -B output, +20mA max.
37	Buffered channel A output, +20mA max.
38	Buffered channel -A output, +20mA max.
39	N/A
40	N/A
41	N/A
42	N/A

### 5.2.3 Terminal for SIB-SBA/PWM


1-26	Same as SBA.
27	
28	Circuit common
29	Inhibit output - Free contact relay Contacts rating: 0.5A, 200V, 10W
30	Inhibit output - Free contact relay
31	Inhibit input (positive input to an optocoupler. The standard value of R1 (2.49Kohm) is suitable for 24V input. For other input voltage, change R1 in order to ensure input current of 10mA.
32	Inhibit input (negative input to an optocoupler)
32	Inhibit input (negative input to an optocoupler)
33	Buffered channel I output, +20mA max.
34	Buffered channel -I output, +20mA max.
35	Buffered channel B output, +20mA max.
36	Buffered channel -B output, +20mA max.
37	Buffered channel A output, +20mA max.
38	Buffered channel -A output, +20mA max.
39	PWM input (20KHZ) * The standard value of R6 (365ohm) is suitable for 0-5V input. For other input voltage, change R6 in order to limit the input current to 10mA. This current (Id) is calculated by ** .
40	Negative input of an optocoupler for an isolated PWM input
41	Direction input. * The standard value of R7 (365ohm) is suitable for 0-5V input . For other input voltage change R7 in order to limit the input current to 10mA. This current (Id) is calculated by **.
42	Negative input of an optocoupler for an isolated Direction input

---

\* Low level signal is 0V

High level signal is 4-10V

\*\*  $I_d = (V_{in} - 1.5) / R_6$  ;  $10mA < I_d < 20mA$

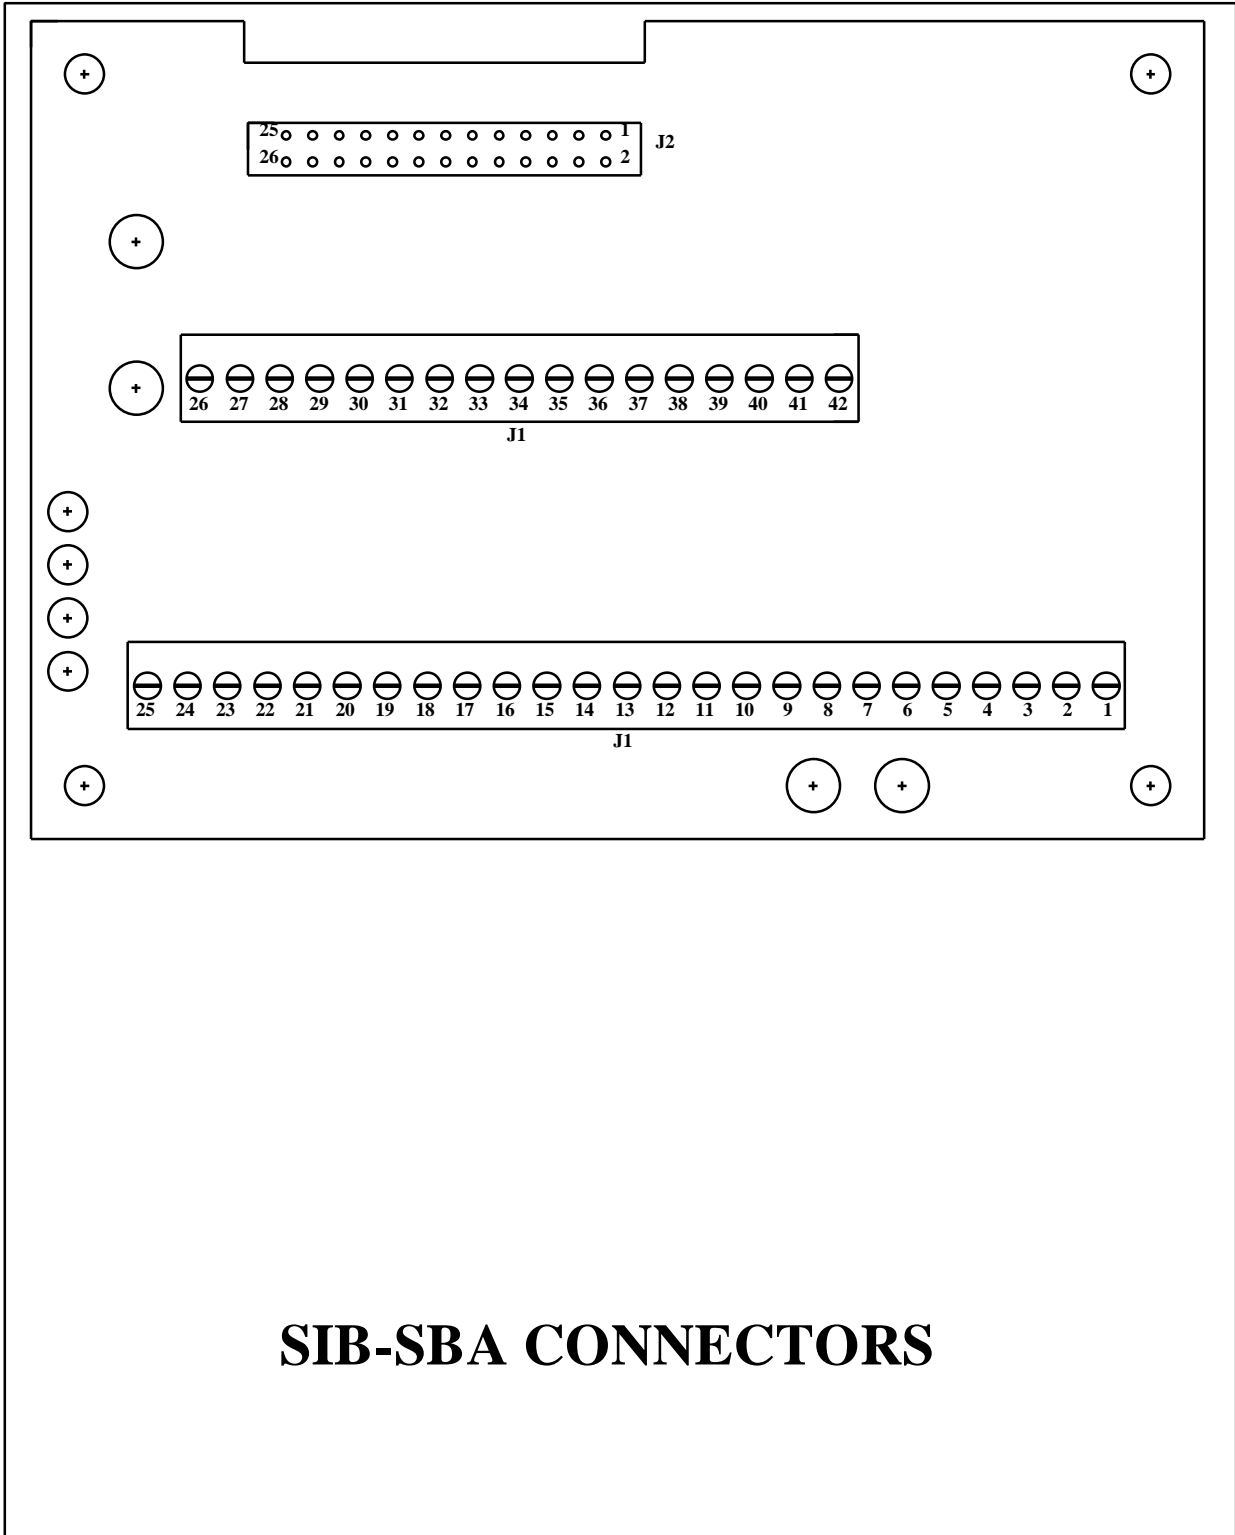

## SIB-SBA CONNECTORS

## **6. Installation procedures**

### **6.1 Mounting**

As there are hazardous voltages in some models, and all models require protection against environmental effects/elements, and each may be required to provide adequate earth, these models must be adequately enclosed in accordance with electric shock protection and earth requirements and Enclosure Degrees of Protection requirements in accordance with the most recent version of standard EN60204-1.

The SBA series dissipates its heat by natural convection up to loads of 600W. For higher output load the amplifier should be mounted on an additional heat sink or cooled by fan.

### **6.2 Wiring**

Warning! As the units (some of the models) are used with hazardous voltages (>60vdc), and there is no electrical isolation provided, adequate electrical separation in accordance with the requirements of EN60204-1 (latest version) must be provided at their outputs, and to the supplies.

Proper wiring, grounding and shielding techniques are important in obtaining proper servo operation and performance. Incorrect wiring, grounding or shielding can cause erratic servo performance or even a complete lack of operation.

- a) Keep motor wires as far as possible from the signal level wiring (feedback signals, control signals, etc.).
- b) If additional inductors (chokes) are required, keep the wires between the amplifier and the chokes as short as possible.
- c) Minimize lead lengths as much as is practical. Although the amplifier is protected against long (inductive) supply wires it is recommended to keep the leads as short as possible.
- d) Use twisted and shielded wires for connecting all signals (command and feedback). Avoid running these leads in close proximity to power leads or other sources of EMI noise.
- e) Use a 4 wires twisted and shielded cable for the motor connection.
- f) Shield must be connected at one end only to avoid ground loops.
- g) All grounded components should be tied together at a single point (star connection). This point should then be tied with a single conductor to an earth ground point.

h) After wiring is completed, carefully inspect all conditions to ensure tightness, good solder joints etc.

### 6.3 Load inductance

The total load inductance must be sufficient to keep the current ripple within the limits (10%-20% of rated current is recommended). The current ripple ( $I_r$ ) can be calculated by using the following equation:

$$I_r = \frac{0.5 \times V_s}{f \times L} \quad (\text{A})$$

L - load inductance in mH.

$V_s$  - Voltage of the DC supply in Volts.

f - Frequency in KHz.

If motor inductance does not exceed this value, 3 chokes should be added (to each motor phase) summing together the required inductance

$$L_{ch} = L - L_p$$

$L_{ch}$  - Choke inductance

$L_p$  - Total inductance between two phases (in Y connection it is the sum of two phases).

### 6.4 DC power supply

DC power supply can be at any voltage in the range defined within the technical specifications (chapter 3). The supply source must comply with the safety aspects of the relevant requirements in accordance with the most recent version of the standard EN60950 or equivalent Low Voltage Directive Standard, all according to the applicable over voltage Category. If the power source to the power supply is the AC line (through a transformer), safety margins have to be considered to avoid activating the under/over voltage protection due to line variations and/or voltage drop under load.

The transformer power should be calculated to have the capability to deliver power to the amplifier (including peak power), without significant voltage drops. While driving high inertia loads, the power supply must be equipped with a shunt regulator, otherwise, the amplifier will be disabled whenever the capacitors are


charged above the maximum voltage or below the minimum will disable the amplifier.

In addition to the above, the transformer must comply with the safety aspects of the relevant requirements in accordance with the most recent version of the standard EN60742 (Isolating and Safety Isolating Transformers). See the following wiring diagrams for details



While driving high inertia loads, the power supply must be equipped with a shunt regulator, otherwise, the amplifier will be disabled whenever the capacitors are charged above the maximum voltage.

6.5 Wiring diagrams



# MOTOR WIRING

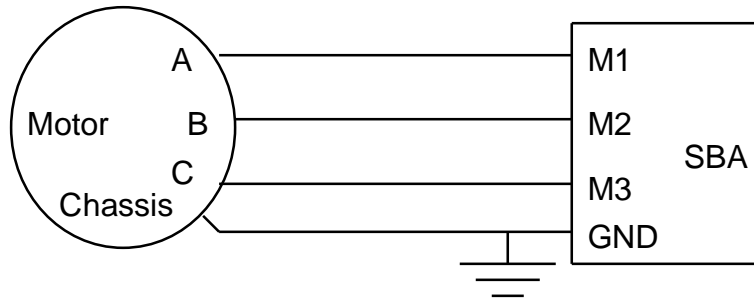


Minimum acceptance

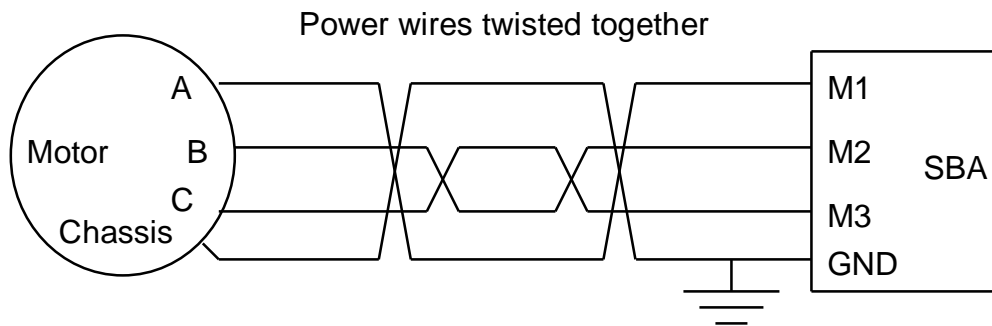

Acceptable for most applications

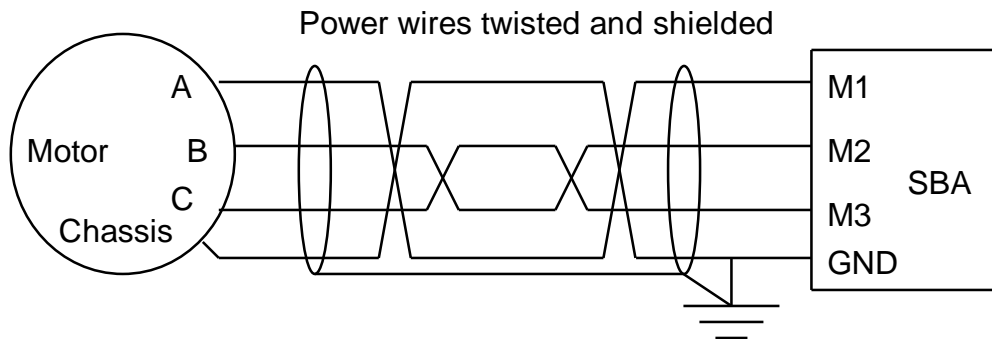

Optimum wiring, minimum RFI

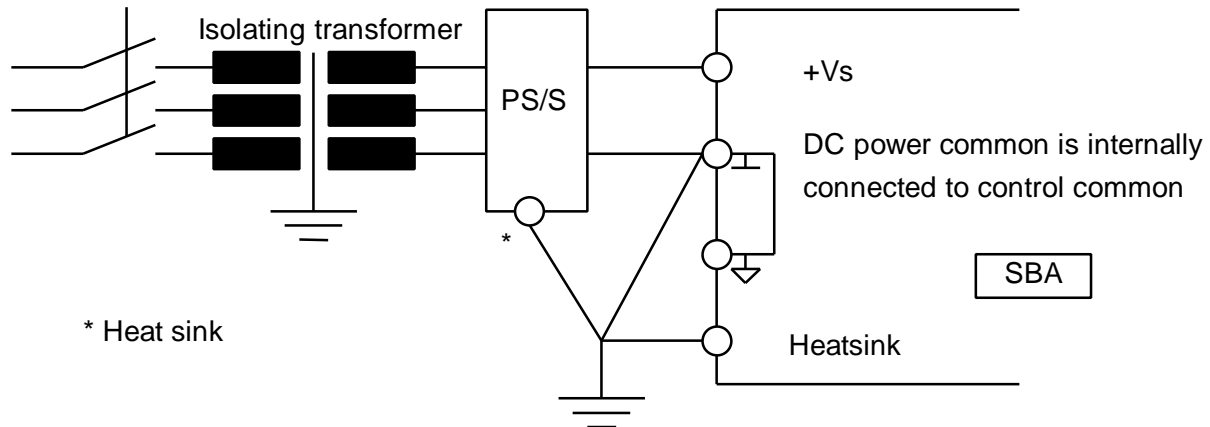

### **Guide lines for connecting a non isolated amplifier with an isolating power transformer**

#### **Ground:**


DC power common  
 Motor chassis  
 Amplifier's heat sink

#### **Do not ground:**

Control common - It is internally connected to the power common. Grounding the control common will create a ground loop.


#### **Caution:**


- If source of motor command is grounded, use amplifier's differential input. Otherwise, ground loop is created.

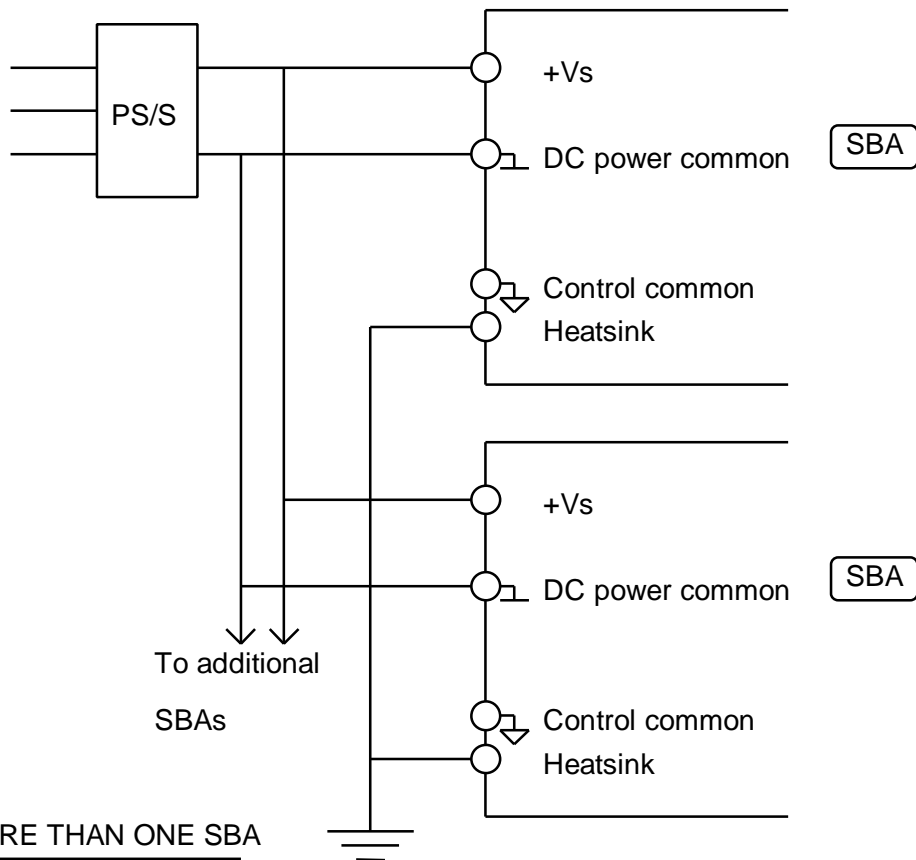


CONNECTING MORE THAN ONE SBA

All rules about supply connections described in the previous page are also valid for multi-SBA connection.

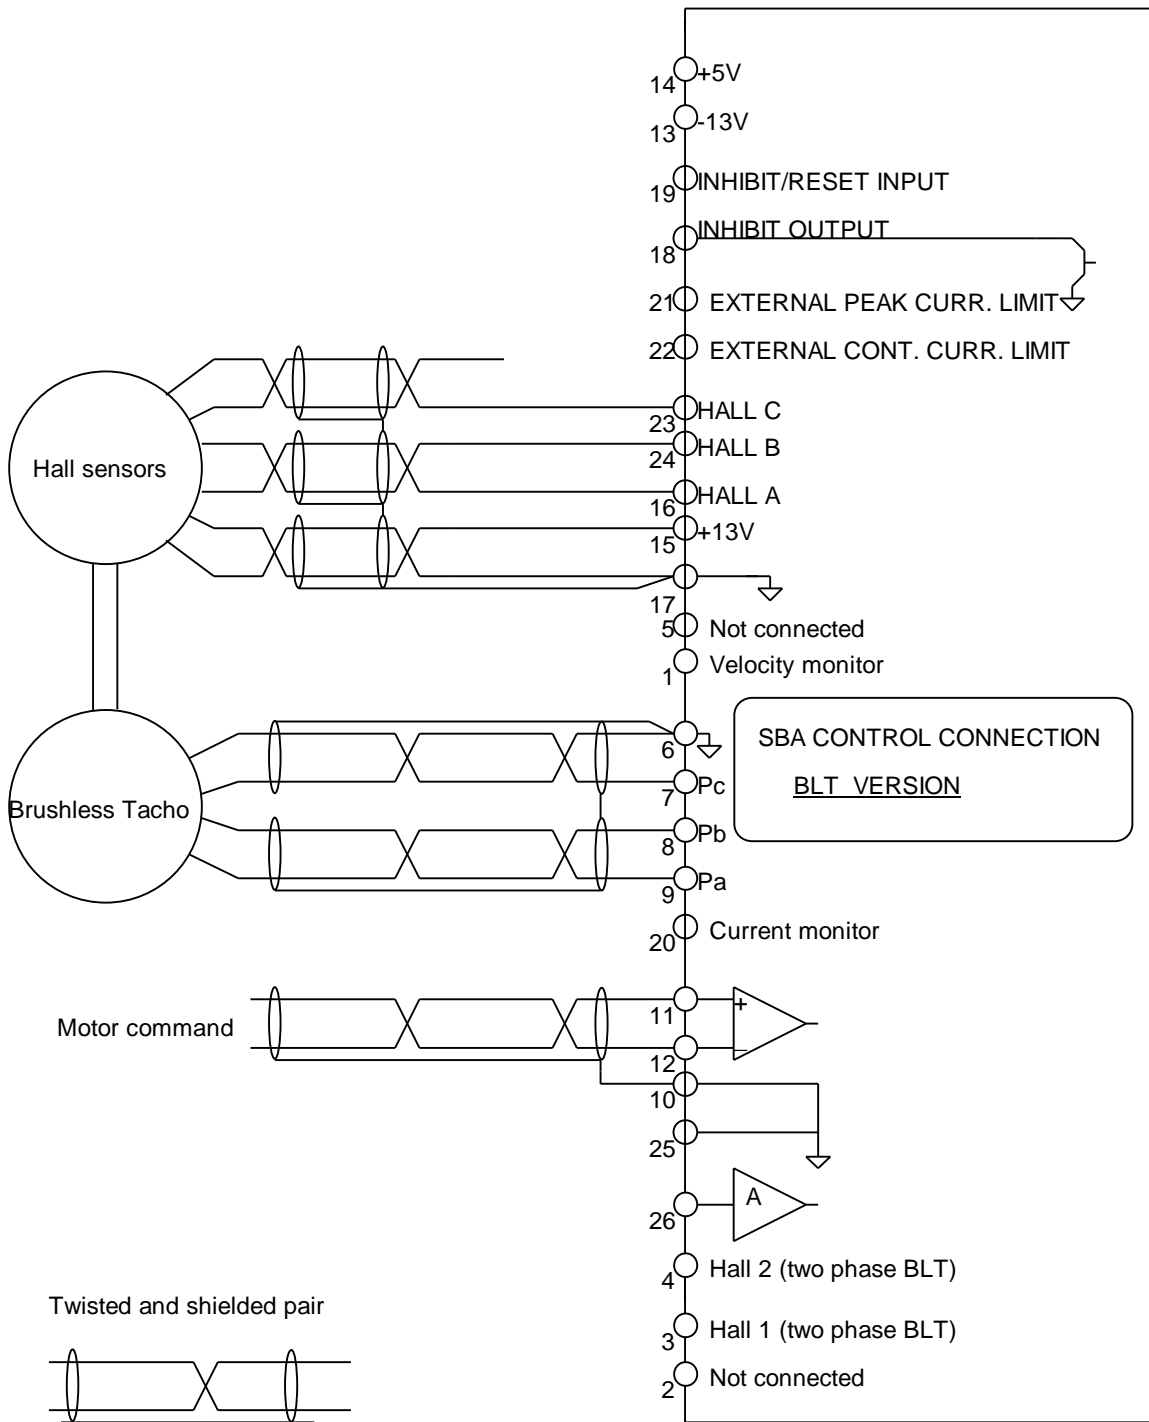

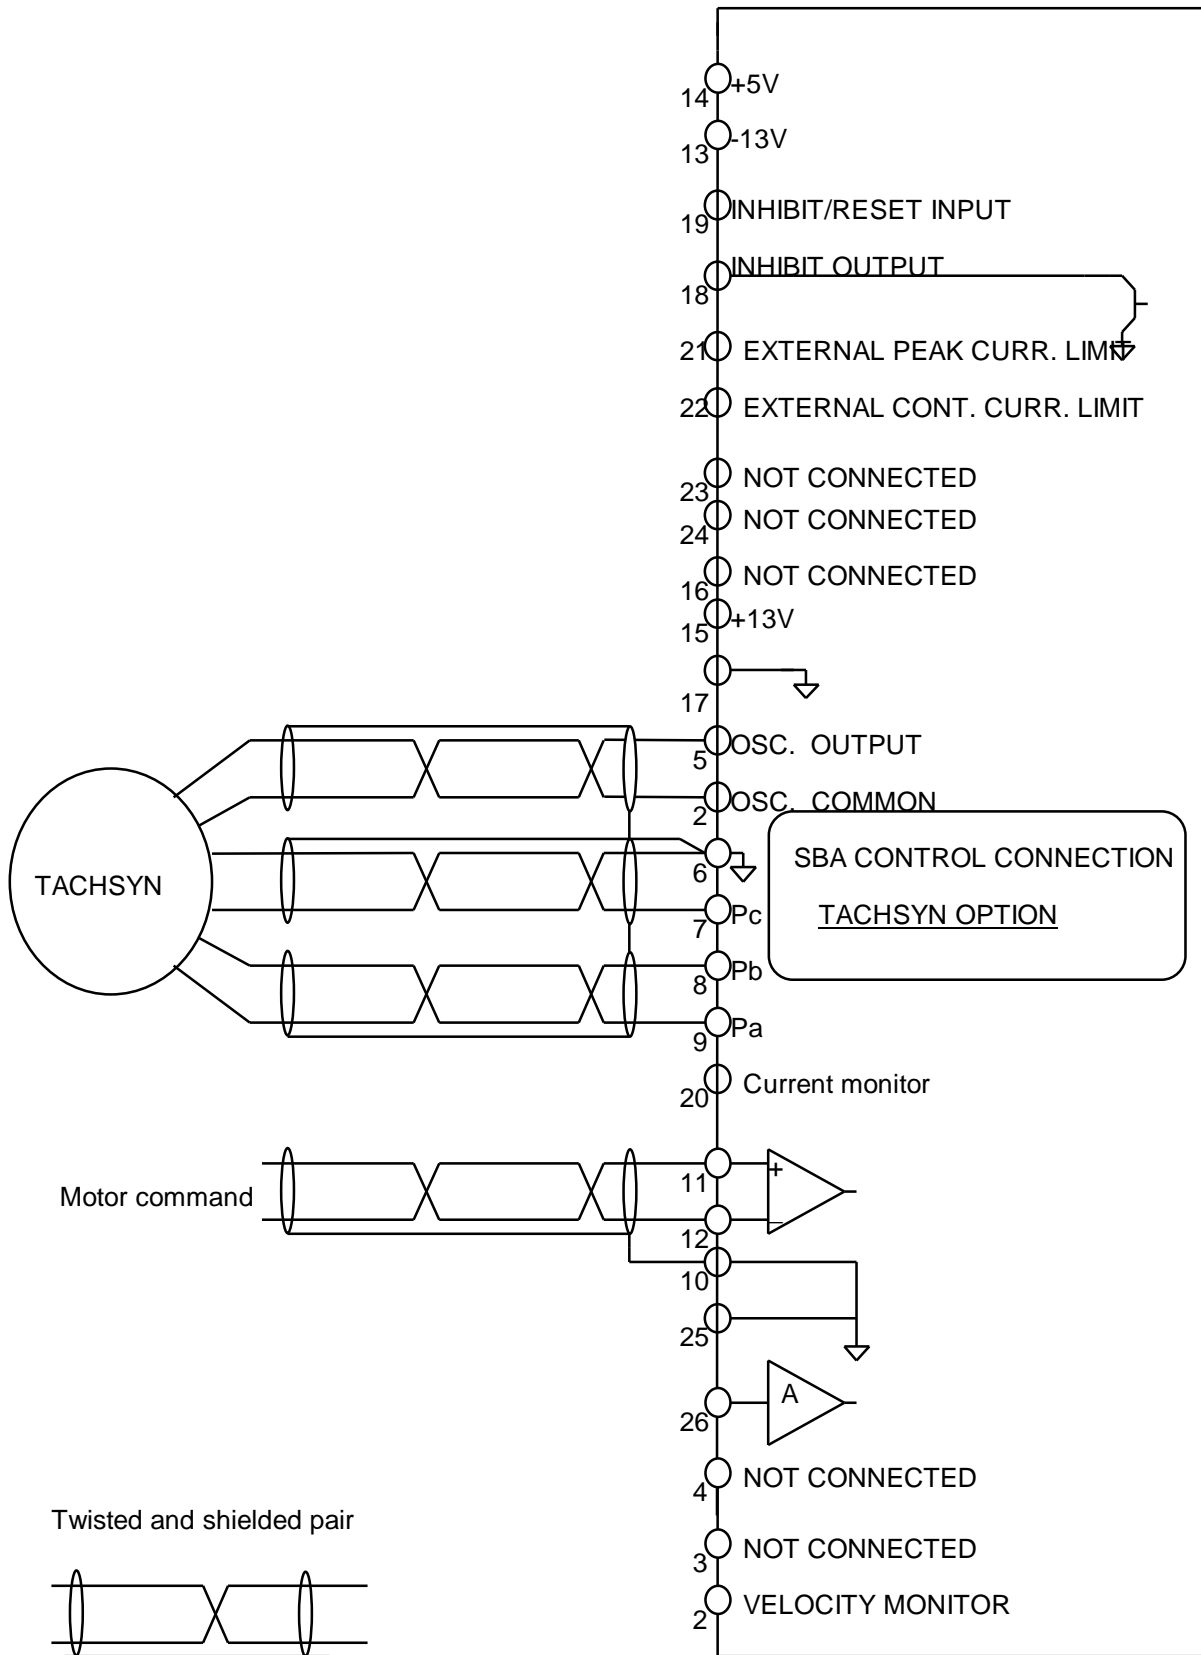

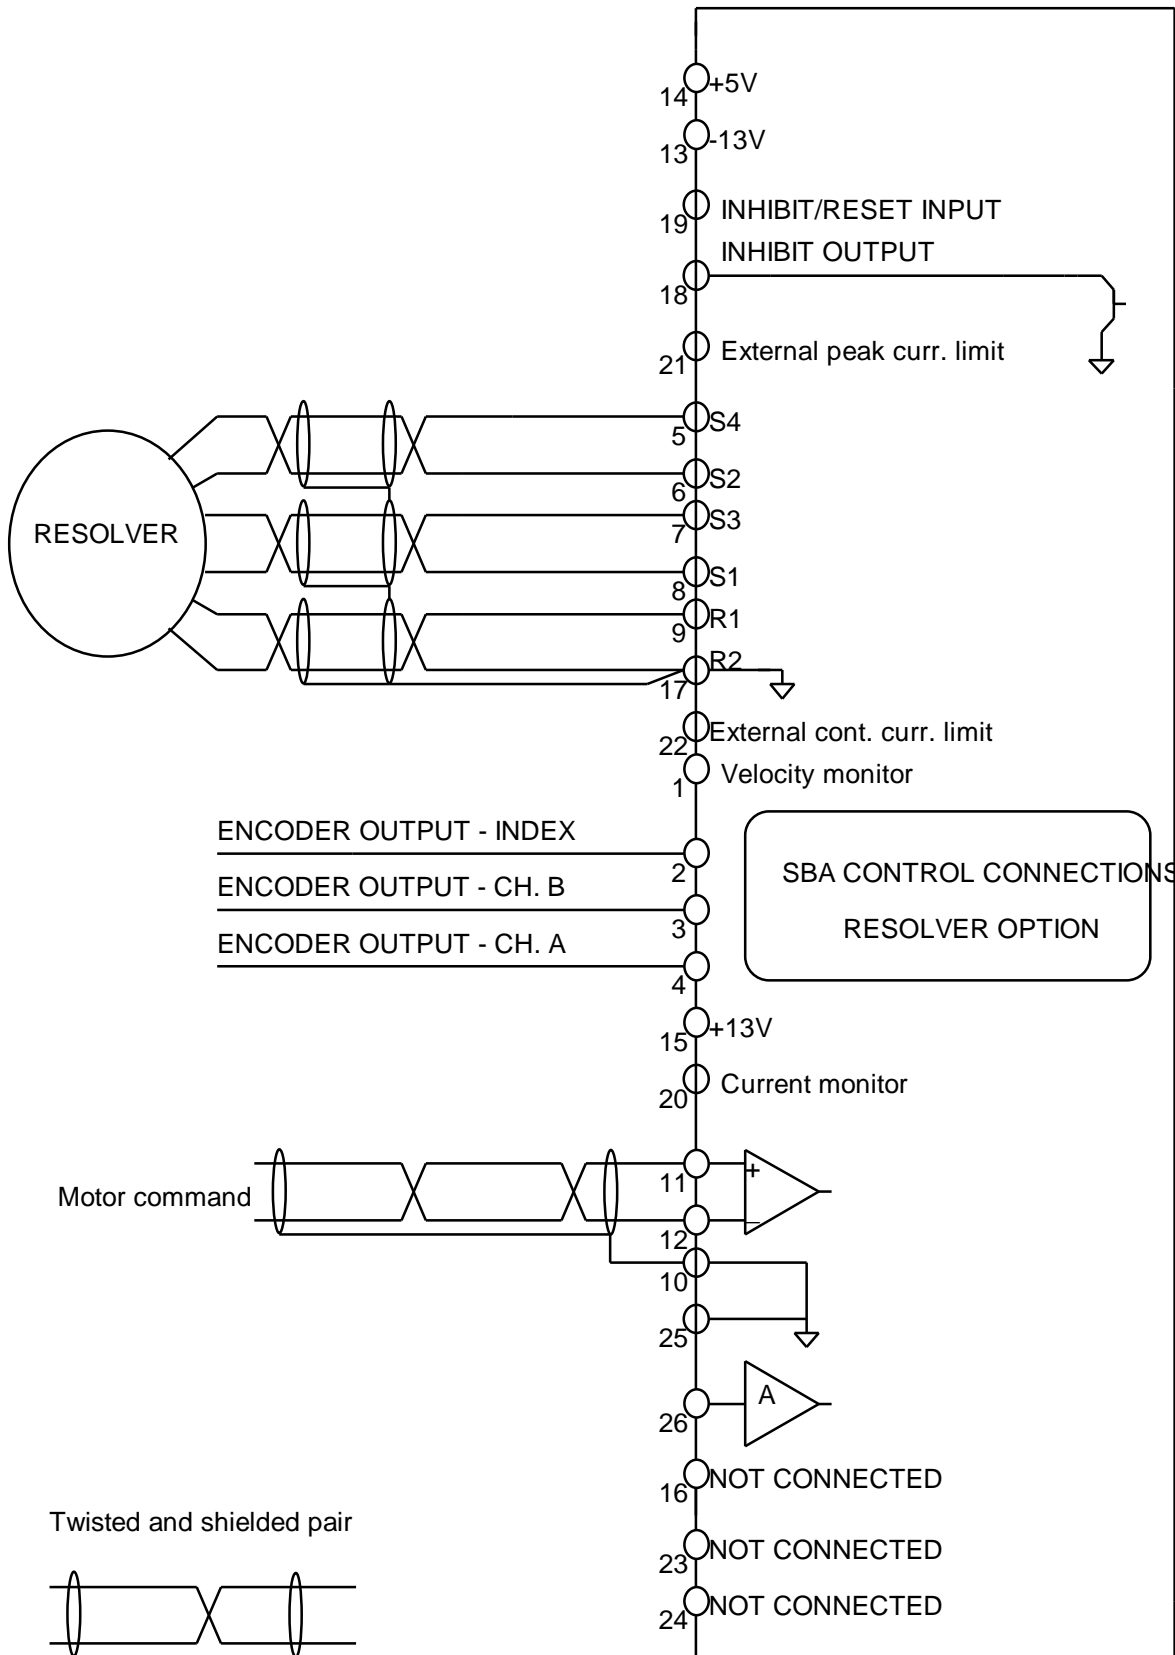

## **7. Start - Up Procedures**

If you use a SIB-SBA card (of any type) you have to remove it temporarily from the SBA in order to make the following adjustments.

### **7.1 Common procedures for all amplifiers types**

#### **7.1.1 Commutation signals format**

Select the position of DIP switch 1 on the control board according to the commutation signal format of the motor.

DS1 positions:	ON : 30°	OFF : 60°
----------------	----------	-----------

For all Resolver versions it should be 60°.

#### **7.1.2 CFM function**

Select the position of DIP switch 4 on the control board according to the motor's rated current. If it is less than 20% of the amplifier's rated current select:

DS4 to ON - Active CFM

Otherwise,


DS4 to OFF - No CFM

#### **7.1.3 Inhibit logic**

Select the desired Inhibit logic you need:

##### **a) Disable by Low**

Inhibit function will be activated by connecting its input (terminal 19) to a low level signal. If no signal is applied to this input the amplifier will be enabled upon power on.

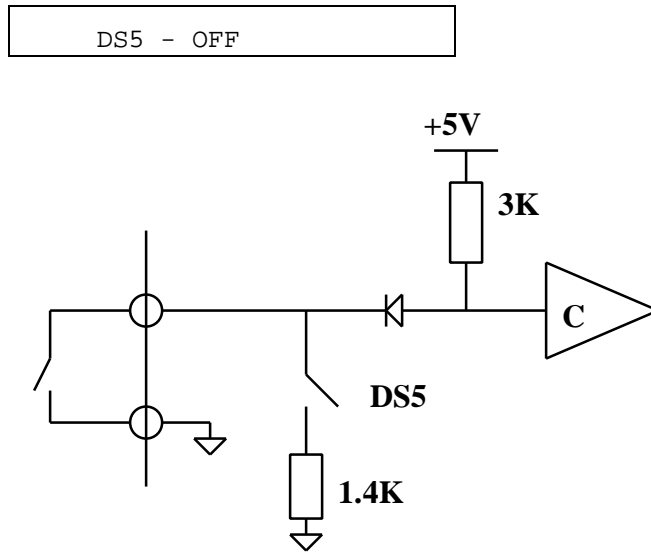


**SBA DISABLED BY ACTIVE LOW OR CLOSED CONTACT**

$$-1V \leq V_{il} < 1V$$


$$2V \leq V_{ih} < 30V$$

**b) Enable by High**


Inhibit function will be de-activated by connecting its input (terminal 19) to a high level signal. If no signal is applied to this input the amplifier will be disabled upon power on.

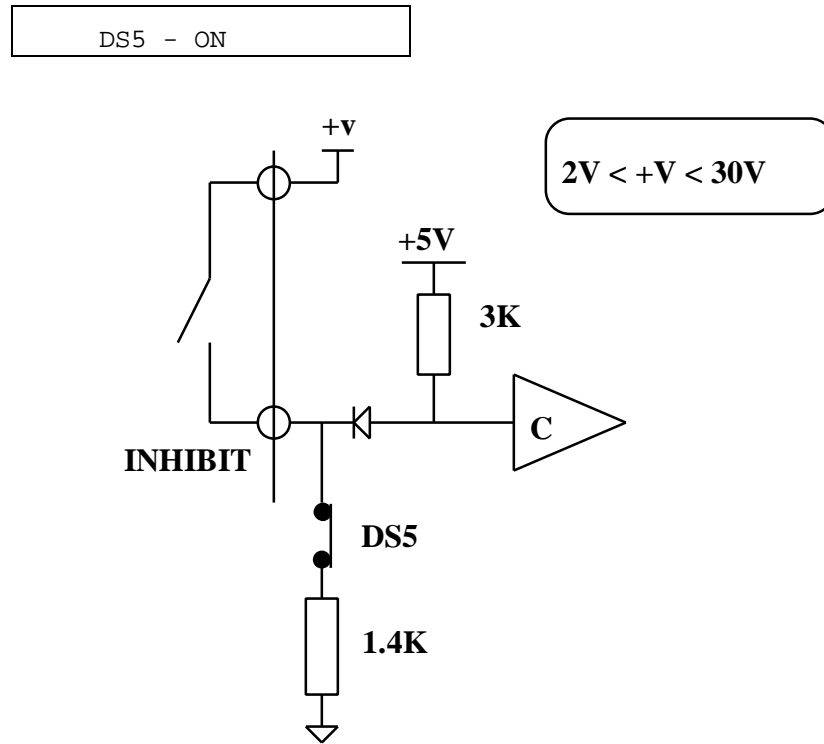

**SBA ENABLED BY ACTIVE HIGH OR CLOSED CONTACT**

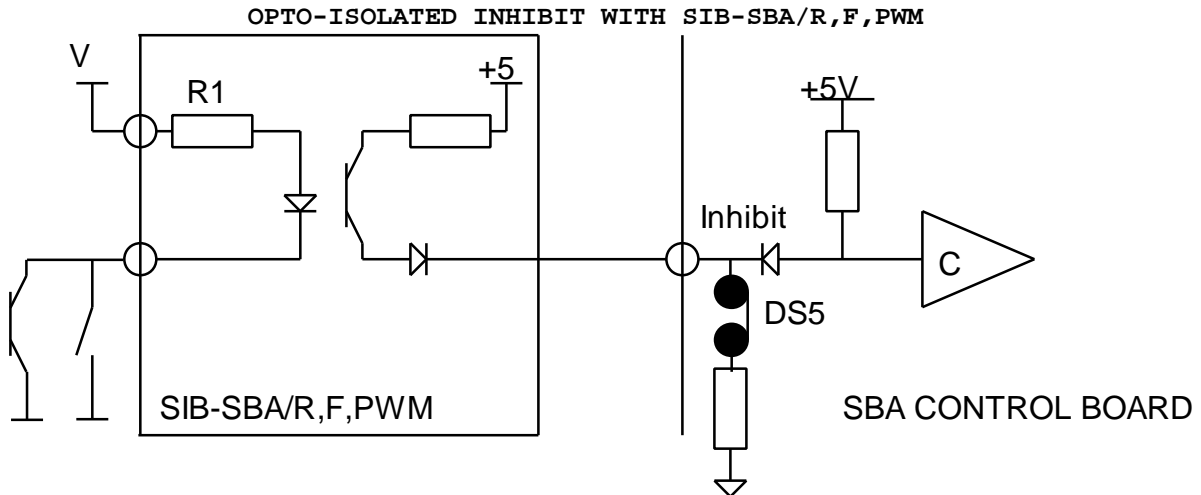

SBA WITH SIB-SBA ENABLED BY ACTIVE HIGH OR CLOSED CONTACT

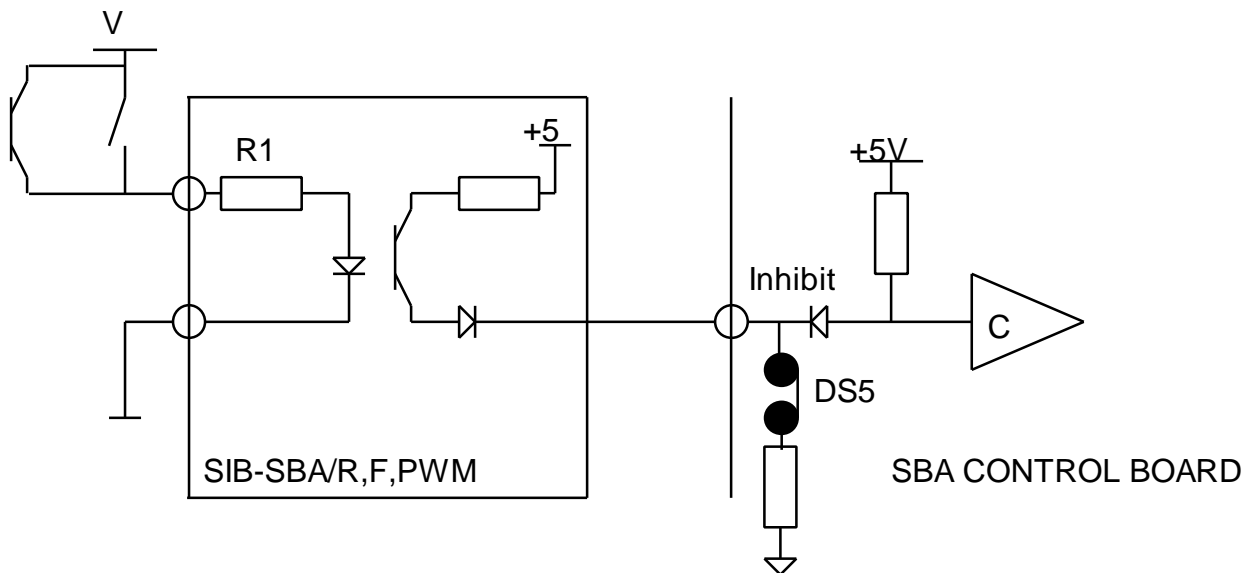

SBA WITH SIB-SBA ENABLED BY ACTIVE LOW OR CLOSED CONTACT

$R1 = 100 \times V \text{ (ohm)}$
-----------------------------------

V - Voltage at the inhibit input.

Standard value for R1 is 2.4K (for 24V). Source must be capable to source or sink 10mA.

#### **7.1.4 Current mode**

To operate in current mode the velocity loop should be disabled by converting the error amplifier to a low gain proportional amplifier.

- Remove R5 (in solderless terminals).
- Remove C2 (in solderless terminals).

In addition, you must make sure that the velocity feedback signal is not entering the error amplifier. If a Resolver or Tachsyn options are used, the input resistor of the velocity signal should be removed:

- Remove R97 (SMD component)

The current limits of the amplifier remain the same as in velocity mode.

#### **7.1.5 Velocity mode**

To operate in velocity mode the velocity loop should be enabled by converting the error amplifier to a high gain PI amplifier. Make sure that R4,R5 and C2 (in solderless terminals) are installed on the board.

If a Resolver board is installed on the SBA amplifier, you have to make sure that the velocity feedback signal is entering the error amplifier:

DS1 (on the Resolver board: ON.
---------------------------------

#### **7.1.6 Selecting the reference signal gain**

The SBA has 2 inputs: single ended input (terminal 26) and a differential input (terminals 11,12). Care must be taken not to apply input voltage above the maximum input voltage as this will cause the input op amp to operate beyond its limits (10V) and in extreme cases may even damage the op amp. The standard procedure recommends to use the single ended input (terminal 26) for the velocity feedback signal and to use the differential input for the reference signal.

Following are the input maximum voltage and impedance with the standard values of input resistors:

INPUT - RESISTOR	STANDARD VALUE	MAX. VOLTAGE	Current Gain(A/V) (in current mode)	INPUT IMPEDANCE
Terminal 26 - R3	15 Kohm	25V	0.2xIc	25 Kohm
Differential - R7,8	10Kohm	20V	0.533xIc	30 Kohm

All the gains are divided by 2 if CFM is ON

**See chapter 4.1 for calculation of other values**

### 7.1.7 Static current limit adjustment

The amplifiers' current limits can be adjusted statically (without load) by inserting fix resistors on the logic board, and/or dynamically by two external voltage signals. The current limits are factory adjusted to the amplifier's rated values. Reducing the nominal limits is performed as follows:

#### a) Continuous current limit adjustment

R2 should be calculated and inserted as follows:

$$Q = \frac{I_c(\text{new})}{I_c(\text{nom})} \quad 0 < Q < 1$$

Ic(new) - new value of continuous current limit

Ic(nom) - nominal current rating of the amplifier (10, 5 or 3A)

$$R2 = \frac{5Q}{1-Q} \quad (\text{Kohm})$$

**b) Peak current limit adjustment**

R1 should be calculated and inserted as follows:

$$P = \frac{I_p(\text{new})}{I_p(\text{nom})} \quad 0 < P < 1$$

$I_p(\text{new})$  - new value of peak current limit.

$I_p(\text{nom})$  - peak current rating of the amplifier (20, 10 or 6A)

$$R1 = \frac{10P}{1-P} \quad (\text{Kohm})$$

To measure the current limit a load must be connected (chokes or a motor) to the motor's outputs. Measurement can be done either by direct current measurement or by using the current monitor (terminal 20).

$$\text{Current monitor scale} = \frac{3.75}{I_c(\text{nom})} \quad (\text{V/A})$$

The current monitor scale is double if CFM (DS4) is ON.

**7.1.8 Latch mode of the protective functions**

All the protective functions activate internal inhibit. There are two modes of resetting the amplifier after the cause of the inhibit disappears:

**Self Restart (DS6-OFF):** The amplifier is inhibited only for the period that the inhibit cause is present.

**Latch (DS6-ON):** Each failure latches the Inhibit and the In LED. For restart (after clearing the failure source), reset has to be performed either by turning DS6 to "OFF" or by applying logic 0 at the reset input (terminal 19).

**For safety reason it is recommended to use the amplifier in the LATCH MODE**

## 7.2 Connecting the velocity feedback elements

### 7.2.1 Brush Tachogenerator

The output leads of the tacho are connected to terminal 26 and to the circuit common (Negative feedback). The tacho voltage is adjusted by calculating R3 as follows:

$$R3 = 1.14 \times V_{Tm} - 9.1 \quad (\text{Kohm})$$

$V_{Tm}$  - Voltage generated by tachogenerator at max velocity.

Actual resistor value should be as close as possible to the calculated value.

### 7.2.2 Brushless Tachogenerator

#### A) Three Phase Brushless Tachogenerator

Selecting this option is done by arranging the following switches:

DS2 = ON
DS3 = OFF

The three leads should be connected to terminals 9, 8, 7 - phases A,B,C). If the tacho windings are connected in Y (star) and the common connection is available as an output lead, it should be connected to the tacho common (terminal 6).

The output of the tacho processor is available at terminal 1.

R9, R10 and R11 should be calculated and installed as follows:

$$R9 = R10 = R11 = 0.415 V_{Tm} - 3.32 \quad (\text{Kohm})$$

The speed of the motor (N) in RPM is given by:

$$N = \left( \frac{R9}{3.32} + 1 \right) \times V1 / (K_{e_{tach}} \times K_i) \quad (R9 \text{ in Kohm})$$

$V_{Tm}$  - Voltage generated by tachogenerator at max velocity.

$K_{e_{tach}}$  - Tacho back EMF constant (Volt/RPM).

V1 - Voltage at terminal 1.

$K_i$  - Trimmer wiper position (0.5-1 full scale)

**B) Two Phase Brushless Tachogenerator**

Selecting this option is done by arranging the following switches:

DS2 = ON
DS3 = ON

Two leads (one from each phase) should be connected to terminals 9(phase A) and 8 (phase B). The other two leads should be connected together to terminal 6. Its Hall effect sensors should be connected to terminal 4 (A) and 3 (B).

The output of the tacho feedback processor is available at terminal 1.

R9 and R10 should be calculated and installed as explained in the previous paragraph (three phase brushless tachogenerator).

**7.2.3 Tachsyn**

Selecting this option is done by selecting DS2 = OFF. The three phases leads should be connected to terminals 9,8,7 -phases A,B,C). The tachsyn oscillator reference signal is at terminal 2.

R9,R10 and R11 should be calculated and installed as follows:

$$R9=R10=R11= 0.332V_{TC} - 3.32 \quad (\text{Kohm})$$

$V_{TC}$  - Voltage generated by Tachsyn at max velocity.

The speed of the motor (N) in RPM is given by:

$$N = \left( \frac{R9}{3.32} + 1 \right) \times V_1 / (Ke_{tC} \times Ki) \quad (R9 \text{ in Kohm})$$

$Ke_{tC}$  - tachsyn back EMF constant (Volt/RPM).

$V_1$  - voltage at terminal 1.

The output of the velocity processor is available at terminal 1.

$Ki$  - Trimmer wiper position (0.5-1 full scale)

## 7.2.4 Resolver


The Resolver interface circuit consists of three basic blocks:

### R/D converter

The R/D conversion is done by a variable resolution, monolithic converter type 2S82 of Analog Devices. It accepts two signals from the Resolver (sine and cos.) and converts them into binary position data bits. The resolution of the position bits is user selectable 10, 12, 14 and 16 (only for standard encoder resolution). In addition, the R/D creates a signal that is proportional to the Resolver velocity. This signal is used as a velocity feedback.

### EPROM

The EPROM creates "Hall" signals by mapping the position data bits accepted from R/D into suitable Hall signals to operate a specific BLM. In addition, the encoder index (marker) signal is also produced from the EPROM. The EPROM is designated as follows:

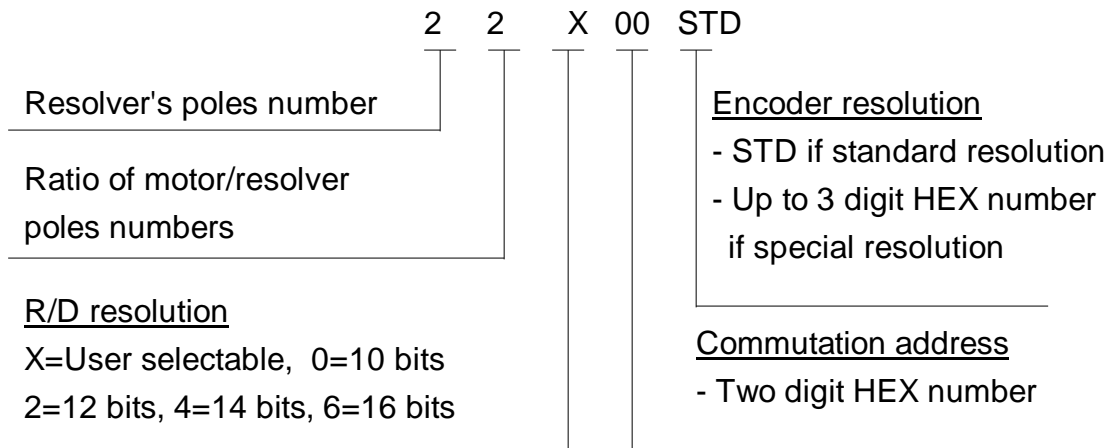

When the commutation address is 00, the zero crossing of phases B C occurs at position address "0" of the Resolver.

The EPROM is usually supplied without any programming and in such case the amplifier will have no commutation information.

### Oscillator

Creates sinusoidal waveform signal to excite the primary of the Resolver.

**Oscillator Frequency/Amplitude Selection (R228,R233)**

The frequency ( $f_r$ ) and amplitude ( $V_r$ ) needed to excite the Resolver are taken from the Resolver data sheet.

Selecting the frequency:

$$R228 = 110/f_r \quad (\text{Kohm})$$

$$0.1\text{KHz} < f_r \text{ (KHz)} < 20\text{KHz}$$

Selecting the amplitude:

Take care that the RMS amplitude does not exceed  $7V_{rms}$  or that the peak-to-peak (ptp) value is within the range of  $2V \leq V_{r_{ptp}} \leq 20V$ .

For  $V_r$  in peak-to-peak value:

$$R233 = 6/(V_r - 2) \quad (\text{Kohm})$$

For  $V_r$  in RMS value:

$$R233 = 6/(2.82V_r - 2) \quad (\text{Kohm})$$

Reference Voltage level to R/D (R192)

In order to adjust the reference voltage input level to  $2V_{rms}$ , select R192 as follows:

$$R192 = 50 \times (V_{r_{rms}} - 2) \quad (\text{Kohm})$$

For  $V_{r_{rms}} < 2V$ , install  $R192=100 \text{ ohm}$ .

Signal input level (R193,R194)

The R/D inputs ( $V_{in_{rms}}$ ) are adjusted to the sin/cos. Resolver outputs by:













































